

# Please read this guide first!

**Our valued customer,**

## Please read this manual before using the product.

Thank you for choosing an product. We want your product, which is produced with high quality and technology, to provide youwith the best performance. For this, read this manual and the other documents provided carefully before using the product.

Take into consideration all the information and warnings in the user manual. In this way, you will protect yourself and your product against possible dangers. Keep the user manual. If you give the product to someone else, give the user manual with it.

## The following symbols appear in the user manual and on the product:

### ANNOUNCEMENT



Hazard that could result in death or injury.

---

### ANNOUNCEMENT



Risk of electric shock!

---

### WARNING



Important information or helpful tips on usage.

---

### ATTENTION



Read the user manual.

---

### DANGER



Flammable material, warning of fire hazard.

---

### DANGER



Danger that may result in burns due to contact with hot surfaces.

---

# Safety Instructions

- This section contains safety instructions that will help prevent personal injury or property damage.
- Our company cannot be held responsible for any damages that may occur if these instructions are not followed.

## ANNOUNCEMENT



Always have installation and repairs carried out

---

## ANNOUNCEMENT



Use only original spare parts and accessories.

---

## ANNOUNCEMENT



Do not repair or replace any part of the product unless expressly stated in the user manual.

---

## ANNOUNCEMENT



Do not make technical changes to the product.

---

# Additional Information

- [Purpose of usage](#)
- [Child, Vulnerable Person and Pet Safety](#)
- [Electrical Safety](#)
- [Transport Security](#)
- [Installation Security](#)
- [Usage Safety](#)
- [Food Storage Safety](#)
- [Maintenance and Cleaning Safety](#)

# Purpose of usage

- This product is not suitable for commercial use and should not be used for purposes other than its intended use.
- This product is designed for use in indoor areas, homes and similar places.

For example;

In staff kitchens of stores, offices and other working environments,

In farmhouses,

In the environments used by customers of hotels, motels and other accommodation facilities,

In hostel type environments,

In food service and similar non-retail applications.

- The product should not be used on a boat, in a caravan, or in open or closed outdoor spaces such as balconies or terraces.  
Exposing the product to rain, snow, sun and wind may create a fire risk.

# Child, Vulnerable Person and Pet Safety

- This product can be used by children aged 8 and over and by persons whose physical, sensory or mental capabilities are not fully developed or who lack experience and knowledge, as long as they are supervised or trained about the safe use of the product and its risks.
- Children between the ages of 3 and 8 are allowed to load and unload the refrigerator.
- Electrical products are dangerous to children and pets. Children and pets should not play with, climb on, or climb into the product.
- Children and pets should be kept away from the cabin bottom (compressor) area where the electrical parts are located.
- Cleaning and user maintenance should not be carried out by children unless they are supervised.
- Keep packaging materials away from children. There is a risk of injury and suffocation.

# Electrical Safety

- The product should not be plugged into the socket during installation, maintenance, cleaning, repair and transportation operations.

If the power cable is damaged, it must be replaced in order to prevent possible dangers.

- Do not pinch the power cord under or behind the product. Do not place a heavy object on the power cord. The power cable should not be excessively bent, crushed or come into contact with any heat source.
- Do not use an extension cord, multiple socket or adapter to operate the product.
- Portable power strips or portable power supplies can overheat and cause a fire. For this reason, do not place multiple sockets or portable power sources behind or near the product.
- Do not plug the product into a loose or damaged socket. These types of connections may overheat and cause fire.
- The plug must be in an easily accessible place. If this is not possible, there must be a mechanism (fuse, switch, switch, etc.) on the electrical installation to which the product is connected, that complies with electrical regulations and separates all poles from the network.
- Do not touch the plug with wet hands.
- When unplugging, pull the plug, not the cable.

# Transport Security

- Before moving the product, unplug it from the socket.
- The product is heavy, do not carry it alone. If the product falls on you, it may cause injuries. Do not hit or drop the product while carrying it.
- When carrying the product, always close its doors and do not hold it by the doors.
- Be careful not to damage the cooling system and pipes during transportation of the product.

# Installation Security

- To make the product ready for use, make sure that the electrical and plumbing systems are suitable by referring to the information in the user manual. If the installation is not suitable, call a licensed electrician and plumber to make the necessary arrangements. Otherwise, electric shock, fire, product problems or injury may occur.
- This product is designed for use at altitudes up to 2000 meters above sea level.
- Before installing the product, check for any damage. If the product is damaged, do not install it!
- Be sure to use personal protective equipment (gloves, etc.) when performing product installation, maintenance and repair. Risk of injury!
- Place the product on a clean, flat and hard surface and balance it with the help of adjustable feet (by turning the front feet to the right or left). Otherwise, the refrigerator may tip over and cause injury.
- The place where the product will be installed must be a dry and ventilated place. There should be no carpets, rugs or similar covers under the product. There may be a risk of fire due to insufficient ventilation!
- Do not cover or block the ventilation holes. Otherwise, energy consumption will increase and damage to your product may occur.
- When placing the product, make sure that the supply cable is not damaged or pinched.
- The product should not be connected to power supply systems such as solar energy power sources. Otherwise, your product may be damaged due to sudden voltage changes!
- The more refrigerant a refrigerator contains, the larger the space it is installed in must be. In very small spaces, a flammable gas-air mixture may form if there is a gas leak in the cooling system. The volume of space required for every 8 grams of refrigerant is at least 1 m<sup>3</sup>. The amount of refrigerant in your product is stated on the Type Label.
- The place where the product is installed should not be exposed to direct sunlight and should not be exposed to stove, radiator etc. It should not be near a heat source such as If it cannot be avoided to install the product near the heat source, a suitable insulation plate must be used or the minimum distance to the heat source must be as follows:
  - At least 30 cm away from heat sources such as stove, oven, heating unit and stove,
  - At least 5 cm away from electric ovens.
- Your product is a protection class I device.
- Connect the product to a grounded socket suitable for the Voltage, Current and Frequency values specified on the type label. The socket must have a fuse rated at 10A – 16A. Our company will not be responsible for any damages that may occur if the product is used without grounding and electrical connection in accordance with local and national regulations.
- The product's power plug should not be plugged into the socket during installation. Otherwise there is a risk of electric shock and injury!
- Do not plug the product into sockets that are loose, out of socket, broken, dirty, oily, or at risk of contact with water. These types of connections may cause overheating and fire.
- Place the product power cable and hoses (if any) in a way that does not pose a tripping hazard.
- Moisture or liquid penetration into live parts or the power cord may cause a short circuit. Therefore, do not use the appliance in damp or water-splashed areas (e.g. garage, laundry room).
- Never connect your refrigerator to electricity saving devices. Such systems are harmful to the product.
- There is a risk of contact with electrical parts when the electronic card cover or the compressor rear cover (if present on the product) is removed. Do not remove the product's card cover or the compressor rear cover (if present on the product). There is a risk of electric shock!

# Usage Safety

- Never use chemical solvents on the product. These substances carry the risk of explosion.
  - In case of a malfunction in the product, unplug the product and do not operate it until it is repaired .There is a risk of electric shock!
  - Do not place flame sources (e.g. candles, cigarettes) on or near the product.
  - Do not stand on the product. Risk of falling and injury!
  - Do not damage the cooling system pipes using cutting or piercing tools. If gas pipes, pipe extensions or surface coatings are punctured, the refrigerant that will spray out will cause skin irritation and eye injuries.
  - Do not place or use electrical appliances inside the refrigerator/freezer unless recommended by the manufacturer.
  - Be careful not to get your hands or any part of your body caught in the moving parts inside the product. Be careful not to get your fingers caught between the door and the cabinet. Be careful when opening and closing the door if there are children around.
  - Never put ice creams, ice cubes and frozen foods into your mouth immediately after taking them out of the freezer. There is a risk of frostbite!
  - Do not touch the inside walls of the freezer, metal parts or products stored in the freezer with wet hands. There is a risk of freezer burn!
  - Do not place cans and bottles containing carbonated drinks or liquids that can freeze in the freezer compartment. The cans or bottles may explode. There is a risk of injury and material damage!
  - Do not use or place temperature-sensitive substances such as flammable sprays, flammable objects, dry ice or other chemicals near the refrigerator. There is a risk of fire or explosion!
  - Do not store explosive materials, such as aerosol cans containing flammable materials, inside your product.
  - Do not place containers containing liquid on the product with the top open. Splashing water on an electrical part may cause electric shock or fire hazard.
  - This product is not suitable for the storage and cooling of medicines, blood plasma, laboratory preparations or similar substances and products subject to the Medical Product Directive.
  - If the product is used for purposes other than its intended purpose, it may cause damage or deterioration of the products stored inside.
  - If your refrigerator has Blue light, do not look at this light with optical instruments. Do not look directly at the UV LED lamp for a long time. Ultraviolet rays may cause eye fatigue.
  - Do not fill the product beyond its capacity. Injuries or damage may occur if the contents of the refrigerator fall when the door is opened. Similar problems may occur when any object is placed on the product.
  - Be sure to clear away any ice or water that may have fallen onto the floor to avoid injury.
  - Replace the shelves/bottle shelves on the door of your refrigerator only when the shelves are empty. There is a risk of injury!
  - Do not place anything that might fall/overturn on the product. When opening and closing the door, items may fall and cause injury and/or property damage.
  - Do not strike or apply excessive force to glass surfaces. Breaking the glass may result in personal injury and/or property damage.
  - The cooling system in your product contains R600a gas. The type of gas used in the product is specified on the type label. This gas is flammable. Therefore, be careful not to damage the cooling system and pipes during use. In case of damage to the pipes;
1. Do not touch the product or the power cord.
  2. Keep the product away from potential fire sources that could cause it to catch fire.
  3. Ventilate the environment where the product is located. Do not use a fan.

If the product is damaged and you observe gas escaping, please stay away from the gas. If the gas comes into contact with your skin, it may cause frostbite.

Before throwing away old and unusable products:

1. Unplug the power plug and unplug it.
2. Cut the power cord and remove it from the device along with the plug.
3. To make it difficult for children to get inside the appliance, do not remove the shelves and drawers.
4. Remove the doors.



5. Keep the product in a way that it cannot tip over.
  6. Do not allow children to play with the worn product.
- Never destroy the product by throwing it into a fire. There is danger of explosion.
  - If there is a lock on the door of the product, the key should be kept out of reach of children.

# Food Storage Safety

To avoid food spoilage, please pay attention to the following warnings:

- Keeping the doors open for a long time may cause the temperature inside the product to rise.
- Clean food contact and accessible drain systems regularly.
- Clean water tanks that have not been used for 48 hours and mains-fed water systems that have not been used for more than 5 days.
- Store raw meat and fish products in appropriate compartments in the product so that they do not drip or come into contact with other foods.
- Two-star freezer compartments are used for storing pre-filled foods, making and storing ice and ice cream.
- One, two and three star compartments are not suitable for freezing fresh food.
- If the refrigerator product has been left empty for a long time, turn off the product, defrost it, clean it and dry it to protect the body of the product.

# Maintenance and Cleaning Safety

- Before cleaning or maintaining the refrigerator, unplug it and cut off the power from the fuse.
- If you are going to move the product for cleaning purposes, do not pull by the door handle. If the handle is pulled too hard, it may cause injury.
- Do not put your hands, feet or metal objects under or behind the refrigerator. It may cause personal injury due to pinching or any sharp edges.
- Do not clean the product by spraying or pouring water onto or into it. There is a risk of electric shock and fire.
- When cleaning the product, do not use sharp and abrasive tools or household cleaning products, detergents, gas, gasoline, thinner, alcohol, polish, etc. Use only cleaning and maintenance products that are not harmful to foodstuffs inside the product.
- Never use steam or steam-assisted cleaning materials to clean or defrost the product. Steam may come into contact with live parts of your refrigerator, causing a short circuit or electric shock.
- Do not use any mechanical tools or other devices other than those recommended by the manufacturer to speed up the defrosting process.
- Be careful not to allow water to enter the product's ventilation holes, electronic circuits or lighting. Otherwise, there is a risk of fire or electric shock.
- Use a clean, dry cloth to wipe any foreign matter or dust from the plug terminals. When cleaning the plug, do not use a wet or damp cloth. Otherwise, there is a risk of fire or electric shock.

# Environmental Instructions

## Additional Information

 
[Compliance with WEEE Regulation and Disposal of Waste Product](#)

[Packaging Information](#)

# Compliance with WEEE Regulation and Disposal of Waste Product

This product does not contain harmful and prohibited substances specified in the "Waste Electrical and Electronic Equipment Control Regulation" published by the Republic of Turkey Ministry of Environment and Urbanization.

**DANGER**



This product is manufactured with high quality parts and materials that can be recycled and reused. Therefore, do not dispose of the product with household or other waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic devices. Ask your local authorities about these collection points. Help protect the environment and natural resources by recycling used products.

---

# Packaging Information

 
## ANNOUNCEMENT



The packaging of the product is made of recyclable materials in accordance with our National Legislation. Do not dispose of packaging waste together with household or other waste, dispose of it at packaging collection points specified by the local authority.

---

# Your fridge

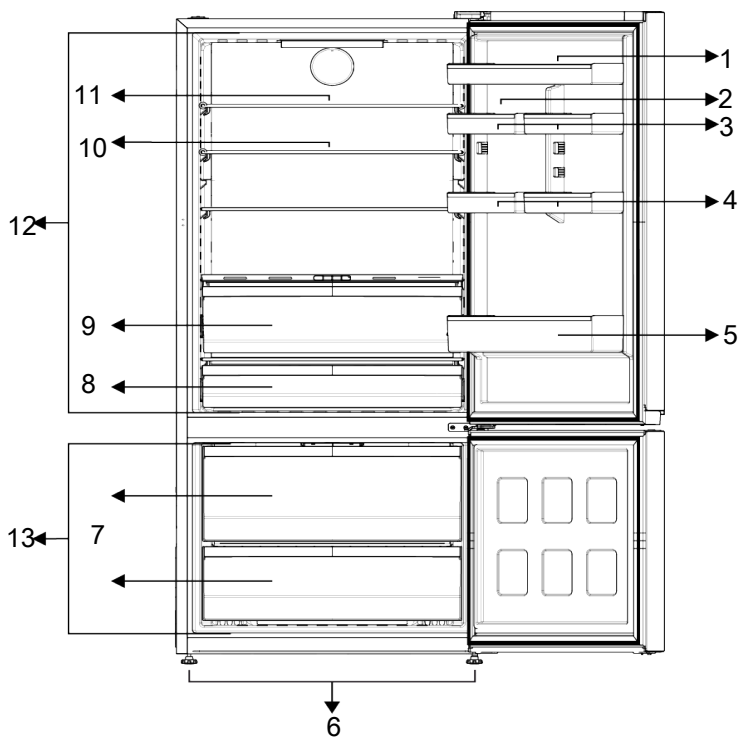

one	refrigerator compartment door shelves	2	Ovarian
3	*Fridge compartment small door shelves	4	*Fridge compartment small door shelves
5	Bottle rack	6	Adjustable feet
7	*Freezer compartment drawers	8	Dairy (cold storage) drawer/ Delicate freezing compartment
9	Vegetable Basket	10	*Glass shelves
11th	*Movable body glass shelf	12	Cooler compartment
13	freezer compartment		

**\*Optional:** The figures in this user manual are schematic and may not be exactly compatible with your product. If the product you purchased does not have the relevant parts, it is valid for other models.

# Setup

## The right place for installation

### ANNOUNCEMENT



Read the “Safety Instructions” section first!.

In order for the product to operate efficiently, there must be adequate air circulation around it. If the product is to be placed in a recessed area in the wall, make sure that there is at least 5 cm of space between the ceiling and the side walls. Check that the rear wall spacer (if provided) is in place with the product. If the part is missing, lost or falls, position the product so that there is at least 5 cm of space between the rear surface of the product and the room wall. The space behind is important for the efficient operation of the product.

### ANNOUNCEMENT



Do not connect with extension cords or multiple sockets

### ANNOUNCEMENT



The manufacturer is not responsible for any damage that may be caused by operations carried out by unauthorized persons.

### WARNING



The product must not be plugged into a power outlet during installation. Otherwise, there is a risk of death or serious injury!

### ANNOUNCEMENT



If the doorway of the room where the product will be placed is too narrow for the product to pass through, remove the door of the room and turn the product on its side.

 
- Place the product on a flat surface to avoid shocks.
- Install the product at least 30 cm away from heat sources such as hobs, radiators and stoves, and at least 5 cm away from electric ovens.
- Do not expose the product to direct sunlight and do not keep it in a damp place.

## Installing plastic wedges


Plastic wedges included in the product are used to maintain the distance between the product and the wall to ensure air circulation.

- Remove the screws on the product and install the screws provided with the plastic wedges.




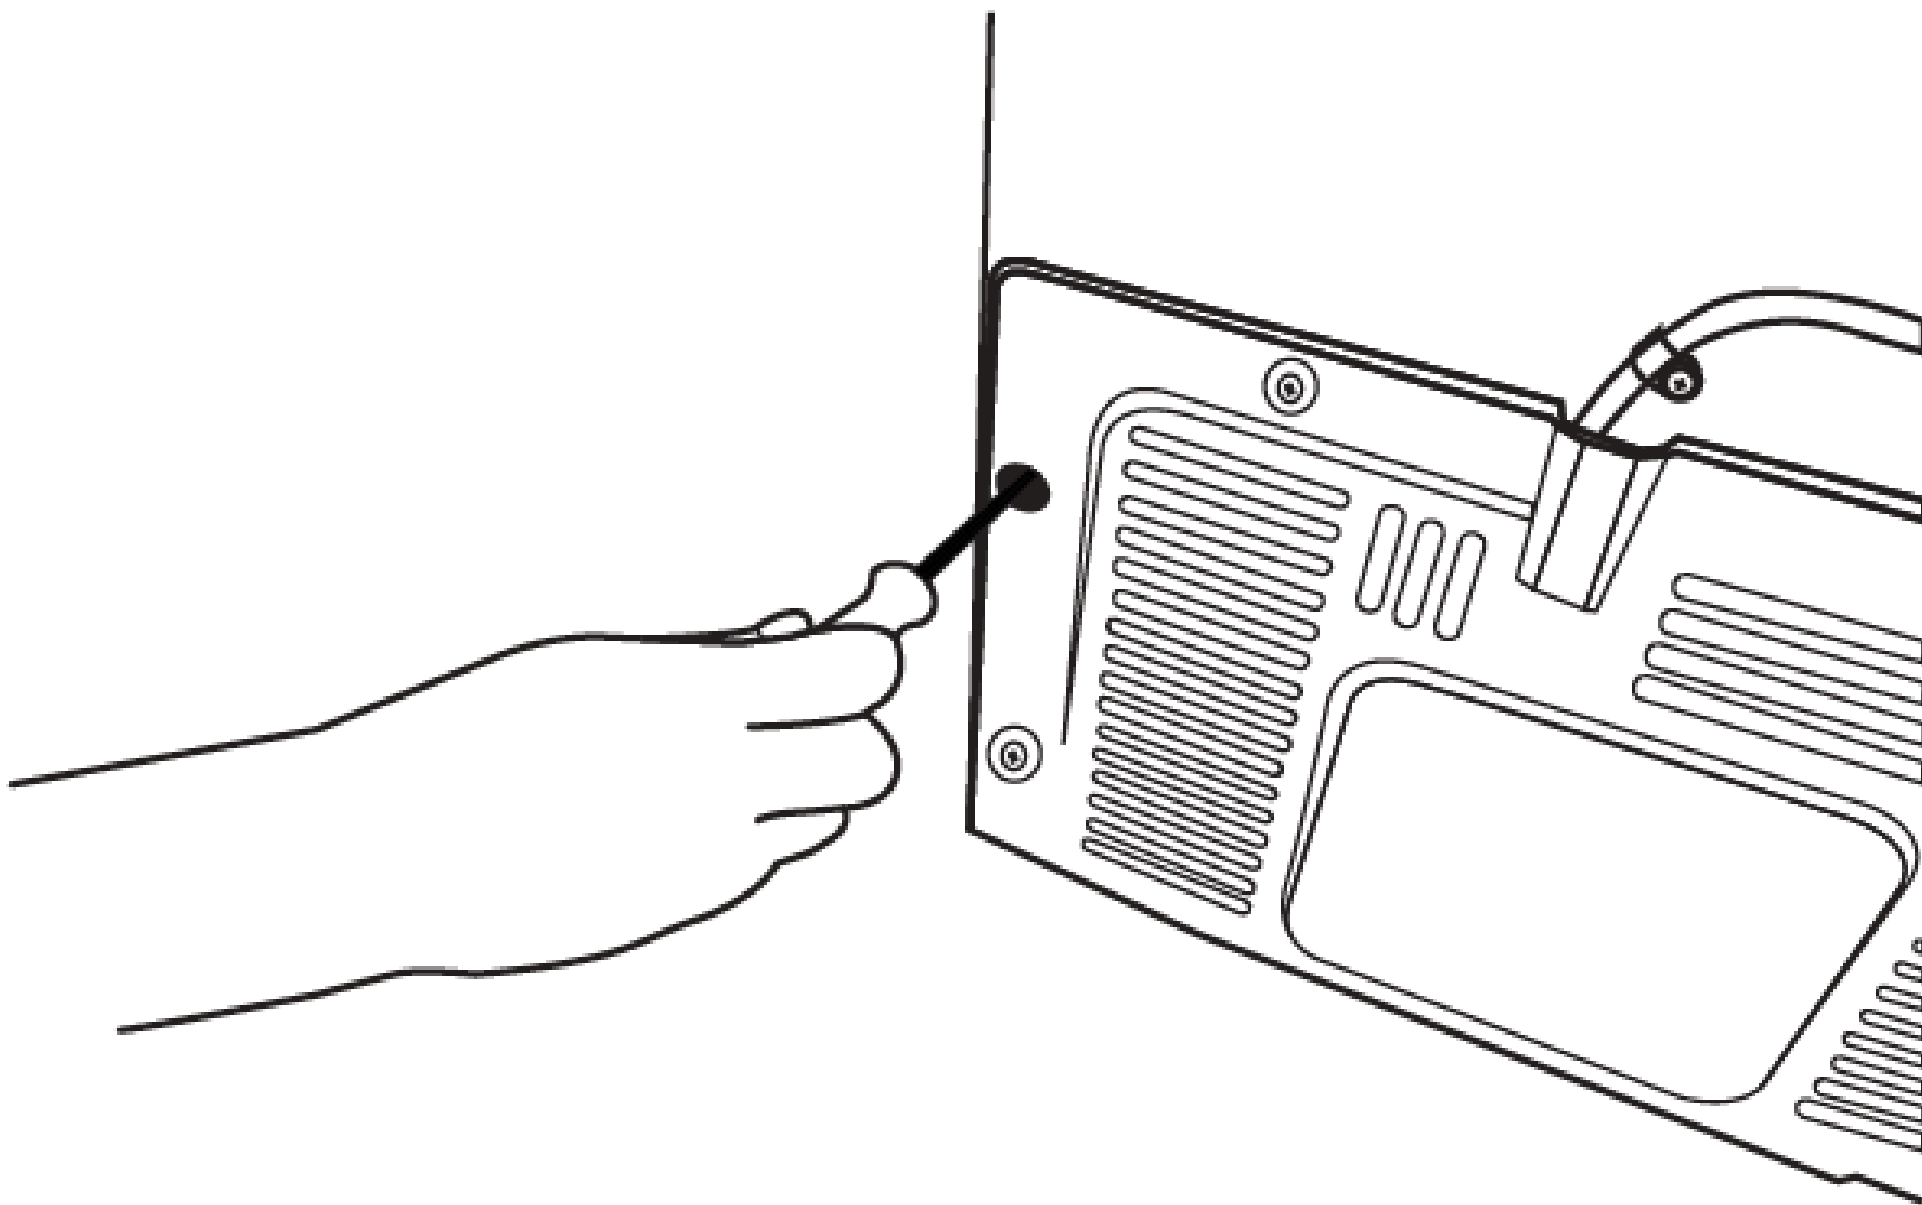


 - Attach the 2 plastic wedges to the rear ventilation cover as shown in the figure.

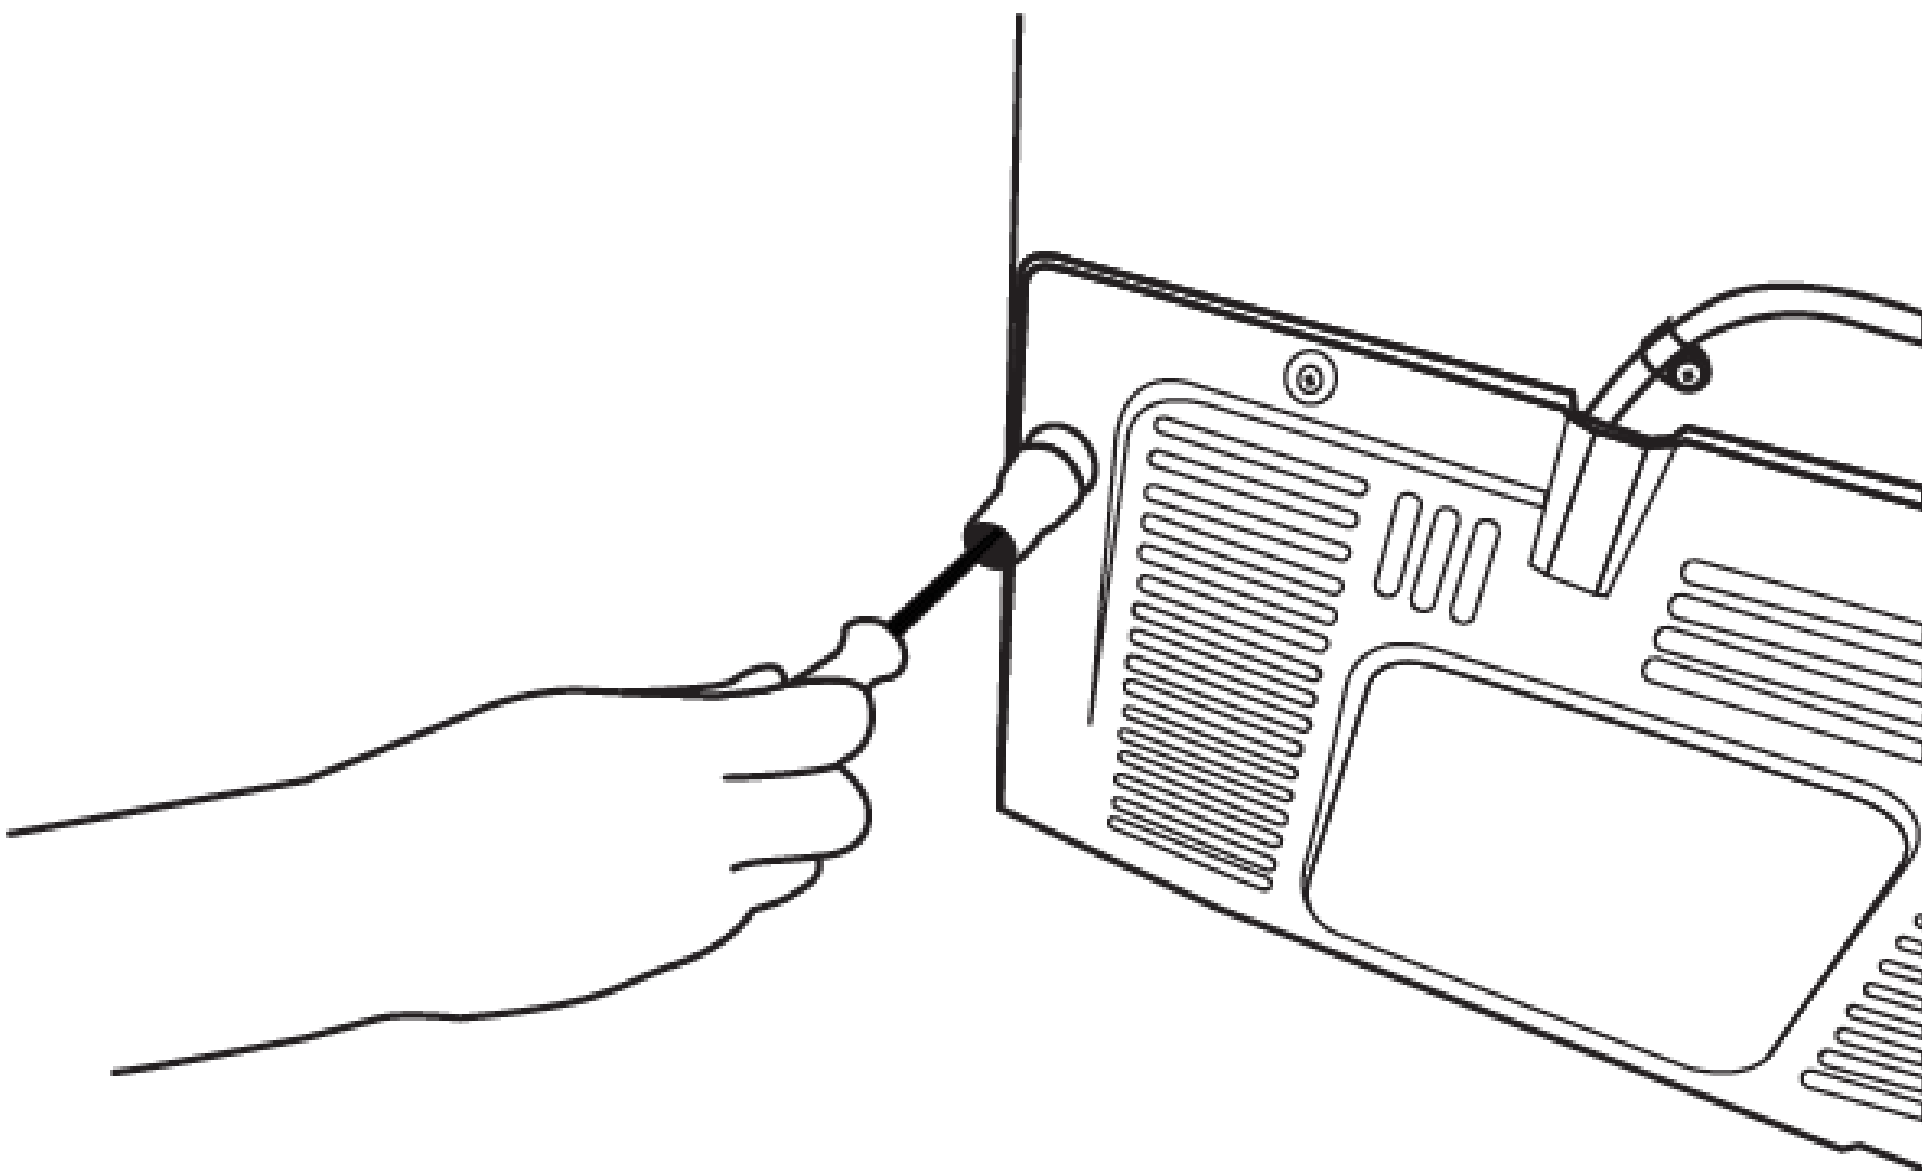

## Adjusting the feet

  If the product is unstable where you place it, you can adjust the balance of the product by turning the front legs to the right or left.

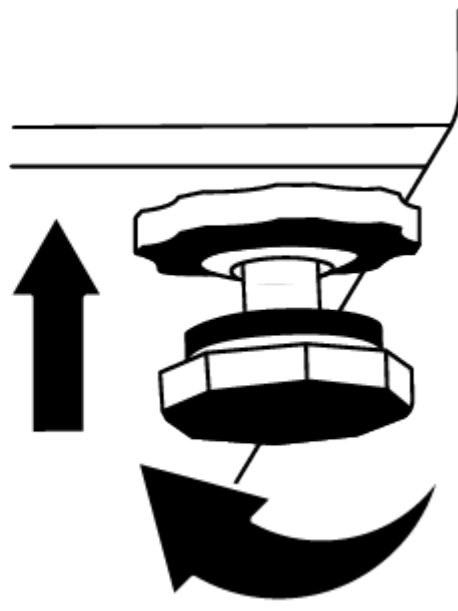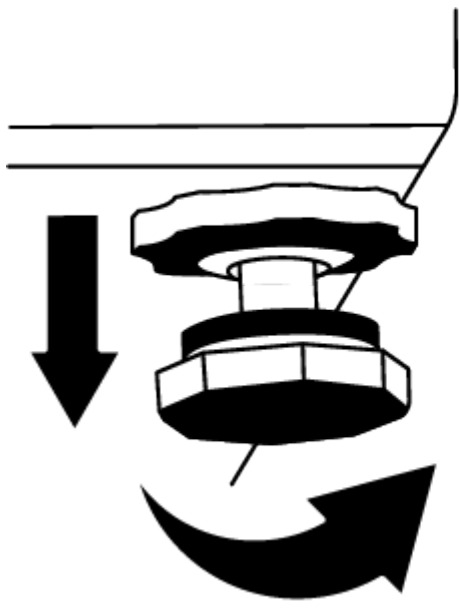

# Additional Information

[Electrical connection](#)

# Electrical connection

## ANNOUNCEMENT



**WARNING:** Do not connect using extension cords or multiple sockets.

---

## ANNOUNCEMENT



**WARNING:** Damaged power cable must be replaced .

---

- Our company will not be responsible for any damages that may occur if the product is used without grounding and electrical connection in accordance with national regulations.
- The power cord plug must be easily accessible after installation.

## ANNOUNCEMENT



Hot surface warning!

The side walls of your product are equipped with refrigerant pipes to improve the cooling system. High temperature fluid may flow through these surfaces and cause hot surfaces on the side walls. This is a normal condition and does not require any service. Be careful when touching these areas.

---

# Preliminary

## WARNING



Read the “Safety Instructions” section first!

---

## Additional Information

[What to Do to Save Energy.](#)

[First Use](#)

[Climate Class and Its Meanings](#)

# What to Do to Save Energy

## WARNING



Connecting the product to electronic energy saving systems is dangerous as it may damage the product.

---

- This cooling device is not designed to be used as a built-in appliance.
- Do not keep the doors of your refrigerator open for a long time.
- Do not put hot food or drinks in your refrigerator.
- Do not overfill the refrigerator, cooling capacity decreases when the air flow inside is blocked.
- When the doors of your product are not opened, your product optimizes itself in conditions that will be sufficient to protect your food, since hot and humid air will not enter directly. Under these conditions, the compressor, fan, heater, defrost, lighting, display and other components and functions on the product operate in a way that consumes the least amount of energy according to the needs.
- In case of multiple options, glass shelves should be positioned so that they do not block the air outlets on the rear wall, preferably with the air outlets under the glass shelf. This combination can help improve air distribution and energy efficiency.
- It is highly recommended to use the bottom drawer when loading.
- To save energy and preserve food in a better environment, food should be stored using drawers in the refrigerator compartment.

# First Use

Before you start using your refrigerator, make sure that preparations are made in accordance with the instructions in the "Safety and Environmental Instructions" and "Installation" sections.

- Let the product run empty for 6 hours without any food and do not open the door unless absolutely necessary.
- It is normal for condensation to occur on the door/body shelves and the glassware placed inside the product as a result of thermal changes caused by opening and closing the product door during use.

## ANNOUNCEMENT



You will hear a sound when the compressor starts working. It is normal for the product to make noise even if the compressor is not working, as liquid and gas may be trapped in the cooling system.

## ANNOUNCEMENT



It is normal for the front edges of the refrigerator to be warm. These areas are designed to be heated to prevent condensation.

## ANNOUNCEMENT



In some models, the instrument panel turns off automatically 1 minute after the door is closed. It will be activated again when the door is opened or any button is pressed.

# Climate Class and Its Meanings

Please refer to the Climate Class on the rating plate of your device. Depending on the Climate Class, one of the following information applies to your device.

- **SN:** Long-Term Temperate Climate: This cooling device is designed for use in ambient temperatures between 10°C and 32°C.
- **N:** Temperate Climate: This cooling device is designed for use in ambient temperatures between 16°C and 32°C.
- **ST:** Subtropical Climate: This cooling device is designed for use in ambient temperatures between 16°C and 38°C.
- **T:** Tropical Climate: This cooling device is designed for use in ambient temperatures between 16°C and 43°C.

# Operating the Product

## ANNOUNCEMENT



Read the “Safety Instructions” section first!

---

 
- Do not use any mechanical tools or other devices other than those recommended by the manufacturer to speed up the defrosting process.
- Never use parts such as doors and drawers on your refrigerator as support or steps. This may cause the product to tip over or damage its parts.
- The product should only be used for food storage.
- If you will be away from home for a long time (for example, on vacation) and will not use the Icemaker or water dispenser, turn off the water valve. Otherwise, water leakage may occur.

## Closing the product

- If you are not going to use the product for a long time, unplug the product.
- Remove foods to prevent odor,
- Wait for the ice to melt, clean the interior and let it dry, leave the doors open to prevent damage to the interior body plastics.



# Control Panel of the product

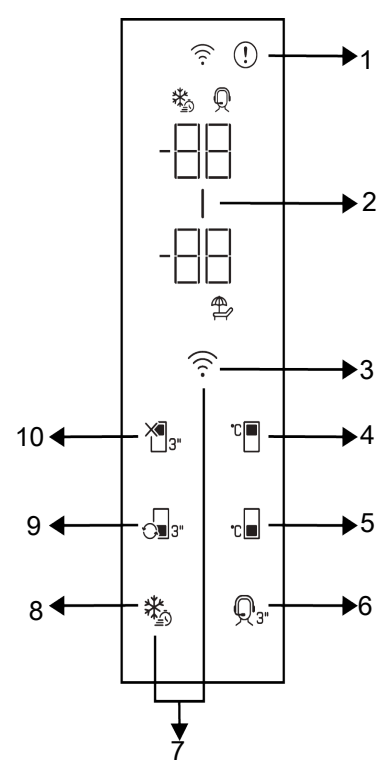

one	Error Status Indicator	2	Energy Saving (Screen Off) Indicator
3	*Wireless Key	4	Cooler Compartment Temperature Setting Key
5	Freezer Compartment Temperature Setting Key	6	*Support Service Key
7	Wireless Connection Settings Reset Button	8	*Fast Freeze Key/Handle Light Function Setting Key
9	*Cabin Conversion Key	10	Fridge Compartment Closing (Holiday) Function Button

## ANNOUNCEMENT



Read the “Safety Instructions” section first.

\*Optional: The functions shown are optional, the functions on the display panel of your product may differ in terms of shape and location.

Audio and visual functions on the display panel help you use your refrigerator.

## 1.Error Status Indicator❗

This indicator will be active when the refrigerator cannot cool sufficiently or if any sensor error occurs. The letter "E" will appear on the freezer compartment temperature indicator, and numbers such as 1,2,3.. will appear on the refrigerator compartment temperature indicator. These numbers on the display inform the service about the error that occurred.

When you load hot food into the freezer compartment or leave the door open for a long time, the exclamation mark may light up for a while. This is not a malfunction, this warning will disappear when the food cools down or any button is pressed.

## 2.Energy Saving (Screen Off) Indicator

When the product doors are not opened or closed, energy saving is automatically activated and the energy saving icon lights up. When the energy saving function is activated, all icons on the screen except the energy saving icon go off. If any button is pressed or the door is opened while the energy saving function is active, the energy saving function is exited and the icons on the screen return to normal. The energy saving function is an active function from the factory and cannot be cancelled.

## 3.\*Wireless Button📶

When the button is pressed for a long time (3 seconds), the wireless connection icon on the screen/display flashes slowly (at 0.5 second intervals). This is how the first introduction of the home network to the product begins.

After a wireless connection is established with the product, the wireless connection icon lights up continuously.

After completing the initial setup, the connection can be activated/deactivated by pressing this button. The wireless connection icon blinks quickly (at 0.2 second intervals) until the connection is established. The wireless network icon is solidly lit when the connection is active.

If the connection is not established for a long time, check your connection settings and refer to the 'Troubleshooting' section in the user manual.

HomeWhiz application should be used for wireless connection. Installation steps are explained through the application during installation.

## 4. Cooler Compartment Temperature Setting Key

Temperature adjustment is made for the refrigerator compartment. By pressing the button, the refrigerator compartment temperature can be set to 8,7,6,5,4,3,2 and 1 °C.

## 5. Freezer Compartment Temperature Setting Key

The temperature setting for the freezer compartment is made. When the button is pressed, the freezer compartment temperature is -18,-

It can be adjusted to 19,-20,-21,-22,-23,-24 °C.

## 6.\*Support Service Button

To activate/deactivate the support service, press this button for 3 seconds. Detailed information on the use of the support service is available in the "Support Service Feature" section.

## 7.Wireless Connection Settings Reset Button

To reset the wireless connection settings, press the Quick Freeze and Wireless connection buttons simultaneously for 3 seconds. All previously installed user information on the product whose wireless connection settings are reset/returned to factory settings is forgotten.

## 8.\*Fast Freezing Button

When the fast freezing button is pressed, the LED above the button turns on and the fast freezing function is activated. The freezer compartment temperature is set to -27 Celsius. To cancel the function, the button must be pressed again. The quick freeze function cancels itself automatically. If you want to freeze a large amount of fresh food, press the quick freeze button before putting the food in the freezer compartment.

## \*Stem Light Function Setting Button

The handle light function can be switched between on and off mode by pressing the fast freeze button for 3 seconds. In off mode, the handle light is only activated when the product door is opened and goes off after a certain period of time after the door is closed. In on mode, the handle light is activated when the product door is open, and the handle light continues to light dimly and continuously after a certain period of time after the door is closed. The handle light function is set to off mode as factory default.

## 9.\*Cabin Conversion Key

When the cabin conversion button is pressed for 3 seconds, the freezer compartment turns into cooler, closed and closed respectively. cycles between freezer modes.

When it works as a refrigerator compartment, the temperature of the compartment is set at 4 °C. In off mode, “- -” will be displayed on the cabin temperature display.

## 10. Cooler Compartment Closing (Holiday) Function Key

To activate the holiday function, press the button for 3 seconds. Holiday mode is activated and the holiday icon lights up. The phrase "- -" appears on the refrigerator compartment temperature indicator and the refrigerator compartment does not perform active cooling.

When this function is activated, it is not appropriate to keep your food in the refrigerator compartment. Other compartments continue to cool according to the temperatures they are set to. To cancel this function, press the button again for 3 seconds.

# Using the Product

## ANNOUNCEMENT



Read the “Safety Instructions” section first!

---

## Additional Information

[Food Storage in the Freezer and Cooler Compartment](#)

[Changing the Lighting Lamp](#)

[Door Open Warning](#)

[Change of Door Opening Direction](#)

# Food Storage in the Freezer and Cooler Compartment

## Storing food in the freezer compartment

- You can cool faster by activating the Fast Freeze function 4-6 hours before freezing.
- Bring hot meals to room temperature before placing them in the freezer compartment.
- Foods to be frozen should be divided into portions large enough to be consumed each time and frozen in separate packages.
- It is recommended that you pack food before putting it in the freezer.
- To prevent the storage period from exceeding, write the freezing date, duration and name of the food on the package according to the storage periods of different foods.
- Eat defrosted foods quickly. Defrosted foods cannot be refrozen unless cooked. It is not safe to eat fresh foods that have been defrosted and refrozen without cooking them.
- When freezing fresh food, do not allow it to come into contact with already frozen food. Otherwise, the frozen food will defrost.

## Storing frozen foods

- Always follow the manufacturer's instructions regarding the length of time you should store food. Do not exceed the time stated in these instructions!
- To maintain the quality of food, try to keep the time between purchase and storage as short as possible.
- Buy frozen foods that are stored at –18°C or below.
- Ice etc. in its packaging. Avoid taking foods that are This means the product may have partially thawed and then been frozen again. Temperature affects the quality of food.
- Do not exceed the storage time recommended by the food manufacturer. Remove only the amount of food you need from the freezer.
- Except when there are extreme conditions in the environment, if your product is set to the set values specified (in the recommended set value table), food will remain fresh for a longer time in both the fresh food compartment and the freezer compartment.
- If the fresh food compartment is set to a lower temperature, fresh fruits and vegetables may become partially frozen.

## Recommended set value table

Freezer Compartment Setting	Refrigerator Compartment Setting	Descriptions
-18°C	4°C	This is the normal recommended setting. This setting is recommended if the ambient temperature is below 30°C.
-20,-22 or -24°C	4°C	These settings are recommended when the ambient temperature exceeds 30°C.
Fast Freeze	4°C	Use when you want to freeze your food in a short time. Once the process is over, your product will return to its previous position.
-18°C or colder	2°C	If you think your refrigerator compartment is not cold enough due to hot weather or frequent opening and closing of the door, use these settings.

## Fast freezing

1. Activate the fast freezing function 24 hours before loading the fresh food you will freeze.
2. 24 hours after pressing the button, place the food you want to freeze on the second shelf, which has a higher freezing capacity.

3. The fast freezing function will automatically be cancelled 48 hours after it is activated.

## Deep freezer information

According to IEC 62552 standards, for every 100 liters of freezer compartment volume, the product must be able to freeze 4.5 kg of food at 25°C room temperature at -18°C or lower in 24 hours.

Gıda maddelerinin uzun süre korunması ancak -18°C ve daha düşük sıcaklıkta mümkündür.

Gıda maddelerinin tazeliğini (derin dondurucuda -18°C ve daha düşük sıcaklıklarda) aylarca koruyabilirsiniz.

Dondurulacak gıda maddeleri daha önce dondurulan yiyeceklerin kısmen çözülmelerini önlemek için onlarla temas ettirilmemelidir.

Sebzelerin dondurulmuş halde depolama sürelerini uzatmak için haşlayın ve suyunu süzün. Süzdükten sonra hava geçirmeyen ambalajlara koyun ve dondurucuya yerleştirin. Muz, domates, marul, kereviz, haşlanmış yumurta, patates vb. besinler dondurulmaya uygun değildir. Bu besinlerin dondurulması durumunda sadece besin değerleri ve yeme kaliteleri olumsuz etkilenecektir. İnsan sağlığını tehdit eden bir bozulma söz konusu değildir.

## Gıdaların yerleştirilmesi

**Dondurucu bölme rafları:**Et, balık, dondurma,sebze vb. gibi farklı donmuş gıdalar.

**Soğutucu bölme rafları:**Tencere, kapalı tabak ve kapalı kaplardaki gıdalar, yumurta (kapalı kapta)

**Soğutucu bölme kapı rafları:**Küçük ve paketlenmiş gıda ya da içecekler

**Sebzelik:**Sebzeler ve meyveler

**Taze gıda bölmesi:**Şarküteri ürünleri (kahvaltılık ürünler ,kısa sürede tüketilecek et ürünleri)

## Soğutucu bölmede gıda saklama

- Bölme kapısının sıklıkla açılıp kapatılması ve uzun süre açık bırakılması durumunda bölme sıcaklıkları belirgin şekilde yükselir bu da gıda ömrünü azaltarak yiyeceklerin bozulmasına neden olabilir.
- Koku ve tat değişikliği olmaması için, yiyecekler kapalı kaplar içerisinde saklanmalıdır.
- Buzdolabınızda çok fazla yiyecek saklamayın. Daha iyi ve homojen bir soğutma elde etmek için, yiyecekleri aralarında soğuk havanın dolaşabileceği şekilde aralıklı yerleştirin.
- Yiyecekler ile iç duvar arasında boşluk bırakarak hava akışı sağlayın. Yiyecekleri arka duvara dayamanız halinde bu yiyecekler donabilir.
- Piştirilmiş sıcak yemekleri buzdolabına yerleştirmeden önce oda sıcaklığına getirin. Ardından, ılıyan yemeği buzdolabınızın alt raflarına yerleştirebilirsiniz. Ilık yemekleri, kolayca bozulabilen gıdaların yakınına yerleştirmeyin.
- Donmuş gıdalarınızın buzunu taze gıda bölmesinde çözün. Böylelikle, donmuş gıdayı kullanarak taze gıda bölmesini soğutabilir, enerjiden tasarruf edebilirsiniz.
- Olgunlaşmamış tropikal meyvelerin (mango, kavun türleri, papaya, muz, ananas) buzdolabında saklanması olgunlaşma sürecini hızlandırabilir. Bu da daha kısa saklama süresi anlamına geleceği için tavsiye edilmez.
- Soğan, sarımsak, zencefil ve diğer kök sebzeleri buzdolabında değil, karanlık ve serin oda koşullarında saklamalısınız.
- Buzdolabının içinde bir yiyeceğin bozulduğunu fark ederseniz o yiyeceği atın ve bu yiyeceğin temas ettiği aksesuarları temizleyin.
- Çorba ve sulu yemek gibi büyük tencerede pişen yemekleri hızlıca soğutmak için derin olmayan kaplara bölüp buzdolabına koyabilirsiniz.
- Paketsiz gıdaları yumurtaların yakınına koymayın.
- Keep fruits and vegetables separate from each other and store each type together (for example, apples with apples, carrots with carrots).
- Remove greens from plastic bags, wrap them in paper towels or tea towels, and place them in the refrigerator. If you wash these foods before storing them in the refrigerator, be sure to dry them.
- By storing fruits and vegetables that are prone to drying in perforated or open plastic bags, you can create a humid environment and allow air flow.
- Except when there are extreme conditions in the environment, if your product is set to the set values specified (in the recommended set value table), food will remain fresh for longer in both the fresh food compartment and the freezer compartment.

Store different foods in different places according to their characteristics.

food	Location
Egg	Door shelf
Dairy products (butter, cheese)	Zero degree (breakfast) compartment, if any
Fruits, vegetables and greens	Fruit and vegetable compartment, vegetable bin or EverFresh+ compartment (if available)
Fresh meat, poultry, fish, sausage derivatives Cooked foods	Zero degree (breakfast) compartment, if any
Ready-to-eat foods, packaged products, canned goods and pickles	Top shelves or door shelf
Beverages, bottles, condiments and snacks	Door shelf

# Changing the Lighting Lamp

When the Bulb/LED used for illumination in your refrigerator needs to be replaced.

The lamp(s) used in this appliance cannot be used for lighting purposes at home. The purpose of this lamp is to assist the user in placing food in the refrigerator / freezer safely and comfortably.



# Door Open Warning

Your refrigerator's door open alarm system may vary depending on the model.

## Version 1;

If the door of the product remains open for a certain period of time (between 60 seconds and 120 seconds), an audible warning will be heard, and depending on the product model, a visual warning (lighting flashing) may also be given. When you close the door of the product or press any button on the product screen, if available, the warning sound will stop.

## Version 2;

If the door of the product remains open for a certain period of time (between 60 seconds and 120 seconds), a door open warning starts to be given. The door open warning is given gradually. First, an audible warning starts to sound. If the product door is not closed after 4 minutes, a visual warning (light flashing) is activated. If any button on the product screen is pressed, the door open warning will be delayed for a certain period of time (between 60 seconds and 120 seconds). Afterwards, the process will start again. When the product door is closed, the door open warning will be canceled.

# Product Features

## Additional Information

[Vegetable Technologies](#)

[Ice Storage Area](#)

[Ovarian](#)

[Vegetable Basket](#)

[AeroFresh](#)

[Humidity Controlled Vegetable Rack](#)

# Vegetable Technologies

## Blue light

Fruits and vegetables stored in crispers illuminated with blue light preserve their vitamin C values by continuing to photosynthesize with the wavelength effect of blue light.

## VitaminZone

Fruits and vegetables stored in vegetable bins illuminated with VitaminZone technology preserve their vitamin values for longer thanks to blue, green, red lights and dark cycles that simulate the day cycle.

If the refrigerator door is opened during the dark period of VitaminZone technology, your refrigerator will automatically detect this and illuminate your crisper for comfortable use with one of the blue, green or red lights. The dark period will continue when you close the refrigerator door, representing the night period in the day cycle.

 
# Ice Storage Area

## Ice Tray

The ice container allows you to easily take ice from the product.

### Using the ice container

1. Remove the ice container from the freezer compartment.
2. Fill the ice tray with water.
3. Place the ice container in the freezer compartment. After about two hours the ice is ready.
4. Remove the ice tray from the freezer compartment and gently bend it over the tray in which you will serve the ice. The ice will easily fall into the tray.

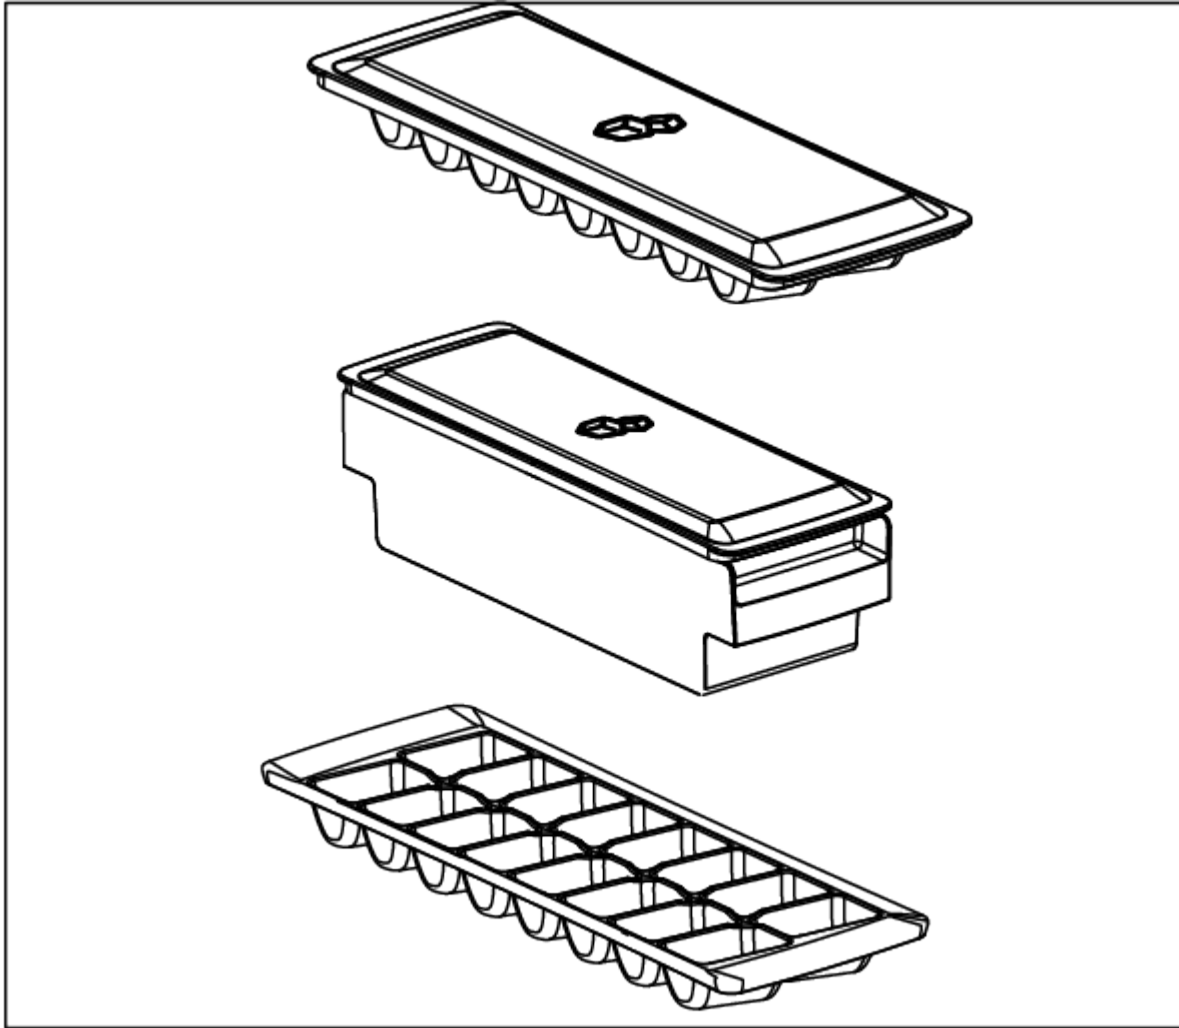

# Ovarian

You can place the egg holder on any door or trunk shelf you want.

If it is to be placed on the body shelf, it is recommended to choose the cooler lower shelves.

## ANNOUNCEMENT



**Never place the egg cup in the freezer compartment.**

---

# Vegetable Basket

The crisper of the refrigerator is designed specifically to keep vegetables fresh without losing their moisture. For this purpose, cold air circulation is intensified throughout the crisper. Store your vegetables and fruits in this compartment. Do not place green leafy vegetables side by side with fruits to store them for a longer period.

# AeroFresh

It is an air distribution system that provides homogeneous temperature distribution. Thanks to this air circulation, homogeneous temperature distribution is achieved within the fresh food storage compartment, while temperature fluctuations are kept at low levels. Air is not blown directly onto the food and helps reduce moisture loss. It preserves the freshness of foods stored in the fresh food compartment of the refrigerator. In this way, your food is stored at more stable temperatures and its contact with air is reduced. Foods are prevented from losing moisture and drying and shrinking, ensuring freshness for a longer period of time.

# Humidity Controlled Vegetable Rack

## Full fresh+

With the humidity-controlled crisper feature, you can store vegetables and fruits for longer in an environment where ideal humidity conditions are provided.

Thanks to the 3-option humidity adjustment system on the front of the crisper, you can control the humidity inside according to the type of food you store. We recommend that you store your foods by selecting the vegetable option when storing only vegetables, the fruit option when storing only fruit, and the mixed option when storing mixed foods.

In order to see the positive effect of the humidity control system and to increase the storage time of foods, we recommend that you do not store your vegetables and fruits in bags. Leaving vegetables in bags will cause them to rot in a short time. We especially recommend that cucumbers and broccoli not be stored in closed bags. In cases where contact with other vegetables is not preferred for hygiene reasons, a paper bag with a certain porosity, etc. should be used instead of plastic bags. Use packaging materials.

While placing the vegetables, take into account the specific gravity of the vegetables and position the heavy and hard vegetables at the bottom and the light and soft vegetables at the top.

Do not place fruits such as apples, pears, apricots, and peaches, which produce high levels of ethylene gas, in the same vegetable bin with other fruits and vegetables. The ethylene gas released from these fruits can cause your other fruits and vegetables to ripen faster and rot more quickly.



# Maintenance and Cleaning

## ANNOUNCEMENT



**WARNING:**

Read the “Safety Instructions” section first.

---

## ANNOUNCEMENT



**WARNING:**

Before cleaning your refrigerator, unplug it or disconnect the power from the fuse to which the product is connected.

---

- Do not use sharp or abrasive tools when cleaning the product. Do not use household cleaning products, soap, detergent, gas, gasoline, thinner, alcohol, polish, etc.
- The ventilation grille on the back of the product should be dusted (without opening the cover) at least once a year. Clean the product with a dry cloth.
- Be careful not to allow water to enter the lamp housing and other electrical parts.
- Clean the door with a damp cloth. To remove the door and body shelves, remove all the contents. Remove the door shelves by lifting them upwards. After cleaning and drying, replace them by sliding them from top to bottom.
- Never use water or cleaning agents containing chlorine to clean the outer surface of the product and chrome-plated parts. Chlorine causes rust on such metal surfaces.
- In order to prevent the pressure on the plastic part from being removed and deformed, do not use sharp, abrasive tools, soap, household cleaners, detergent, gas, gasoline, polish, etc. Do not use substances. For cleaning, use a soft cloth with warm water and dry.
- In products without No Frost, water droplets and frost up to one finger thick form on the back wall of the refrigerator compartment. Do not clean, never apply oil or similar substances.
- When cleaning the outer surface of the product, use only a slightly damp microfiber cloth. Sponges and other types of cleaning cloths may cause scratches.
- To clean the interior of the product, wash all removable parts with a mild solution of soap, water and baking soda. Wash and dry completely. Prevent water from reaching the lights and control panel.

## ANNOUNCEMENT



**ATTENTION:**

Do not use vinegar, rubbing alcohol or other alcohol-based cleaners on any interior surfaces.

---

# Stainless Steel External Surfaces

Use a non-abrasive stainless steel cleaner and apply with a soft, lint-free cloth. To polish, gently wipe the surface with a microfiber cloth dampened with water and use a dry polishing chamois. Always follow the grain of the stainless steel.

# Preventing Bad Odors

No substances that will cause odor are used in the production of your product. However, odor may occur due to improper food storage and not cleaning the inner surface of the product properly.

- To prevent this problem, clean it with carbonated water every 15 days.
- Store food in closed containers as microorganisms spread from foods stored openly will cause bad odors.
- Never store expired or spoiled foods in your refrigerator.

ANNOUNCEMENT



Tea is one of the best known odorants. Place the tea pulp you brewed in an open container inside the product and remove it after 12 hours at the latest. If you keep the tea pulp in the product for more than 12 hours, it can become the source of the odor as it will collect the organisms that cause the odor.

---

Protection of Plastic Surfaces

If oil is spilled on plastic surfaces, clean it immediately with warm water as the oil may damage the surface.

# Troubleshooting

## The refrigerator does not work.

- The plug is not fully seated in the socket. >>> Insert the plug into the socket until it fits fully.
- The fuse of the socket to which the product is connected or the main fuse has blown. >>> Check the fuse.

## Condensation on the side wall of the refrigerator compartment (MULTI ZONE, COOL CONTROL and FLEXI ZONE).

- The door was opened and closed too frequently. >>> Be careful not to open and close the door of the product too frequently.
- The environment is very humid. >>> Do not install the product in very humid environments.
- Foods containing liquid may be stored in open containers. >>> Store foods containing liquid in closed containers.
- The door of the product remained open. >>> Do not keep the door of the product open for a long time.
- The thermostat is set to a too cold setting. >>> Adjust the thermostat to the appropriate setting.

## Compressor is not working.

- In the event of a sudden power outage or unplugging and plugging in, the compressor protective thermic will blow out because the pressure of the gas in the product cooling system has not yet been balanced. The product will start working after approximately 6 minutes.
- It is in the defrosting cycle. >>> This is normal for a product that performs fully automatic defrosting. The defrosting cycle occurs periodically.
- The product is not plugged into the socket. >>> Make sure the plug is plugged into the socket.
- Temperature settings are not set correctly. >>> Select appropriate temperature setting.
- The power has been cut. >>> When power is restored, the product will continue to operate normally.

## The operating noise increases while the refrigerator is operating.

- The operating performance of the product may change depending on the change in ambient temperature. This is normal and not a malfunction.

## The refrigerator runs too often or for too long.

- The new product may be larger than the old one. Larger products run longer.
- The room temperature may be high. >>> It is normal for it to work longer in hot environments.
- The product may have been plugged in recently or new food may have been added. >>> When the product is plugged in recently or new food is added, it takes longer for the product to reach the set temperature. This is normal.
- Large quantities of hot food may have been placed in the product recently. >>> Do not put hot food in the product.
- Doors were opened frequently or remained open for long periods of time. >>> Hot air entering causes the product to work longer. Do not open the doors too often.
- The freezer or refrigerator door may be ajar. >>> Check if the doors are completely closed.
- The product is set at too low a temperature. >>> Set the temperature of the product to a higher degree and wait for it to reach this temperature.

- Soğutucu ya da dondurucu kapı contası kirlenmiş, eskimiş, kırılmış ya da tam oturmamış olabilir. >>> Contayı temizleyin ya da değiştirin. Hasarlı / kopuk kapı contası ürünün mevcut sıcaklığı korumak için daha uzun süre çalışmasına neden olur.

## **Dondurucu sıcaklığı çok düşük ama soğutucu sıcaklığı yeterli.**

- Dondurucu bölme sıcaklığı çok düşük bir değere ayarlanmıştır. >>> Dondurucu bölme sıcaklığını daha yüksek bir dereceye ayarlayıp kontrol edin.

## **Soğutucu sıcaklığı çok düşük ama dondurucu sıcaklığı yeterli.**

- Soğutucu bölme sıcaklığı çok düşük bir değere ayarlanmıştır. >>> Soğutucu bölme sıcaklığını daha yüksek bir dereceye ayarlayıp kontrol edin.

## **Soğutucu bölme çekmecelerinde saklanan yiyecekler donuyor.**

- Soğutucu bölme sıcaklığı çok düşük bir değere ayarlanmıştır. >>> Soğutucu bölme sıcaklığını daha yüksek bir değere ayarlayıp kontrol edin.

## **Soğutucu ya da dondurucudaki sıcaklık çok yüksek.**

- Soğutucu bölme sıcaklığı çok yüksek bir değere ayarlanmış olabilir. >>> Soğutucu bölme sıcaklık ayarının dondurucu bölme sıcaklığı üzerinde etkisi vardır. Soğutucu ya da dondurucu bölme sıcaklığını değiştirerek ilgili bölmelerin sıcaklığı yeterli seviyeye gelene kadar bekleyin.
- Kapılar sık açılmış ya da uzun süre açık kalmıştır. >>> Kapıları çok sık açmayın.
- Kapı aralık olabilir. >>> Kapıyı tamamen kapatın.
- Ürünün fişi daha yeni takılmış ya da yeni yiyecek konulmuş olabilir. >>> Bu normaldir. Fiş yeni takıldığında ya da yeni yiyecek konulduğunda ürünün ayarlanan sıcaklığa ulaşması normalden daha uzun zaman alır.
- Ürüne yakın zamanda fazla miktarlarda sıcak yemek konmuş olabilir. >>> Ürüne sıcak yemek koymayın.

## **Sarsılma ya da gürültü.**

- Zemin düz veya dayanıklı değildir. >>> Ürün yavaşça hareket ettirildiğinde sallanıyorsa ayaklarını ayarlayarak ürünü dengeleyin. Ayrıca zeminin ürünü taşıyabilecek kadar dayanıklı olmasına dikkat edin.
- Ürünün üzerine konan eşyalar gürültü yapıyor olabilir. >>> Ürünün üzerinde bulunan eşyaları kaldırın.
- Üründen sıvı akması, püskürmesi vb. sesler geliyor.
- Ürünün çalışma prensipleri gereği sıvı ve gaz akışları gerçekleşmektedir. >>> Bu normaldir ve bir arıza değildir.

## **Üründen rüzgar sesi geliyor.**

- Ürünün soğutma işlemini gerçekleştirebilmesi için fan kullanılmaktadır. Bu normaldir ve bir arıza değildir.

## **Ürünün iç duvarlarında terleme oluyor.**

- Havanın sıcak ve nemli olması buzlanmayı ve yoğunlaşmayı artırır. Bu normaldir ve bir arıza değildir.
- Kapılar sık açılmış ya da uzun süre açık kalmıştır. >>> Kapıları çok sık açmayın, açıksa kapatın.
- Kapı aralık olabilir. >>> Kapıyı tamamen kapatın.

## Ürünün dışında ya da kapıların arasında terleme oluşuyor.

- Hava nemli olabilir, nemli havalarda bu gayet normaldir. >>> Nem azaldığında yoğunlaşma kaybolur.

## Ürünün içi kötü kokuyor.

- Düzenli temizlik yapılmamıştır. >>> Ürünün içini sünger, ılık su veya karbonatlı suyla düzenli olarak temizleyin.
- Some containers or packaging materials may cause odor. >>> Use containers or packaging materials that do not cause odor.
- Foods are placed in open containers. >>> Store food in closed containers. Microorganisms spread from foods stored with their lids open may cause bad odors.
- Remove expired and spoiled food from the product.

## The door does not close.

- Food packages may be blocking the door from closing. >>> Move the packages that are blocking the doors.
- The product may not be standing completely upright on the floor. >>> Balance the product by adjusting its feet.
- The ground is not flat or solid. >>> Make sure the ground is flat and solid enough to support the product.

## The vegetable bins are stuck.

- Food may be touching the top of the drawer. >>> Organize food in the drawer.

## There is heat on the product surface.

- While your product is operating, high temperatures may be observed between the two doors, on the side panels and in the rear grill area. This is normal and does not require any service.

## The fan continues to run when the door is opened.

- The fan may continue to run when the freezer door is opened.