

Safety Instructions

This section contains safety instructions that will help prevent personal injury or property damage.

Our company cannot be held responsible for any damages that may occur if these instructions are not followed.

- Always have installation and repair work done by an authorized service.
- Use only original spare parts and accessories.
- Do not repair or replace any part of the product unless expressly stated in the user manual.
- Do not make technical changes to the product.

Additional Information

- ↪ [Purpose of usage](#)
 - ↪ [Child, vulnerable person and pet safety](#)
 - ↪ [electrical safety](#)
 - ↪ [Transportation Security](#)
 - ↪ [Installation Security](#)
 - ↪ [Usage Safety](#)
 - ↪ [Maintenance and Cleaning Safety](#)
 - ↪ [Interior Lighting Bulb Replacement](#)
 - ↪ [Maintenance and Cleaning Safety](#)
-

Purpose of usage

This product is designed to be used at home and in the following types of indoor spaces: For example;

- Staff kitchens of shops, offices and other working environments;
 - Farm houses;
 - Areas available to customers of hotels, motels and other accommodation facilities;
 - Places that offer bed and breakfast, hostel-like environments.
 - The product should only be used for washing household dishes.
 - The product is not suitable for commercial or public use.
 - The lifespan of the product you purchased is 10 years. This is the period of time in which the necessary spare parts are available for the product to operate as described.
 - This product is designed for home and under-counter use.
-

Child, vulnerable person and pet safety

- This product can be used by children aged 8 years and above and persons whose physical, sensory or mental capabilities are not fully developed or who lack experience and knowledge, as long as they are supervised or trained on the safe use of the product and its hazards.
 - Children under 3 years of age should be kept away from the product unless constantly supervised.
 - Children should not play with the device.
 - Electrical products are dangerous to children and pets. Children and pets should not play with, climb on, or climb into the product.
 - Do not forget to close the door of the product when leaving the room where the product is located. Children and pets can become trapped inside the product and suffocate.
 - Cleaning and user maintenance should not be carried out by children unless they are supervised.
 - Keep packaging materials away from children. There is a risk of injury and suffocation.
 - Keep all detergents and additives used in the product out of the reach of children.
 - Before disposing of the product, for the safety of children, cut off the power plug and break the lock mechanism, rendering it inoperable.
-

electrical safety

- The product should not be plugged into the socket during installation, maintenance, cleaning, repair and transportation operations.
 - If the power cable is damaged, it must be replaced by an authorized service in order to prevent possible dangers.
 - Do not pinch the power cord under or behind the product. Do not place a heavy object on the power cord. The power cable should not be excessively bent, crushed or come into contact with any heat source.
 - Do not use an extension cord, multiple socket or adapter to operate the product.
 - Portable power strips or portable power supplies can overheat and cause a fire. Therefore, do not place multiple sockets behind or near the product.
 - The plug must be in an easily accessible place. If this is not possible, there must be a mechanism (fuse, switch, switch, etc.) on the electrical installation to which the product is connected, that complies with electrical regulations and separates all poles from the network.
 - Do not touch the plug with wet hands.
 - When removing the plug from the socket, pull the plug, not the cable.
-

Transportation Security

- Before moving the product, unplug the product and remove the water drain and water network connections. Completely drain the remaining water inside the product.
- The product is heavy, do not carry it alone.

NOTICE Do not hold the door or panel of the product to move it.

NOTICE If you have to carry the product, carry it in an upright position and by holding it from the back. Tilting the product on its front may cause the electronic parts inside to get wet and get damaged.

NOTICE Be careful not to bend, pinch or break the hoses when placing the product in its place after assembly or cleaning operations.

Installation Security

- To make the product ready for use, make sure that the electrical installation, clean water installation and water drain are suitable by looking at the information in the manual and installation instructions. If not, call a licensed electrician and plumber to make the necessary arrangements. These transactions belong to the customer.
- Before installing the product, check for any damage. If the product is damaged, do not install it.
- Do not install the product in places where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It creates a fire risk because it cannot get air from the bottom.
- Place the product on a clean, flat and hard surface and balance it with the adjustable feet. If the foot adjustment is not made properly, the door may not close completely and hot steam may escape. It can cause serious burns and injuries, and can also damage your furniture.
- Do not install the product near heat sources (heater, stove, etc.) and do not install it under the cooking area of a stove.
- If you want to use it in a cabinet/cabinet/module, keep the cabinet doors open during operation if there are no spaces to provide adequate air circulation.
- Plug the product into a grounded socket protected by a fuse suitable for the current values specified on the type label. Have the grounding installation done by a specialist electrician. Do not use the product without grounding in accordance with local/national regulations.
- Plug the product into an outlet that complies with the voltage and frequency values specified on the type label.
- Do not plug the product into sockets that are loose, out of socket, broken, dirty, oily, or at risk of contact with water (e.g. water that may leak from the counter).

NOTICE It is necessary to use the new hose sets supplied with the product. Do not reuse old hose assemblies. Do not make attachments to hoses.

NOTICE Connect the water inlet hose directly to the water tap. The pressure coming from the tap should be at least 0.03 MPa (0.3 bar) and at most 1 MPa (10 bar). If the water pressure is above 1 MPa (10 Bar), a pressure reducing valve must be installed. The maximum permitted water temperature is 25°C.

- Position the power cord and hoses so that they do not pose a tripping risk.
-

Usage Safety

Only detergents, rinse aids and additives suitable for dishwashers should be used.

Never use chemical solvents on the product. These substances carry the risk of explosion.

The washing water inside your product is not drinkable.

Dishwasher detergents contain strong alkalis and can be extremely dangerous if swallowed. Avoid contact with skin and eyes and do not let children approach the product while the lid is open. After the wash cycle is completed, check that the detergent tank is empty.

When you pull out the upper and lower baskets completely, the door of the product assumes the entire load of the baskets. Do not sit or place other loads on the door; Otherwise, the product may topple over.

ANNOUNCEMENT



Product Maximum Washing capacity: It is stated under the Program Table on the Energy Label and Quick Use Card.

To prevent possible injuries, use a serving fork, bread knife, etc. Always place long and pointed dishes with the pointed ends down in the cutlery basket or horizontally on the crockery baskets.

If you need to open the door of the product while it is operating, open the door carefully. Be careful of hot steam and splashes of hot water that may escape.

Do not operate a faulty or damaged product. Unplug the product (or turn off the fuse it is connected to), turn off the water tap and call the authorized service.

Do not place a flame source (lit candle, cigarette, etc.) on or near the product. Do not keep flammable/explosive materials near the product.

Do not stand on the product.

When you will not use the product for a long time, unplug it and turn off the tap.

This product is 2000 m above sea level. It is designed to work up to altitude.

Maintenance and Cleaning Safety

Maintenance and cleaning safety

Do not wash the product by spraying or pouring water on it.

Do not use sharp and abrasive tools when cleaning the product. Household cleaning products, detergent, gas, gasoline, thinner, alcohol, polish, etc. Do not use substances.

Gloves should be worn when cleaning the product.

Be careful against possible injuries when cleaning the sharp surfaces on the back of the product!

NOTICE Do not forget to replace the filter of your machine after cleaning it. Otherwise, you will cause the pumps to clog and the product to be damaged.

Interior Lighting Bulb Replacement

Call the authorized service when the LED / bulb used for illumination on your machine needs to be replaced, depending on the model.

Maintenance and Cleaning Safety

ANNOUNCEMENT



Do not wash the product by spraying or pouring water on it.

ANNOUNCEMENT



Do not use sharp and abrasive tools when cleaning the product. Household cleaning products, detergent, gas, gasoline, thinner, alcohol, polish, etc. Do not use substances.

ANNOUNCEMENT



Gloves should be worn when cleaning the product.

ANNOUNCEMENT



Be careful against possible injuries when cleaning the sharp surfaces on the back of the product.

NOTICE Do not forget to replace the filter of your machine after cleaning it. Otherwise, you will cause the pumps to clog and the product to be damaged.

Interior Lighting

ANNOUNCEMENT



Call the service when the LED / bulb used for lighting on your machine needs to be replaced, depending on the model.

Environmental Instructions

Additional Information

- [↻ Compliance with WEEE Regulation and Disposal of Waste Product](#)
 - [↻ Packaging Information](#)
 - [↻ Note for Testing Institutes](#)
 - [↻ Standard conformity and testing information / EC declaration of conformity](#)
 - [↻ This section applies to products with Wi-Fi feature.](#)
 - [↻ Energy Label](#)
-

 
Compliance with WEEE Regulation and Disposal of Waste Product

This product does not contain harmful and prohibited substances specified in the "Regulation on the Control of Waste Electrical and Electronic Equipment" published by the Ministry of Environment and Urbanization of the Republic of Turkey. It complies with the WEEE Regulation.

ANNOUNCEMENT



This product is manufactured from high quality parts and materials that are recyclable and reusable. Therefore, do not dispose of the product with household or other waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Ask your local government about these collection points. Help protect the environment and natural resources by recycling used products. Before disposing of the product, for the safety of children, cut off the power plug and break the locking mechanism of the loading door, rendering it inoperable.



Packaging Information

The packaging of the product is made of recyclable materials in accordance with our National Legislation. Do not dispose of packaging waste together with household or other waste, dispose of it at packaging collection points specified by local authorities.

Note for Testing Institutes

Information required for performance tests is sent upon request.

Do not forget to write the code, stock number and serial number of the product to be tested, as well as your contact information, in your request e-mail. The product code, stock number and serial number are located on the type label attached to the side of the door.

Standard conformity and testing information / EC declaration of conformity

ANNOUNCEMENT



notice

The development, production and sales stages of this product are carried out in accordance with the safety rules contained in all relevant directives of the European Community. 2014/35/EU, 2014/30/EU, 93/68/EC, IEC 60436 / EN 60436

This section applies to products with Wi-Fi feature.

Frequency Band: 2.4Ghz

Max. Transmission Power: < 100mW

Energy Label

ANNOUNCEMENT




You can access the technical information of the product by scanning the QR code on the energy label with a mobile device connected to the internet.



ENERG⚡

XXXXXXXXXXXXX (*)

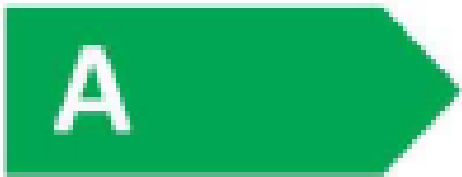

Technical Specifications

Maximum washing capacity: It is stated under the Program Table on the Energy Label and Quick Use Card.
Height: 82-87
Width: 60
Depth:57
Electrical input: 220-240 V, 50 Hz
Total power: 1800-2100W
Heater power: 1800W
Total current: 10 A*
Pump power: 90W
Drain pump power: 30 W*
* For detailed electrical values, see the type label on the machine door.
Water Pressure 0.3 –10 bar (= 3 – 100 N/cm ² = 0.03-1.0 Mpa)

ANNOUNCEMENT



Technical specifications may be changed without prior notice to improve product quality.

ANNOUNCEMENT




The figures in the manual are schematic and may not be in exact harmony with the product.

ANNOUNCEMENT




The values declared on the markings on the product or in other printed documents supplied with the product are the values obtained in the laboratory environment according to the relevant standards. These values may vary depending on the usage and environmental conditions of the product.

General view

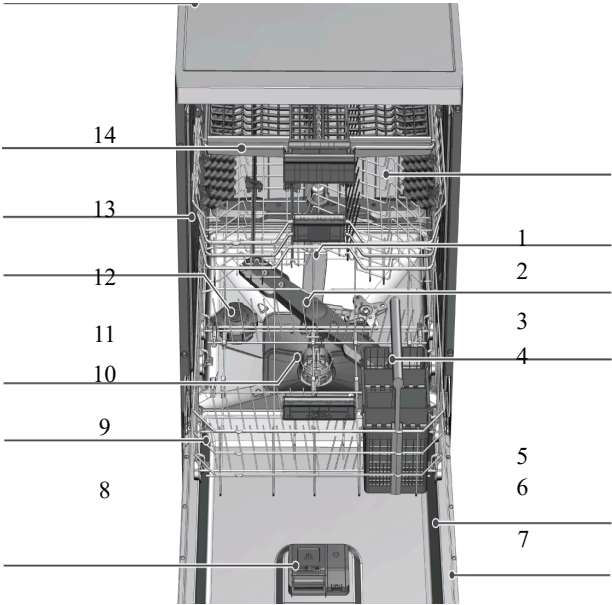

one	Upper Basket	2	Upper Propeller
3	Lower Propeller	4	Fork Spoon Basket
5	Door	6	Type Label
7	Control Panel	8	Detergent Zone
9	Lower Basket	10	Filters
11th	Salt Compartment Cover	12	Upper Basket Rail
13	Roof Cutlery Basket (depending on model)	14	Top Table

The type label varies depending on the model.

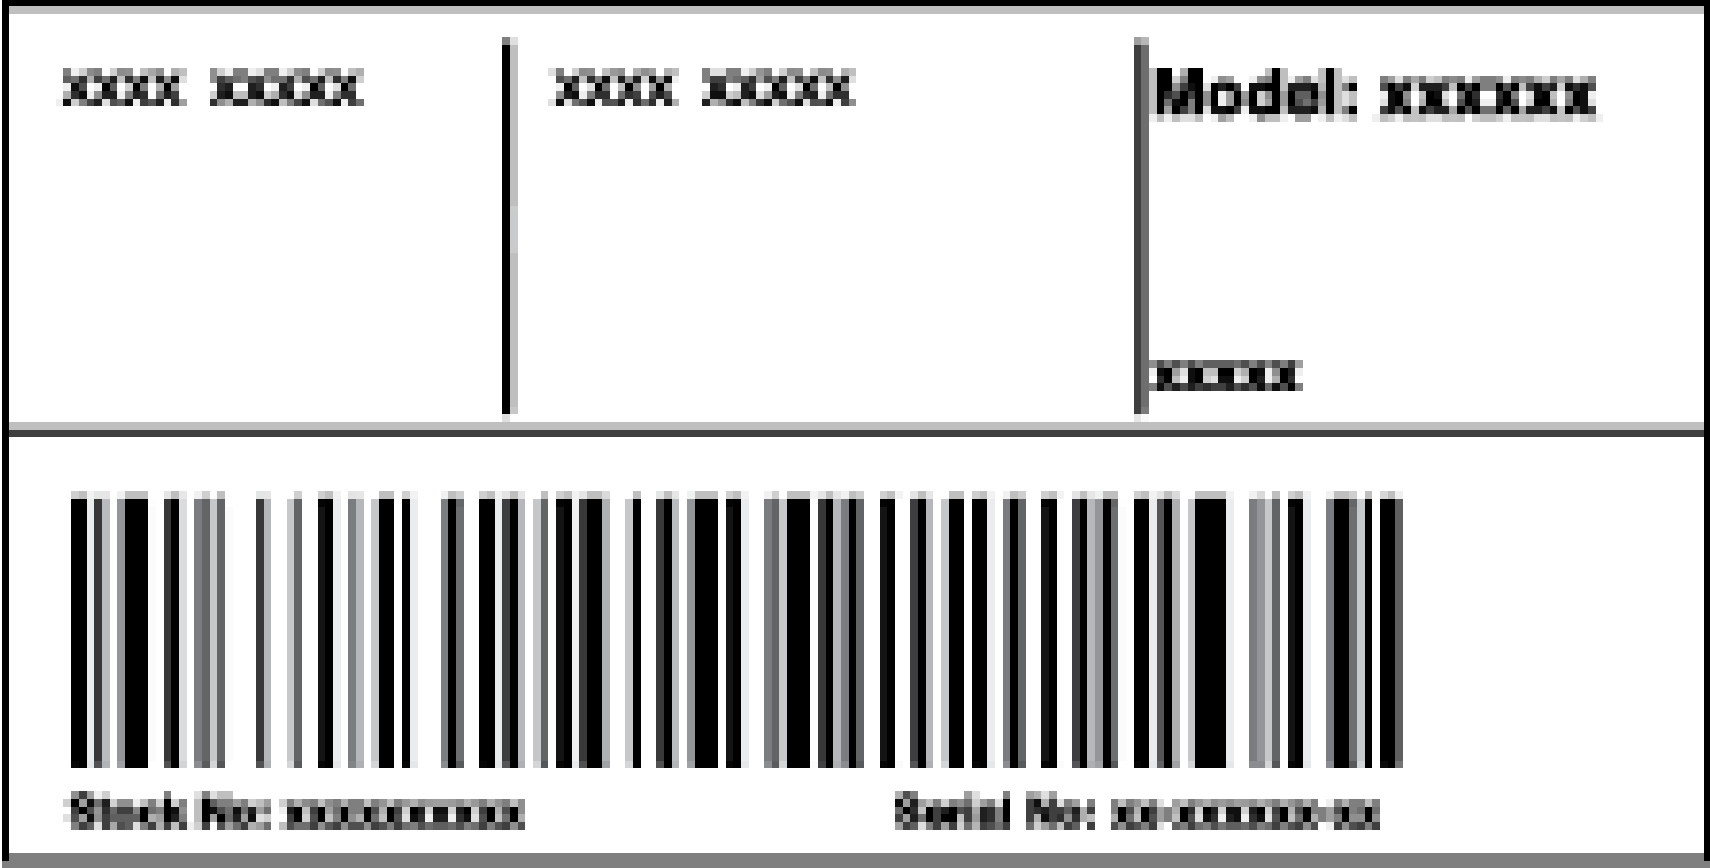

Setup

ANNOUNCEMENT



Read the "Safety Instructions" section first!

It is the customer's responsibility to prepare the electricity, clean water and waste water installations of the place where the product will be placed. Before calling the authorized service to make the product ready for use, if the electrical installation, clean water installation and water drain are not suitable, call a qualified electrician and plumber to make the necessary arrangements.

ANNOUNCEMENT



Installation and electrical connections must be made by an authorized service. The manufacturer cannot be held responsible for any damages that may arise from operations carried out by unauthorized persons.

ANNOUNCEMENT



Before installing the product, check for any damage. If the product is damaged, do not install it. Damaged products pose a danger to your safety.

ANNOUNCEMENT



For freestanding and under-counter models, the kick plate of the device should not be removed. This voids the warranty.

- Make sure that the water inlet and discharge hoses are not folded, pinched or broken when placing the product in its place after assembly or cleaning operations.
- When placing the product, do not touch the ground, wall, pipes, etc. Be careful not to damage it. Do not hold the door or panel of the product to move it.

Additional Information

[↪ Right place for installation](#)

[↪ Connecting to the water network](#)

[↪ Connecting to water drain](#)

[↪ Adjusting the feet](#)

[↪ Electrical connection](#)

Right place for installation

- Where the product is installed, there should be no lockable, sliding or hinged door that would restrict the door from being fully opened.
- Place the product on a solid and level surface with sufficient load-bearing capacity! It is necessary to place the machine on a flat surface so that the door can close properly and tightly.
- Do not install the product in environments where the temperature drops below 0 °C.
- Place the product on a hard surface. Do not place on a long-pile carpet or similar surface.
- Choose a place where you can load and unload dishes easily and quickly.
- Place the product close to the faucet and drain. Choose the location of the product so that it does not change after connections are made.

ANNOUNCEMENT



Do not place the product on the power cord. The cable may be damaged and cause electric shock or fire.



Connecting to the water network

We recommend installing a filter at the water inlet to prevent dirt (sand, clay, rust, etc.) that may come from the city network or your water installation from damaging your machine and dishes.

Permissible water inlet temperature maximum:

- 60 °C in models with this feature.
- Up to 25 °C for other models.



The dishwasher should not be connected to warm water appliances or running water heaters.

NOTICE Do not use old or used water inlet hose on the new product. Use the new water inlet hose supplied with the machine. Do not make attachments to hoses.

NOTICE Connect the water inlet hose directly to the water tap. The pressure coming from the tap should be at least 0.3 and at most 10 bars. If the water pressure is above 10 bars, a pressure reducing valve must be installed.





NOTICE The water mains and drain hose must be securely fixed and undamaged.

NOTICE After making the connections, open the tap fully and check for water leakage.

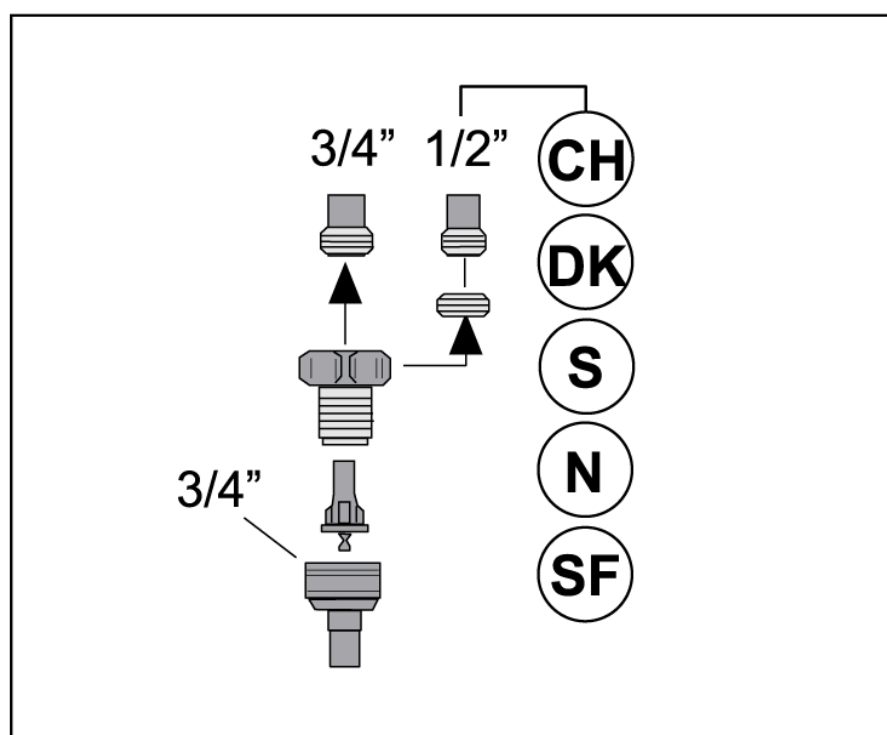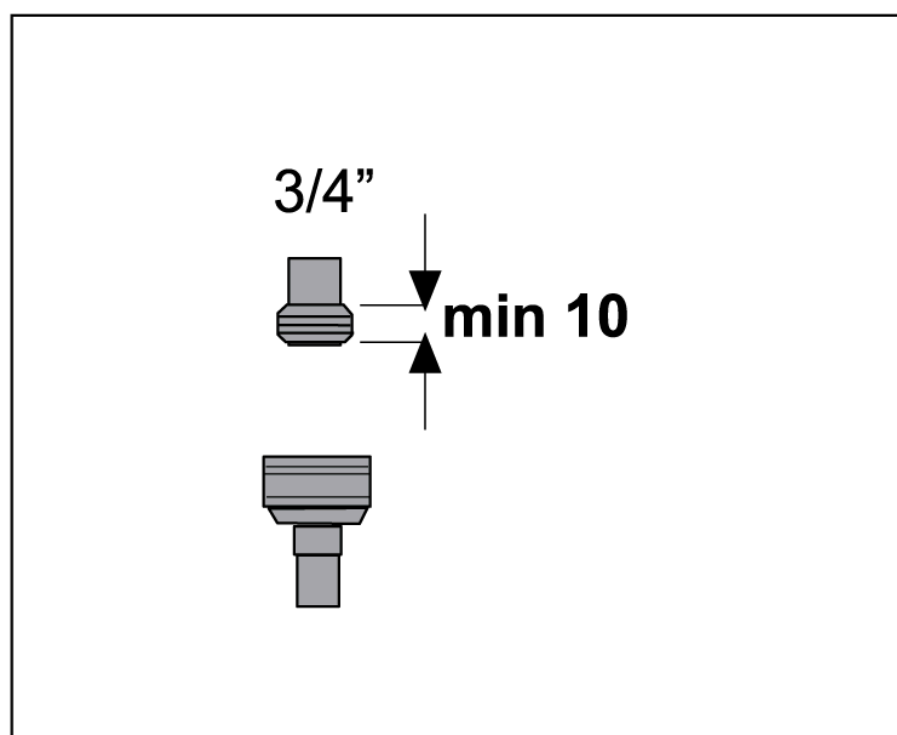

Connecting to water drain

The water drain hose can be connected directly to the waste water drain or the sink drain. For more detailed information, see the installation instructions provided with your machine.

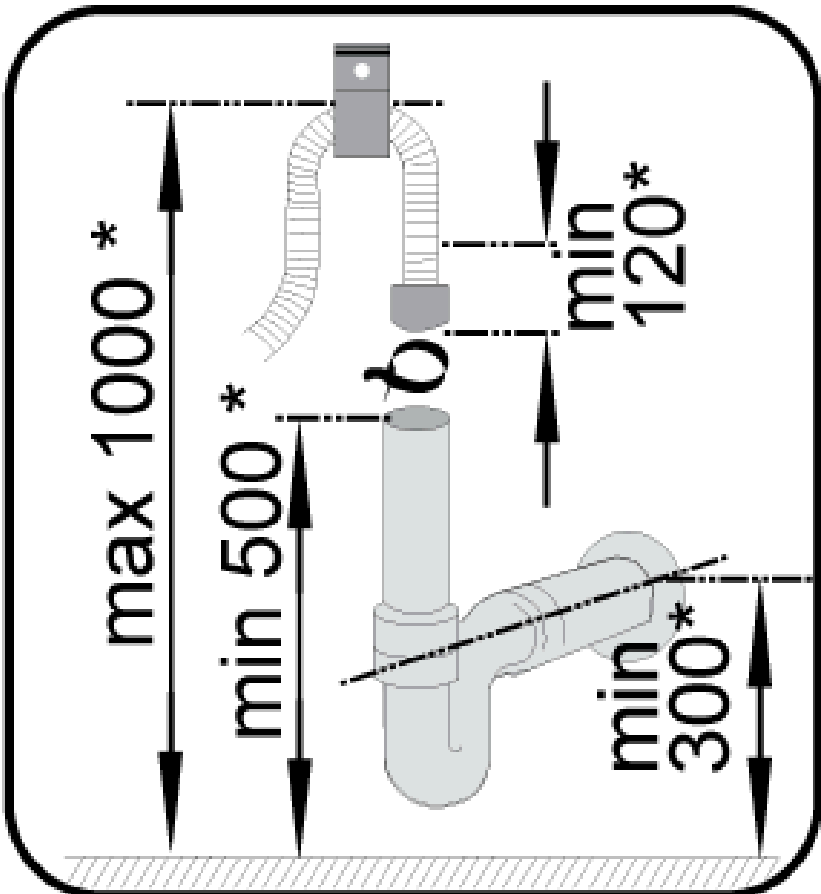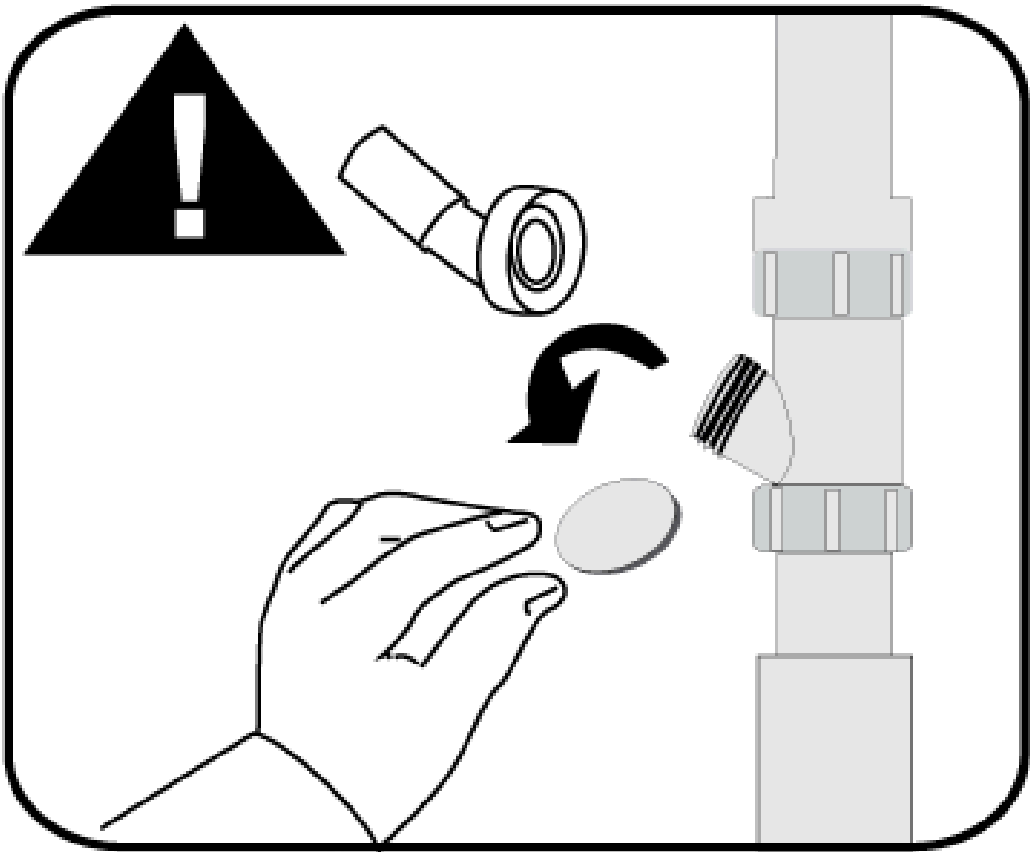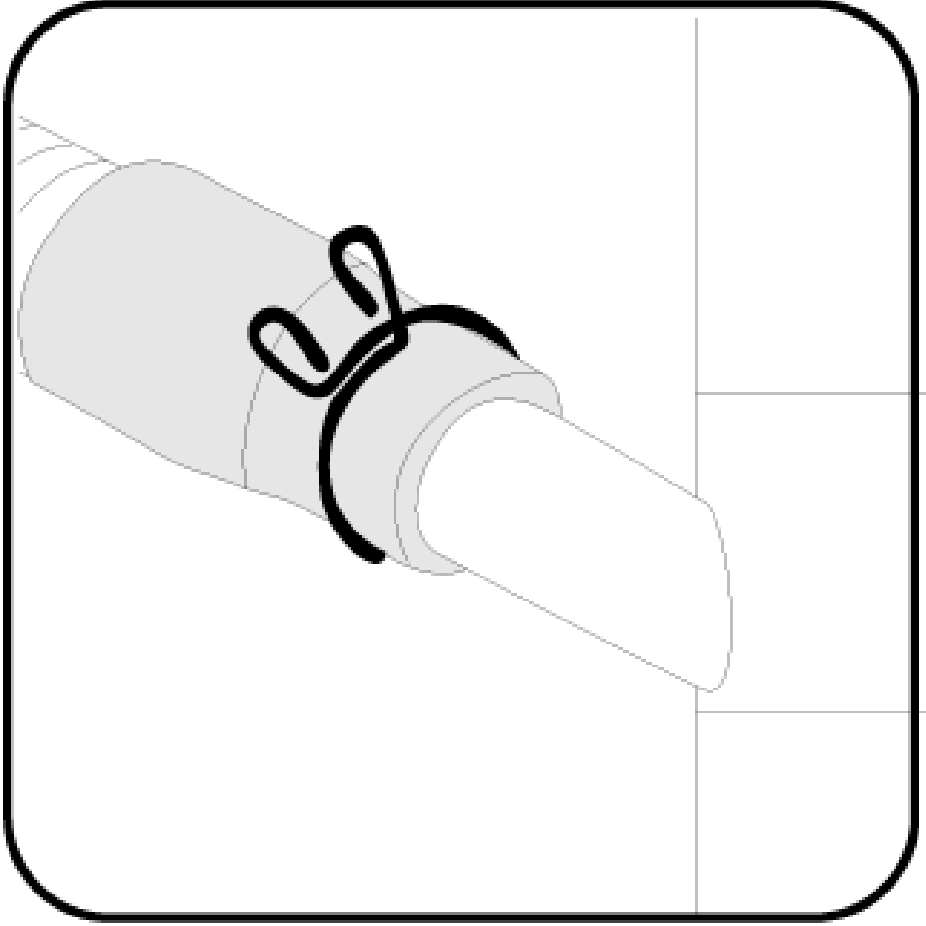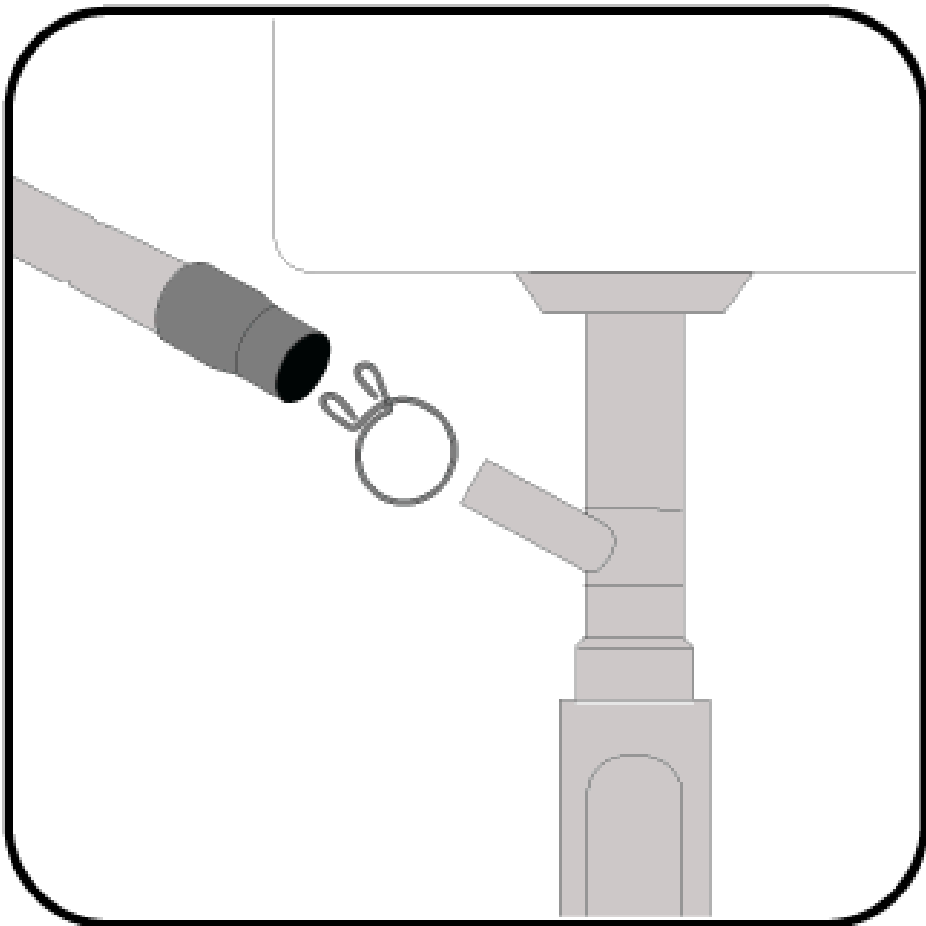

* mm

The wastewater drain must be connected to the sewer and must not be connected to surface water.

Adjusting the feet

If the door of the product does not close properly or shakes when you gently push it with your hand, it means that the feet are not adjusted. Adjust the product's feet as shown in the installation manual supplied with the product.

ANNOUNCEMENT



If the dishwasher door is not adjusted properly, hot steam may escape. It can cause serious burns, injuries, and damage your furniture.

Electrical connection

ANNOUNCEMENT



Connect the product to a grounded socket protected by a fuse complying with the values in the “Technical specifications” table. Our company will not be responsible for any damages that may occur if the product is used without grounding in accordance with local regulations.

-
- The connection must comply with national regulations.
 - The plug of the power cord must be easily accessible after installation.
 - Connect the product to a grounded outlet protected by a 16-amp fuse.
 - The specified voltage must be equivalent to your mains voltage.

ANNOUNCEMENT



Do not connect with extension cords or multiple sockets.

ANNOUNCEMENT



A damaged power cord must be replaced by an authorized service.

Preliminary

ANNOUNCEMENT



Read the “Safety Instructions” section first!

Additional Information

- [↻ Things to do to save energy](#)
 - [↻ water softening system](#)
 - [↻ Adjusting the Water Softener System](#)
 - [↻ Filling the salt](#)
 - [↻ Detergent](#)
 - [↻ Polisher](#)
 - [↻ Parts that are not suitable for washing in the dishwasher](#)
 - [↻ Adjusting the upper basket height](#)
 - [↻ Foldable upper basket wires](#)
 - [↻ Height Adjustable Top Basket Rack](#)
 - [↻ Foldable lower basket wires](#)
 - [↻ Top basket multi-purpose serving rack](#)
 - [↻ fork spoon basket](#)
-

Things to do to save energy

The following information will help you use the product in an ecological and energy-saving manner.

Before putting the dishes in the machine, remove all coarse waste.

ANNOUNCEMENT



Pre-cleaning the dishes before loading them into the machine is not recommended as it will consume energy and water.

ANNOUNCEMENT



Washing dishes with a dishwasher consumes less energy and water than washing them by hand.

Start the machine after filling it completely.

When choosing a program, pay attention to the "Programme Information and Average Consumption Values Table".

Do not use more detergent than recommended on the detergent packaging.

water softening system

There is a special water softening system inside the machine that reduces the hardness of mains water. This system softens the water to the required level to wash the dishes with the desired quality.

ANNOUNCEMENT



If the mains water hardness is above 7°dH, it should be softened. Otherwise, hardness ions will accumulate on the washed items and may affect the washing, polishing and drying performance of the machine.

Adjusting the water softening system

Washing efficiency will increase when the water softening system is adjusted correctly.

Read the section on adjusting the water softener system first.

Regeneration of the water softening system can occur in all programs during the drying step. When the renewal process is performed, the duration, energy and water consumption of the program increases. For the renewal process; When the dishwasher is operated with 14 dH water supply under standard conditions in the Eco 50°C program, the frequency of renewal, maximum additional time, water and energy consumption depending on the water consumption of the Eco 50°C program are given in the table below.

Eco 50°C water consumption (l) Refresh after cycle	Extra time (min)	Additional water consumption (l)	Additional energy consumption (kWh)
12.3-14.7	5	5	3.0	0.05
9.6-12.2	6	5	3.0	0.05
9.0-9.5	7	5	3.0	0.05
8.0-9.0	8	5	3.0	0.05
7.0-7.9	9	5	3.0	0.05







For water consumption in the Eco 50°C program of your dishwasher, see the Program Information and Average Consumption Values Table given in the Program Table.

Adjusting the Water Softener System

When the water softening system is adjusted correctly, the washing, rinsing and drying performance of your dishwasher will increase.

NOTICE To adjust the system, first find out your water hardness level from the authorized service in your region and adjust it as follows.

- 1.After turning on your machine, press and hold the Delay and Start, Wait, and Cancel buttons respectively.
2. Using the delay button, turn LEDs 9 and 3 on.
3. Adjust the water hardness level with the function keys.
- 4.Save by pressing the On/Off button.

Hardness Level	English Hardness °dE	German Hardness °dH	French* Hardness °dF	Water Hardness Level Indicator
Level 0 	0-5	0-4	0-8	Press the selection button to set the water hardness setting to 1. (r1)
Level 1 	6-9	5-7	9-13	Press the selection button to set the water hardness setting to 1. (r1)
Level 2 	10-15	8-12	14-22	Press the selection button to set the water hardness setting to position 2. (r2)
Level 3 	16-19	13-15	23-27	Press the selection button to set the water hardness setting to position 3. (r3)
Level 4 	20-24	16-19	28-34	Press the selection button to set the water hardness setting to position 4. (r4)
Level 5 	25-62	20-50	35-90	Press the selection button to set the water hardness setting to 5. (r5)

Water Hardness Level Adjustment Table

Make the same hardness level you set on the control panel with the regeneration adjustment switch. For example, if the setting you made on the control panel is 3, set the regeneration setting switch to 3 as well.


- If the hardness of the water you use is above 50° dH (French hardness) or if you use well water, it is recommended to use filters and water purification devices.
- If the hardness of the water you use is below 7°dH, you do not need to use salt in your dishwasher. In this case, the "Salt Deficiency Warning indicator" on the control panel of your machine will be constantly on.
- If your water hardness setting is at level 1, the "Salt Lack Warning indicator" will continue to light even though you do not need to use salt. If you use salt in this position, the salt will not be consumed and the lamp will not turn on.

ANNOUNCEMENT



In case of moving, you must re-adjust the water hardness setting of your machine according to the water hardness of the place you move to, taking into account the information given above. If the water hardness setting has been adjusted on your machine before, the last water hardness setting will be shown on the screen of your machine.

Mechanical Water Hardness Adjustment

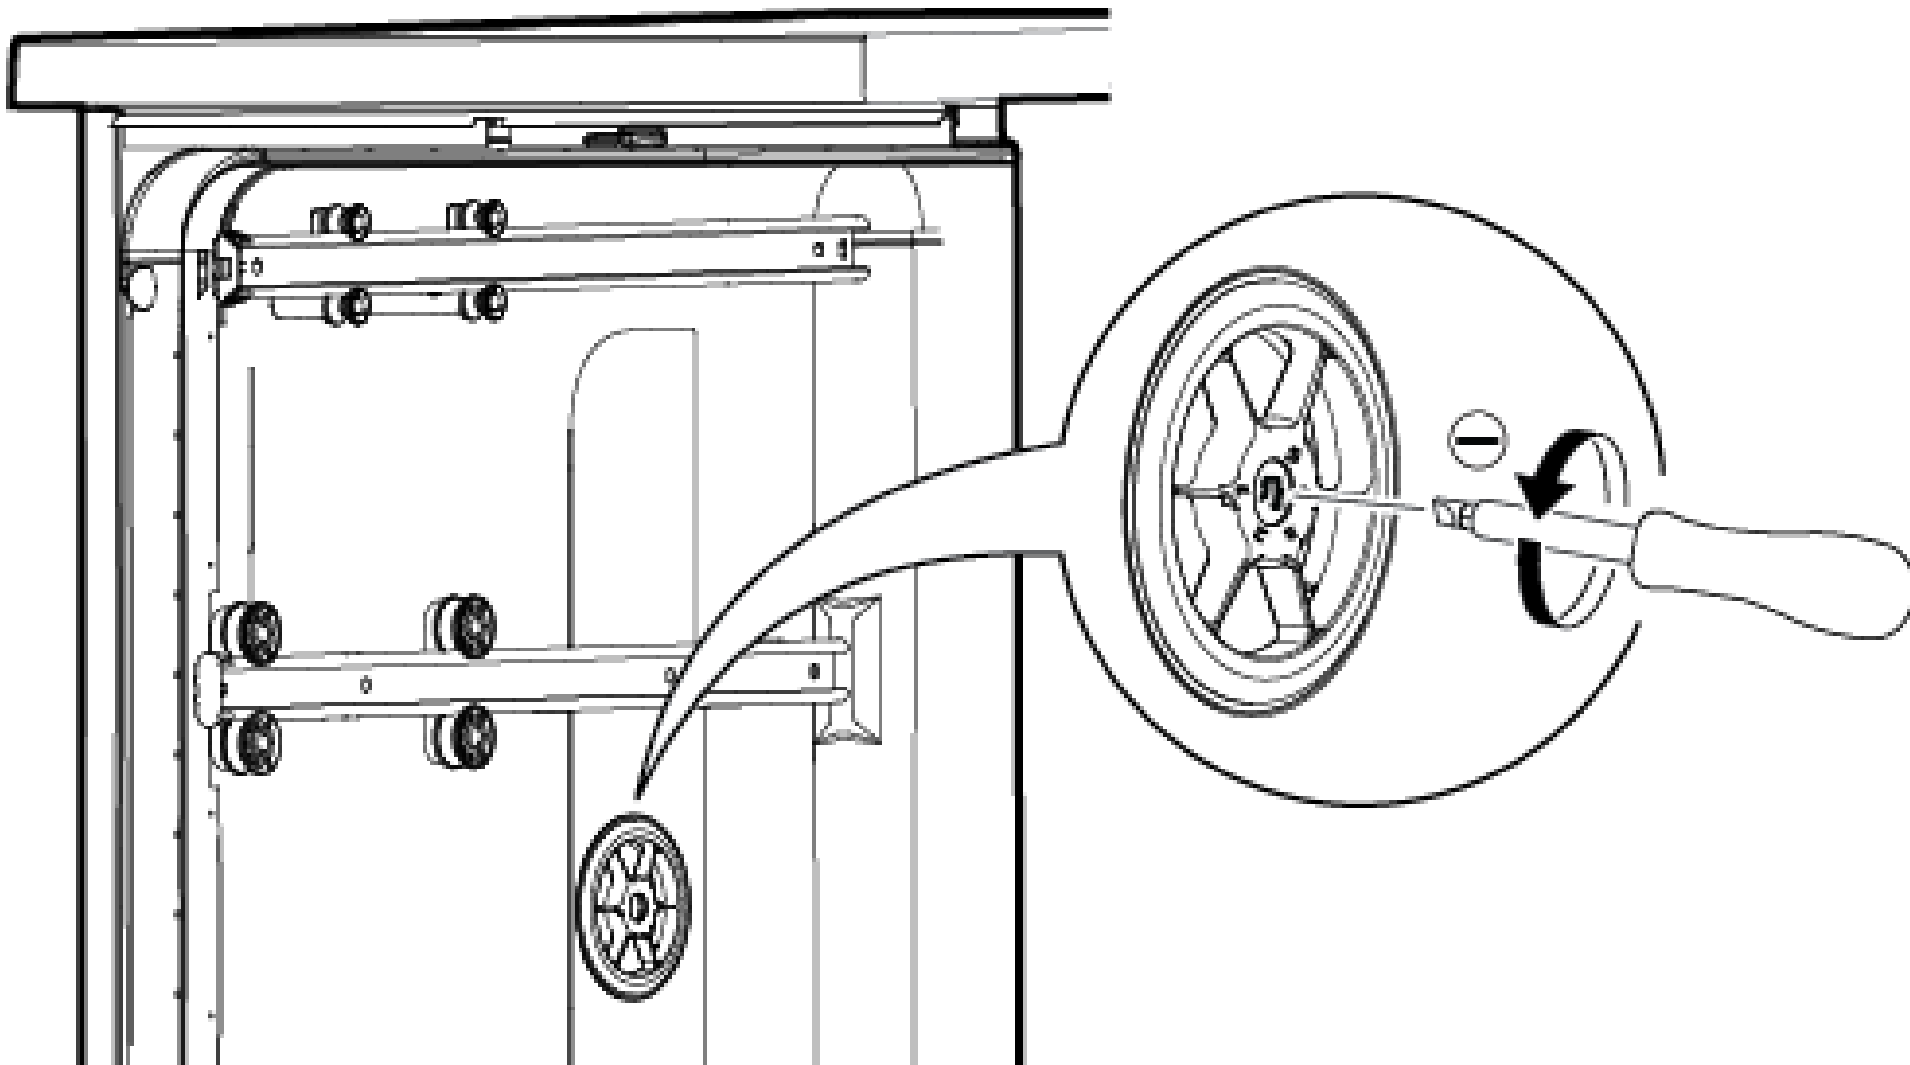

The glass care function setting is used to adjust the water hardness level of the pre-softened washing water in the dishwasher. The setting should be made according to the water hardness adjustment level. Adjustment is made with the help of a wide flat screwdriver. Screwdriver is used to turn the mechanical glass maintenance adjustment switch. Just turn the Mechanical switch to the same position as the water hardness setting level.

For example

For water hardness level "r3", set the Mechanical Glass Care adjustment switch to position 3

For water hardness level "r4", set the Mechanical Glass Care adjustment switch to position 4

Filling the salt

In order for the machine to always operate at the same performance, the water softening system must be renewed. Dishwasher salt is used for this purpose.

ANNOUNCEMENT



Use special softening salt in the machine, produced only for use in dishwashers.

ANNOUNCEMENT




It is recommended to use granular or powder softening salts in the water softening system. Do not use salts that do not dissolve fully in water, such as table salt or rock salt. Otherwise, the performance of the system may deteriorate over time.

ANNOUNCEMENT




The salt compartment fills with water when you start the machine. Therefore, fill the salt compartment before starting it.

1. To add softening salt, first remove the lower basket.
2. Open the salt compartment lid by turning it counterclockwise (A).

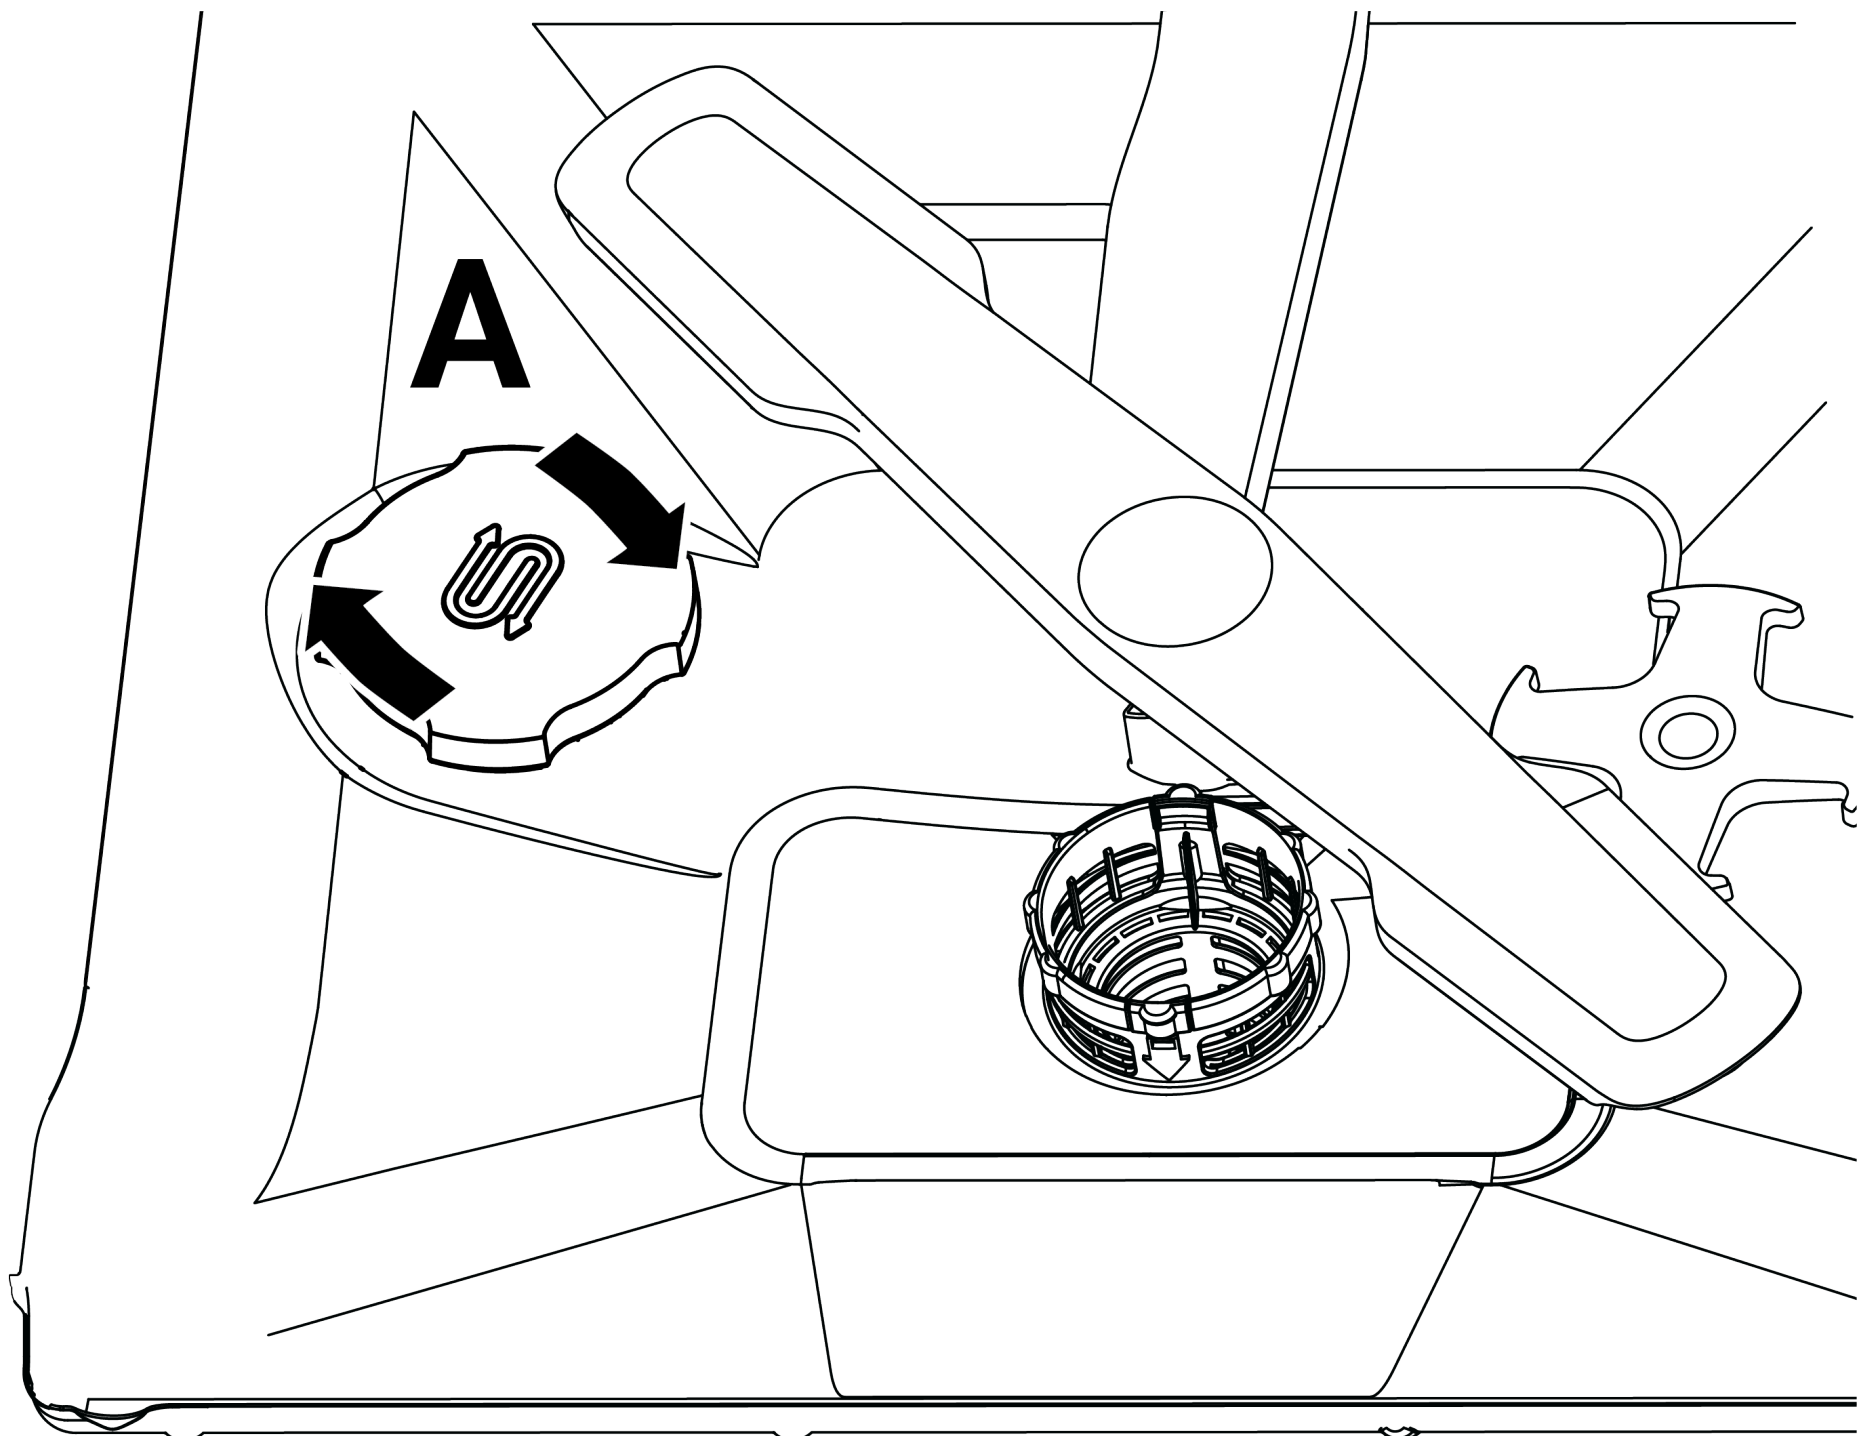

3. Add 1 liter of water to the salt compartment only when using your machine for the first time.
4. Fill the salt compartment with salt (D). Stir with a spoon to accelerate the dissolution of salt in water.

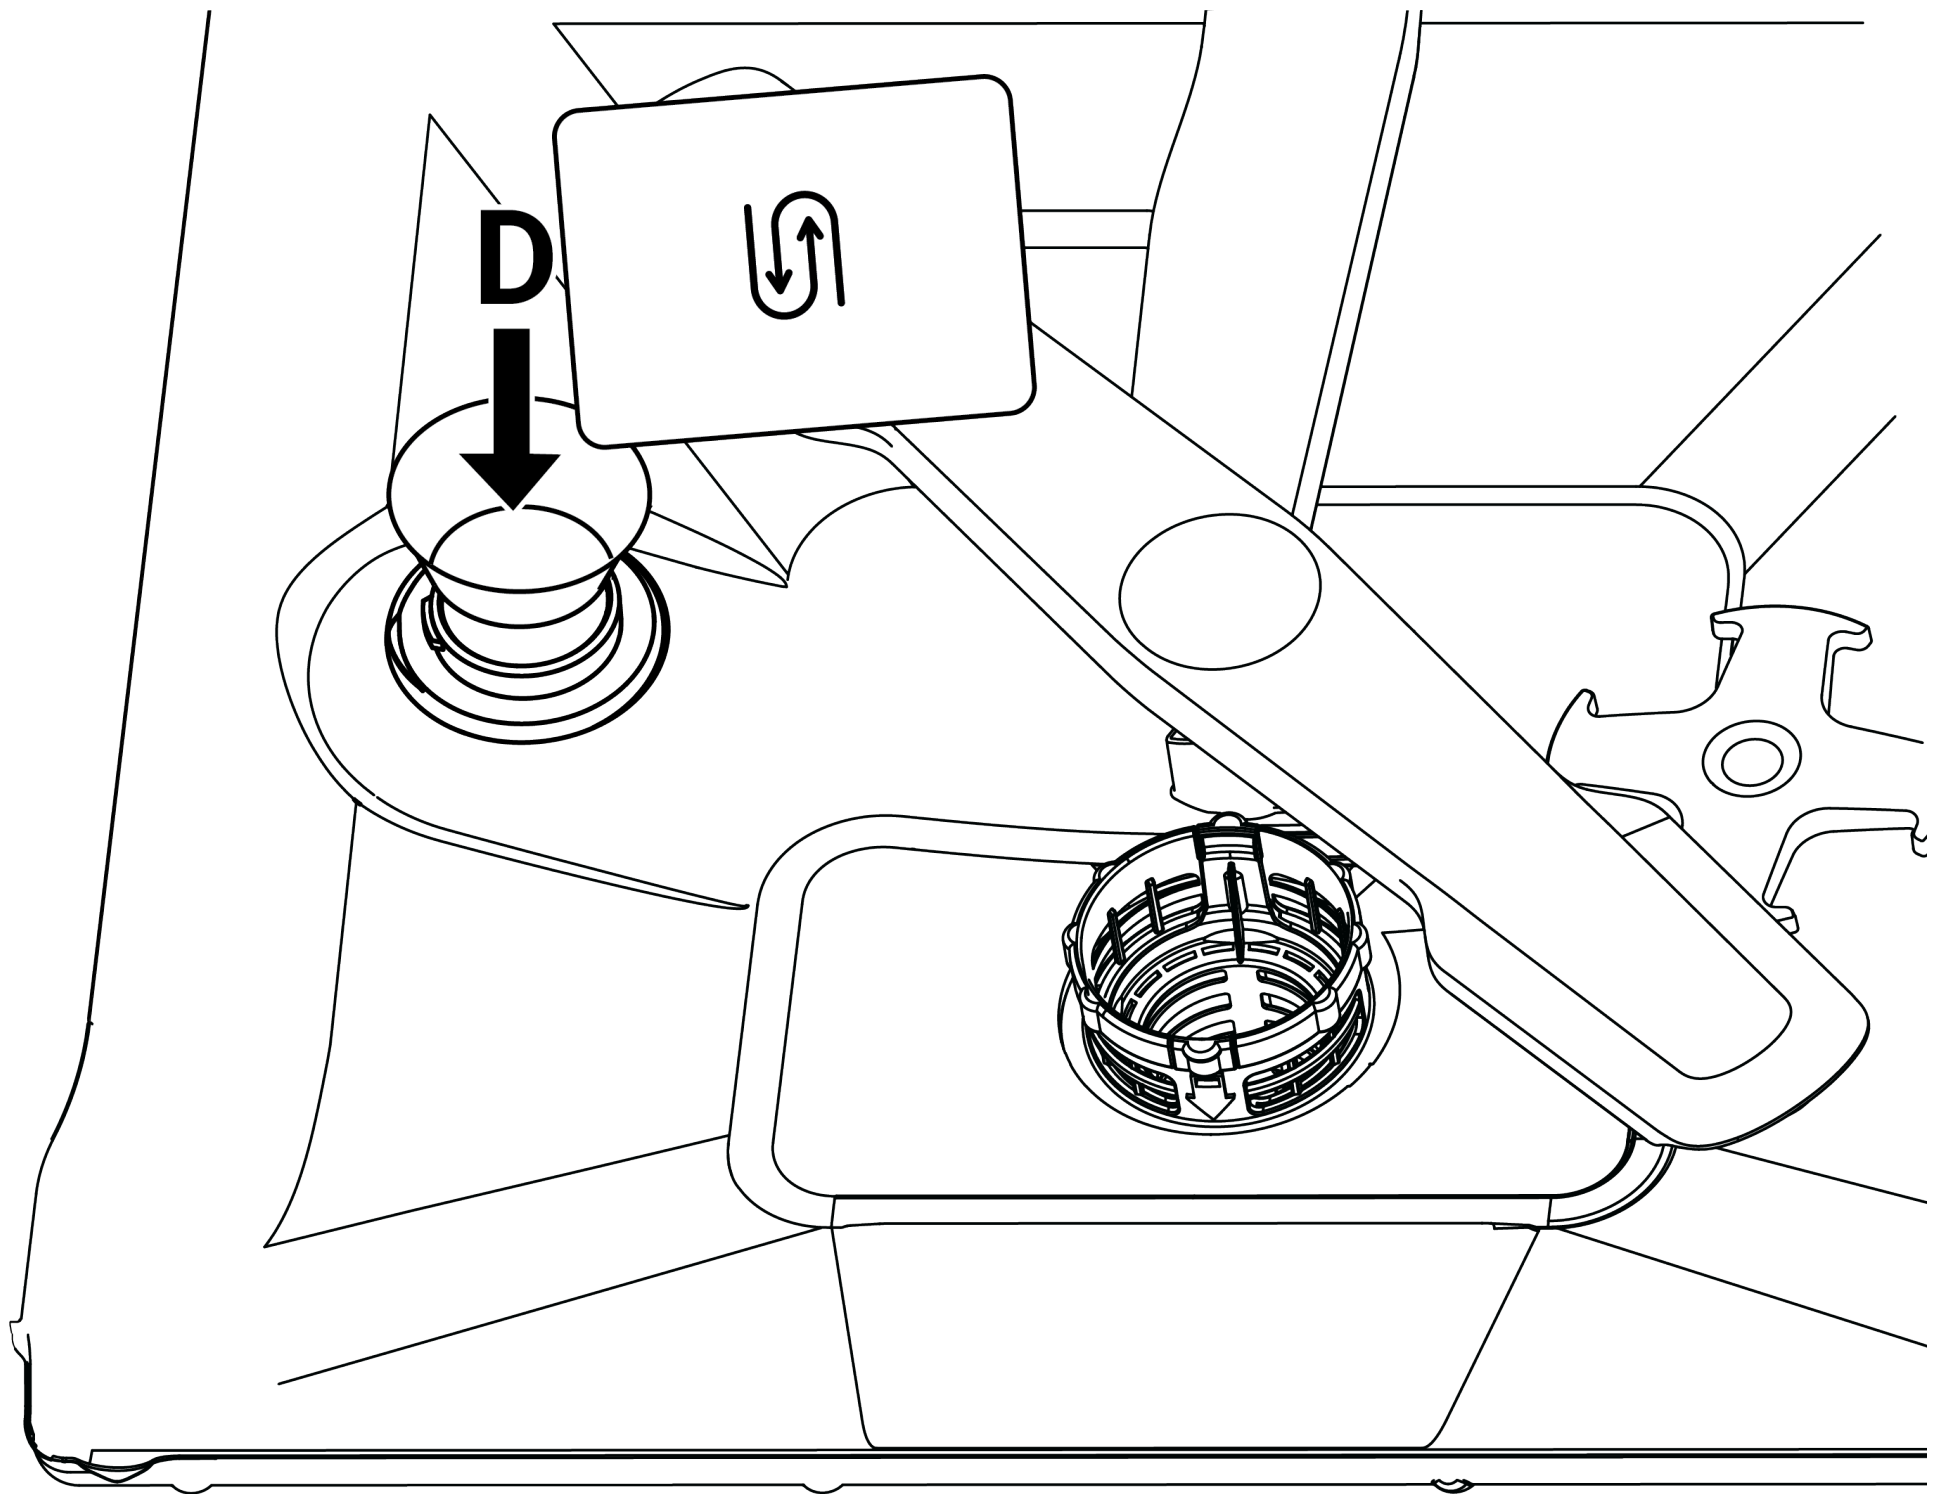

ANNOUNCEMENT



You can put approximately 2 kg of softening salt into the salt compartment.

1. After the compartment is full, replace the lid and screw it closed.

ANNOUNCEMENT



Adding salt should be done just before starting the machine. In this way, the overflowing salt water is cleaned immediately and the risk of corrosion inside the machine is prevented. If you do not want to wash immediately, run your machine empty and without detergent on the shortest cycle.

ANNOUNCEMENT



Different brands on the market have different salt grain sizes and depending on water hardness, it may take several hours for the salt to dissolve in the water. For this reason, after filling the salt into the machine, the "Salt Lack Warning indicator" continues to light for a certain period of time.

Detergent

You can use powder, liquid/gel and tablet detergent in the machine.

ANNOUNCEMENT



Use only detergent produced for use in dishwashers. We recommend that you do not use detergents containing chlorine and phosphate as they are harmful to the environment.

Filling the detergent

To obtain good washing and drying results, pay attention to the warnings given on the detergent packaging. For additional questions, contact the detergent manufacturer.



ANNOUNCEMENT



Do not put solvents into the detergent compartment. There is danger of explosion!

Put the detergent into the detergent compartment just before starting the machine as follows.

1. Open the detergent compartment cover (A) by pushing the latch to the right (depending on the model).

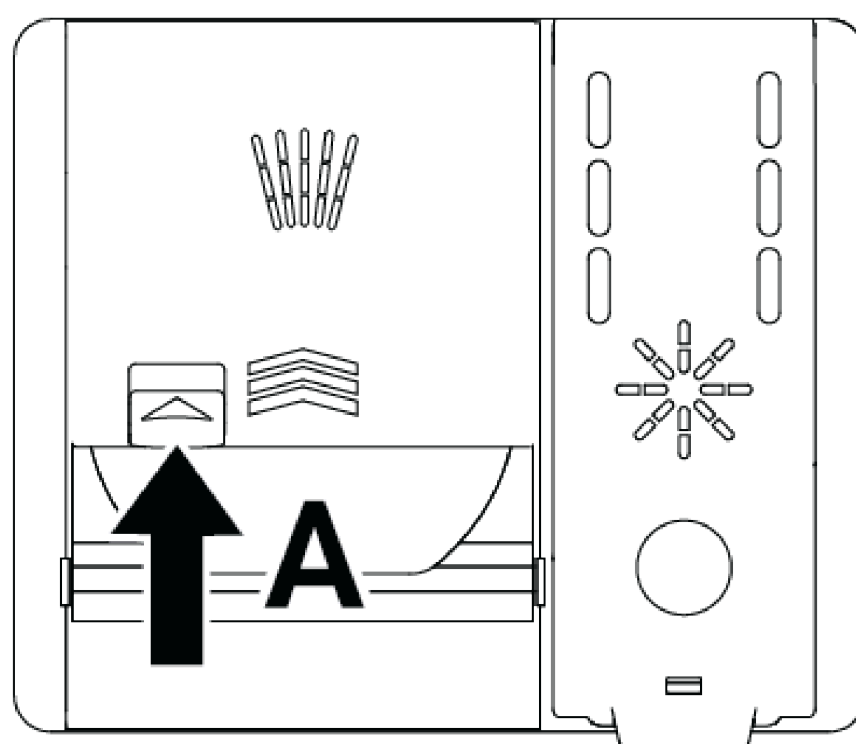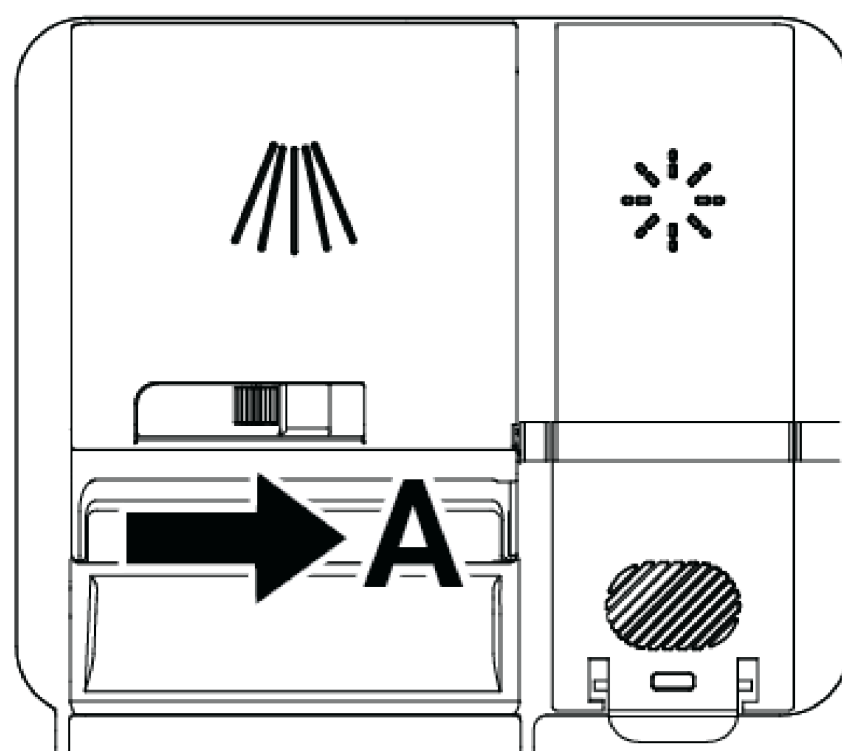

2. Put the specified amount of powder, liquid/gel or tablet detergent into the compartment.


ANNOUNCEMENT




There are level lines on the inside of the detergent compartment to help you use the correct amount of powder detergent. When the detergent compartment is fully filled, it holds 45 cm³ of detergent. Fill the detergent compartment with detergent up to the 15 cm³ or 25 cm³ level lines, depending on the occupancy of the machine and/or the contamination level of your dishes. If tablet detergent is used, one tablet is sufficient.

3. Close the detergent compartment cover by pushing it in the direction of the arrow. A "Click" sound is heard when the cover is closed.


1

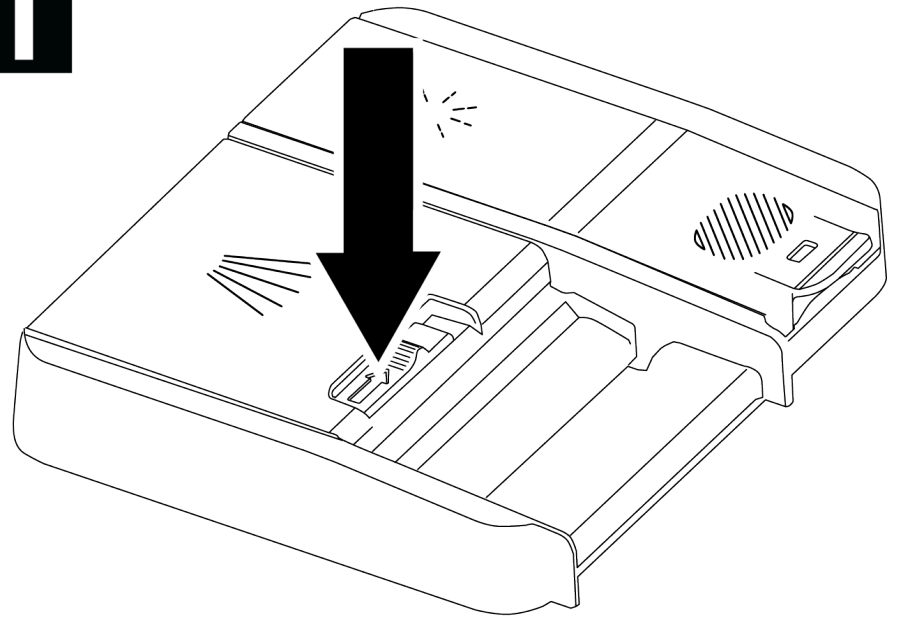

2

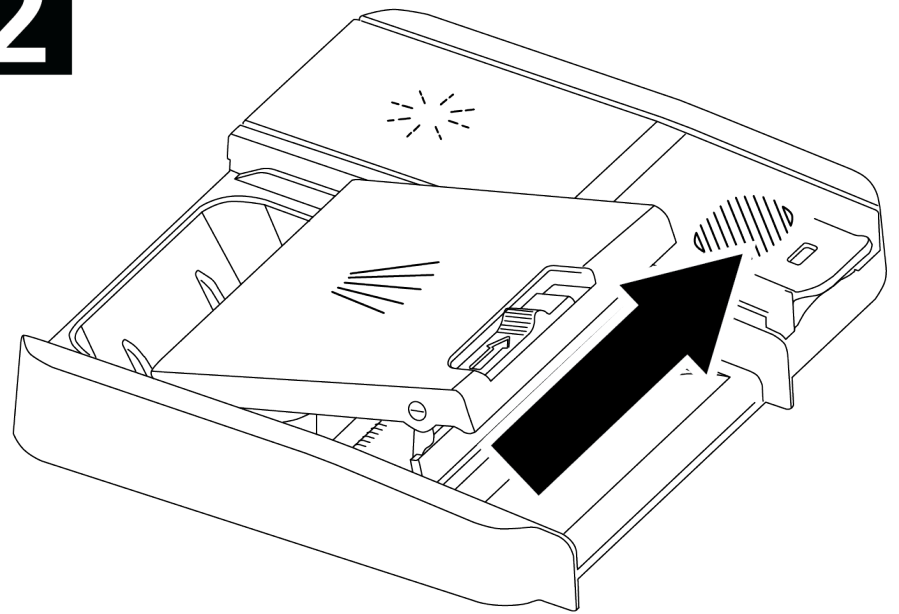

3

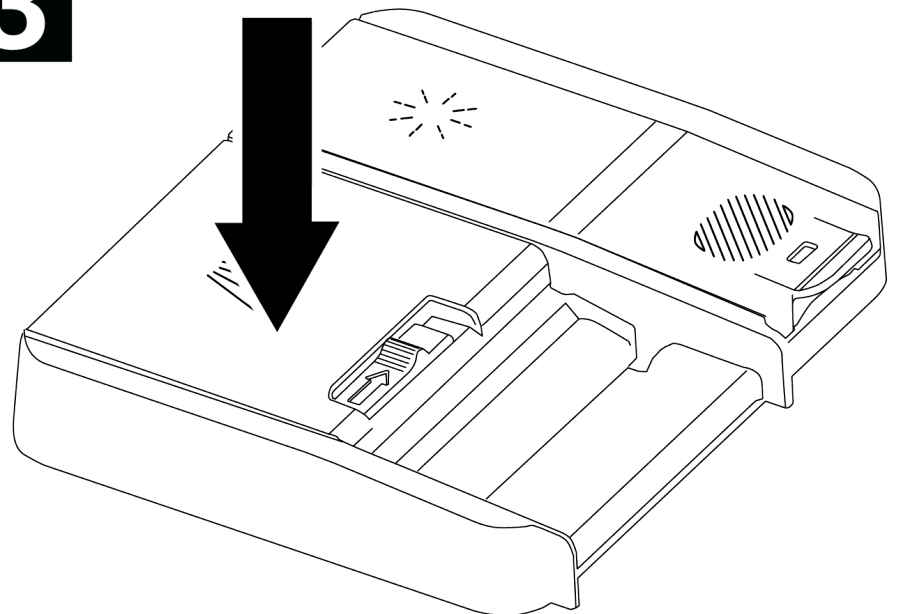

ANNOUNCEMENT




Since the solubility of tablet detergents varies depending on temperature and time, be sure to use powder or liquid / gel detergent in short programs without pre-washing.

Tablet detergents

In addition to classic tablet detergents, there are also tablet detergents on the market that contain water softening salt and/or rinse aid. Some of them also contain special components such as glass protector and stainless steel protector. These tablets work up to a certain water hardness level (21°dH). Above this level, water softening salt and rinse aid should be used along with tablet detergent.

The best washing performance in dishwashers is achieved by using detergent, rinse aid and water softening salt separately.

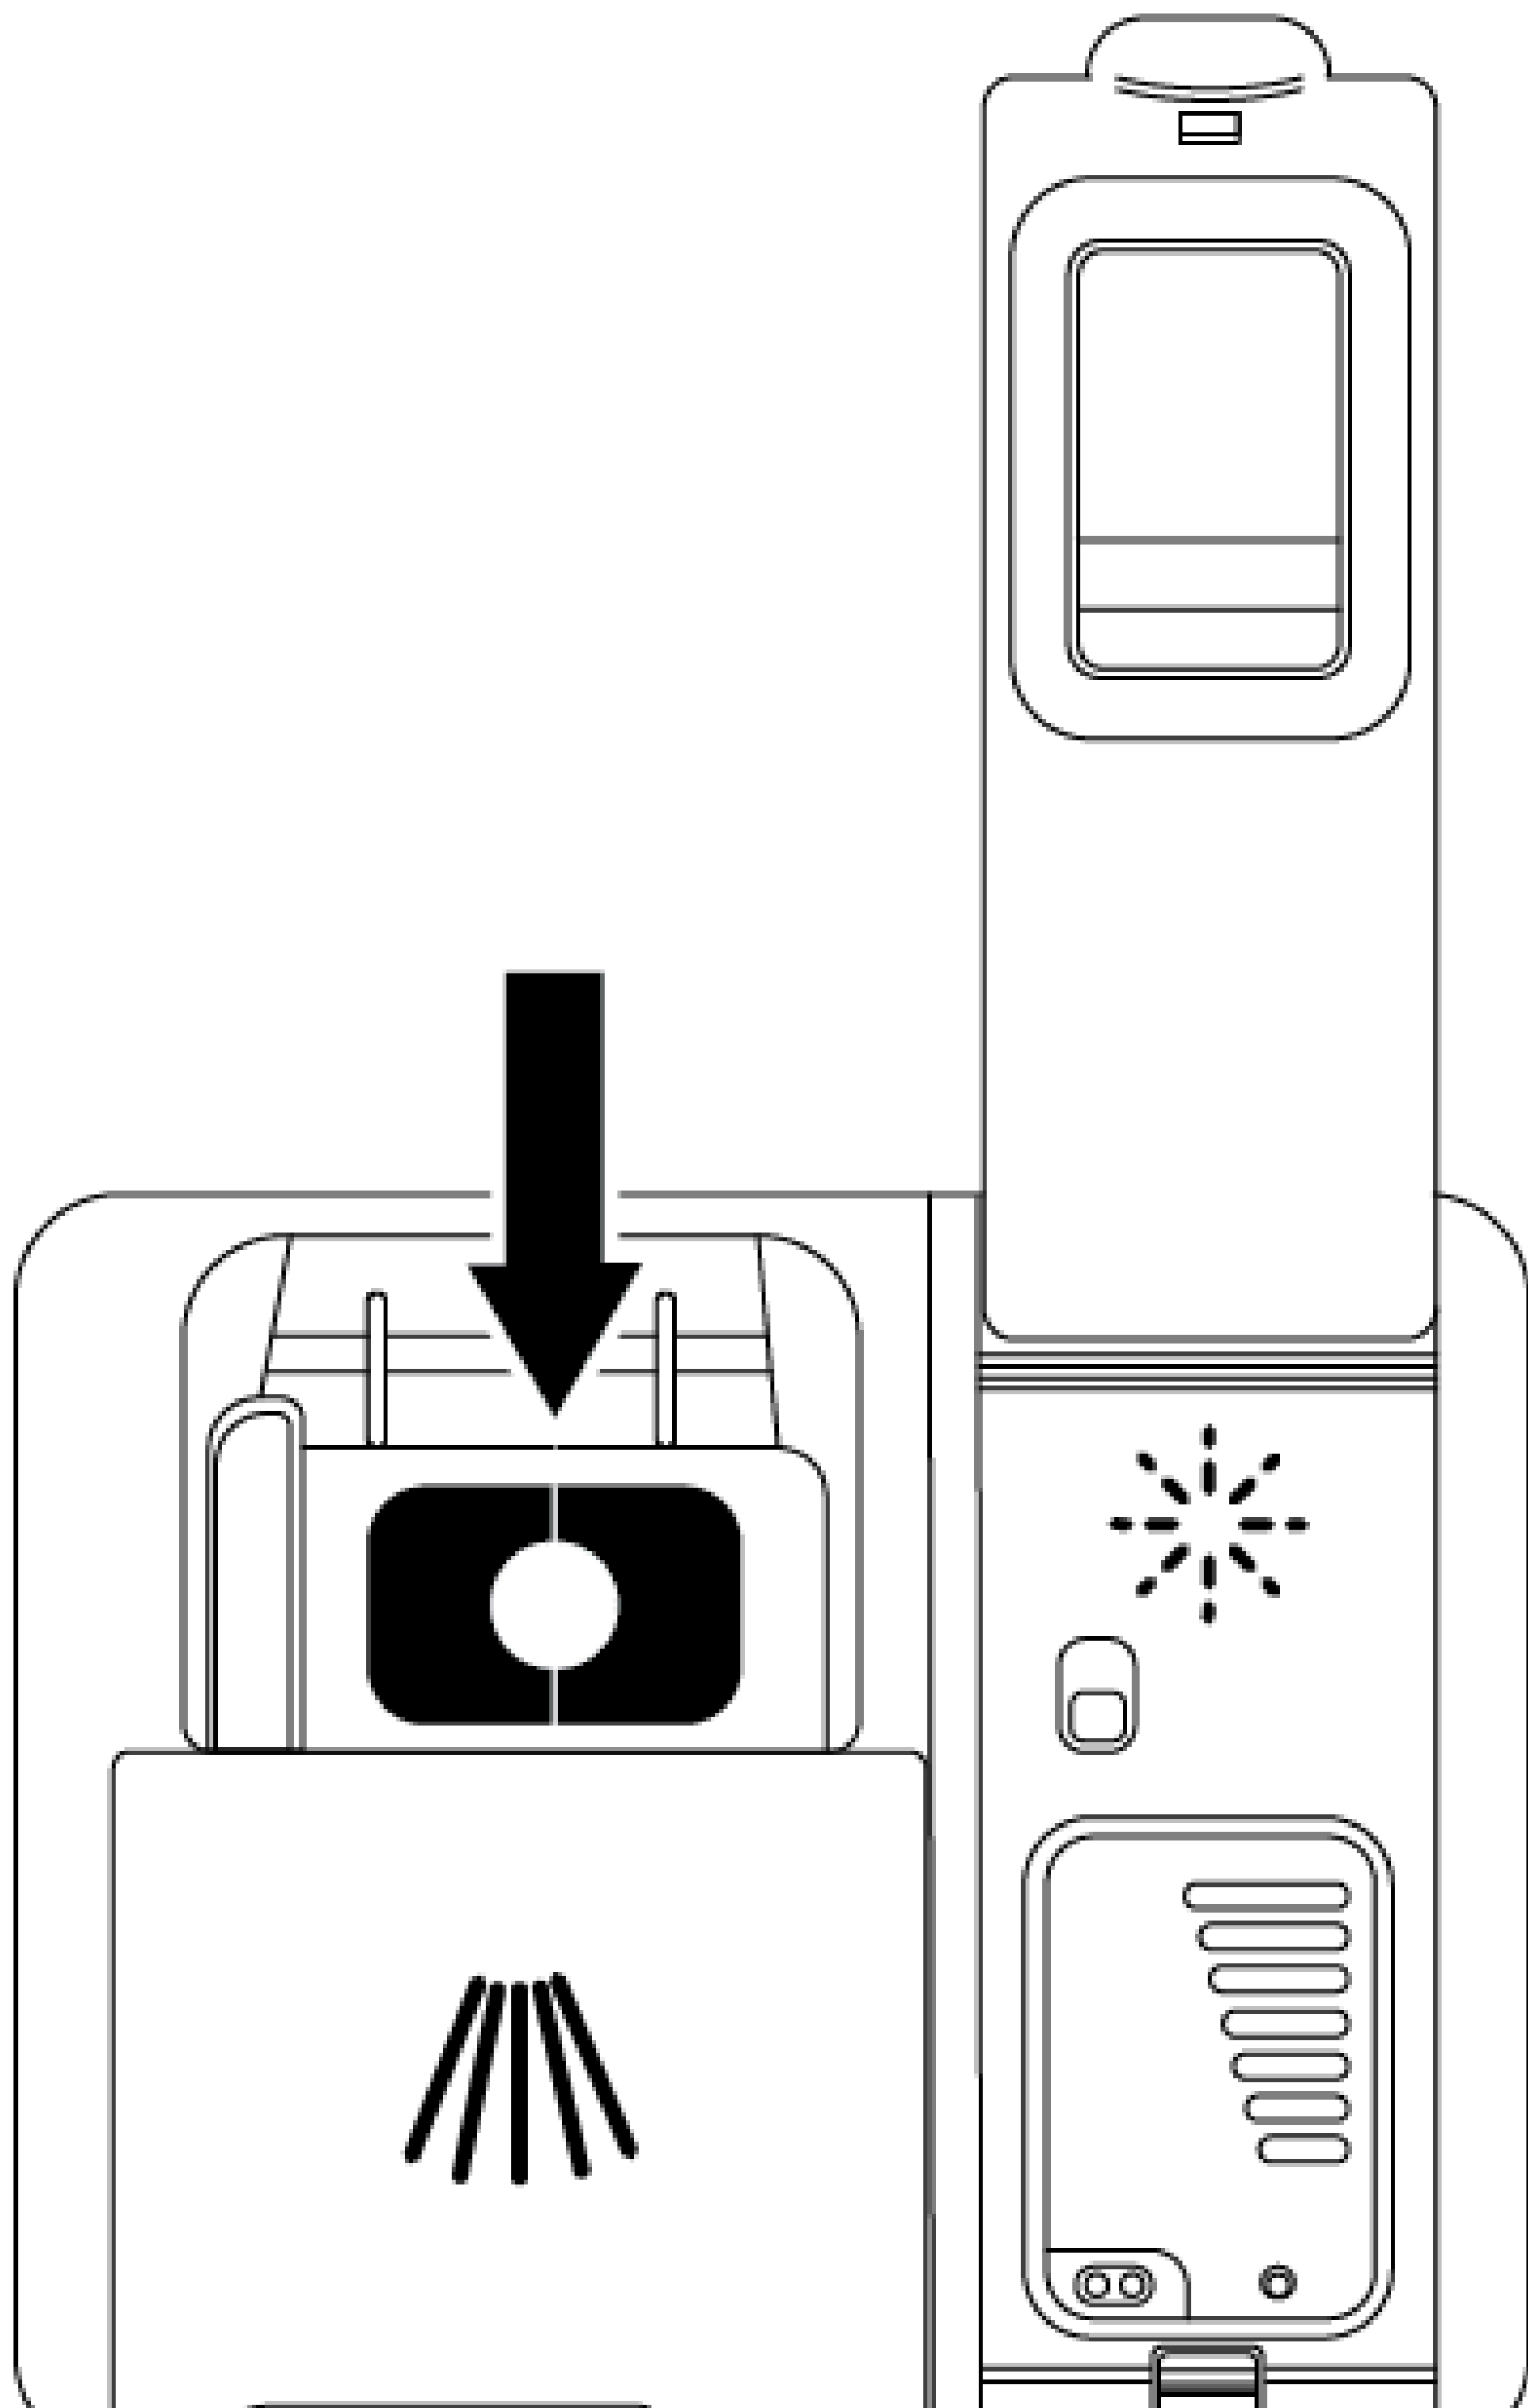



When using tablet detergents, follow the manufacturer's instructions on the detergent packaging.

When using tablet detergent, if your dishes are wet and/or you see lime stains, especially on your glasses, when the washing program ends, contact the detergent manufacturer.

When you switch from tablet detergent to powder detergent:

- Make sure the salt and rinse aid compartment is full.
 - Set the water hardness setting to the highest position and run a washing program while the machine is empty.
 - After empty washing, readjust the water hardness setting suitable for your mains water by referring to the user manual.
 - Adjust the appropriate rinse aid setting.
-


Polisher

The rinse aid used in dishwashers is a special composition intended to increase drying efficiency and prevent water or lime marks from remaining on the washed parts. For this reason, care should be taken to ensure that there is rinse aid in the rinse aid compartment and only use rinse aid produced for use in dishwashers.

Filling the rinse aid


1. Open the rinse aid lid using the latch.

1

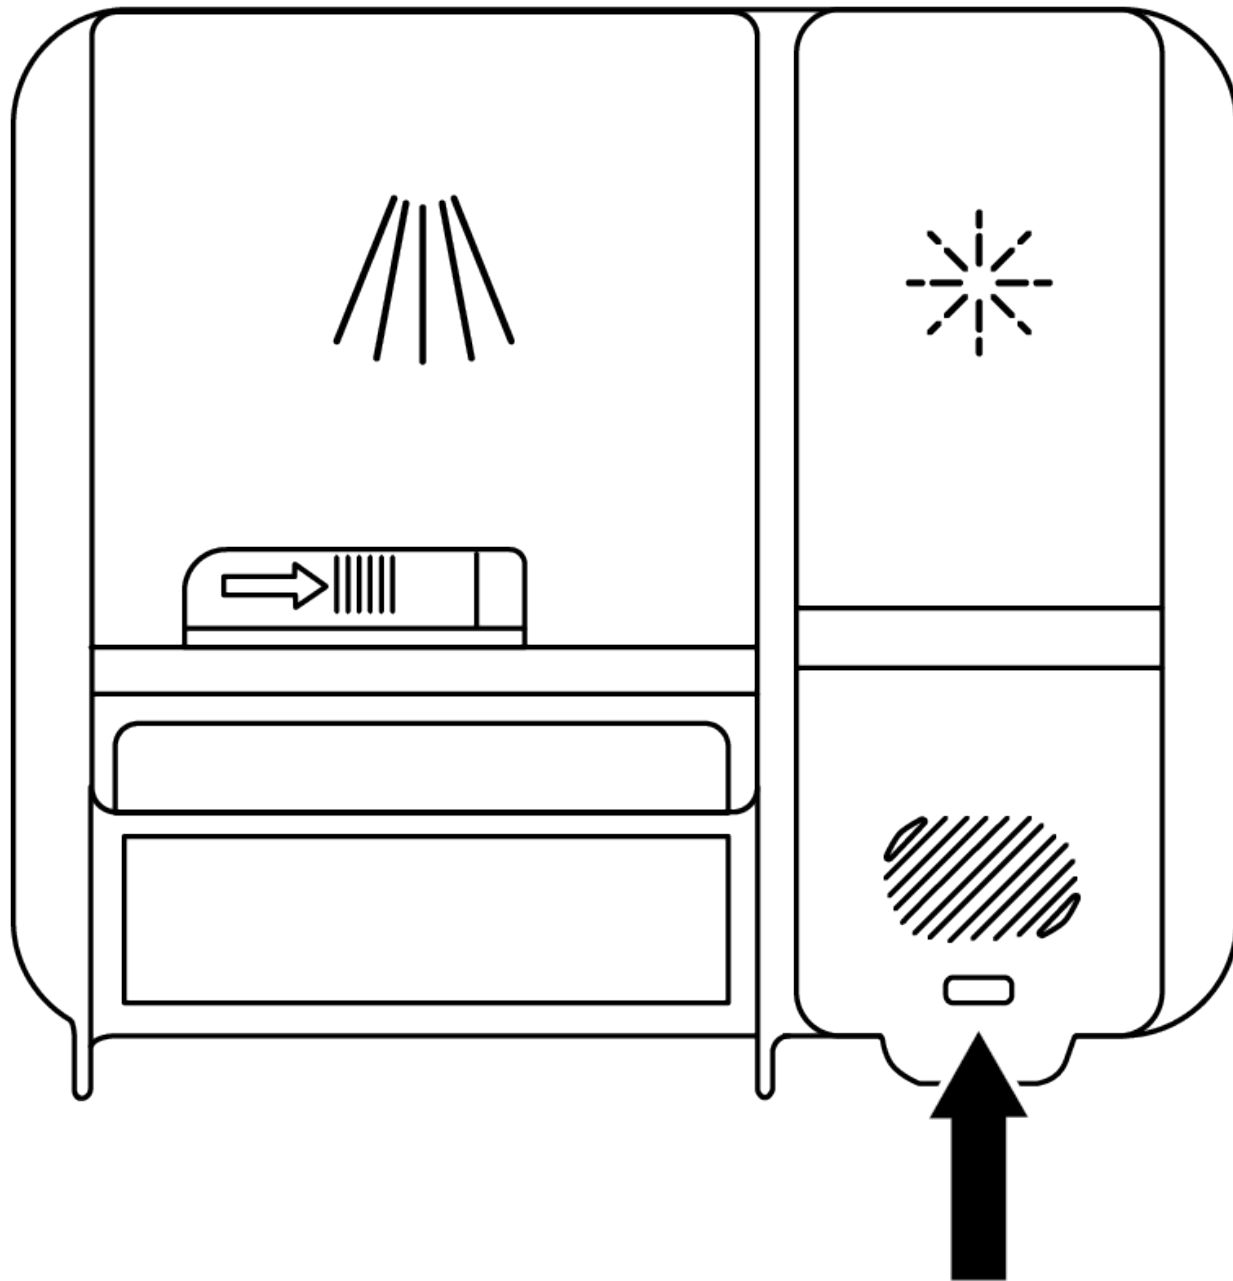


2. Fill the compartment to the MAX level.

2

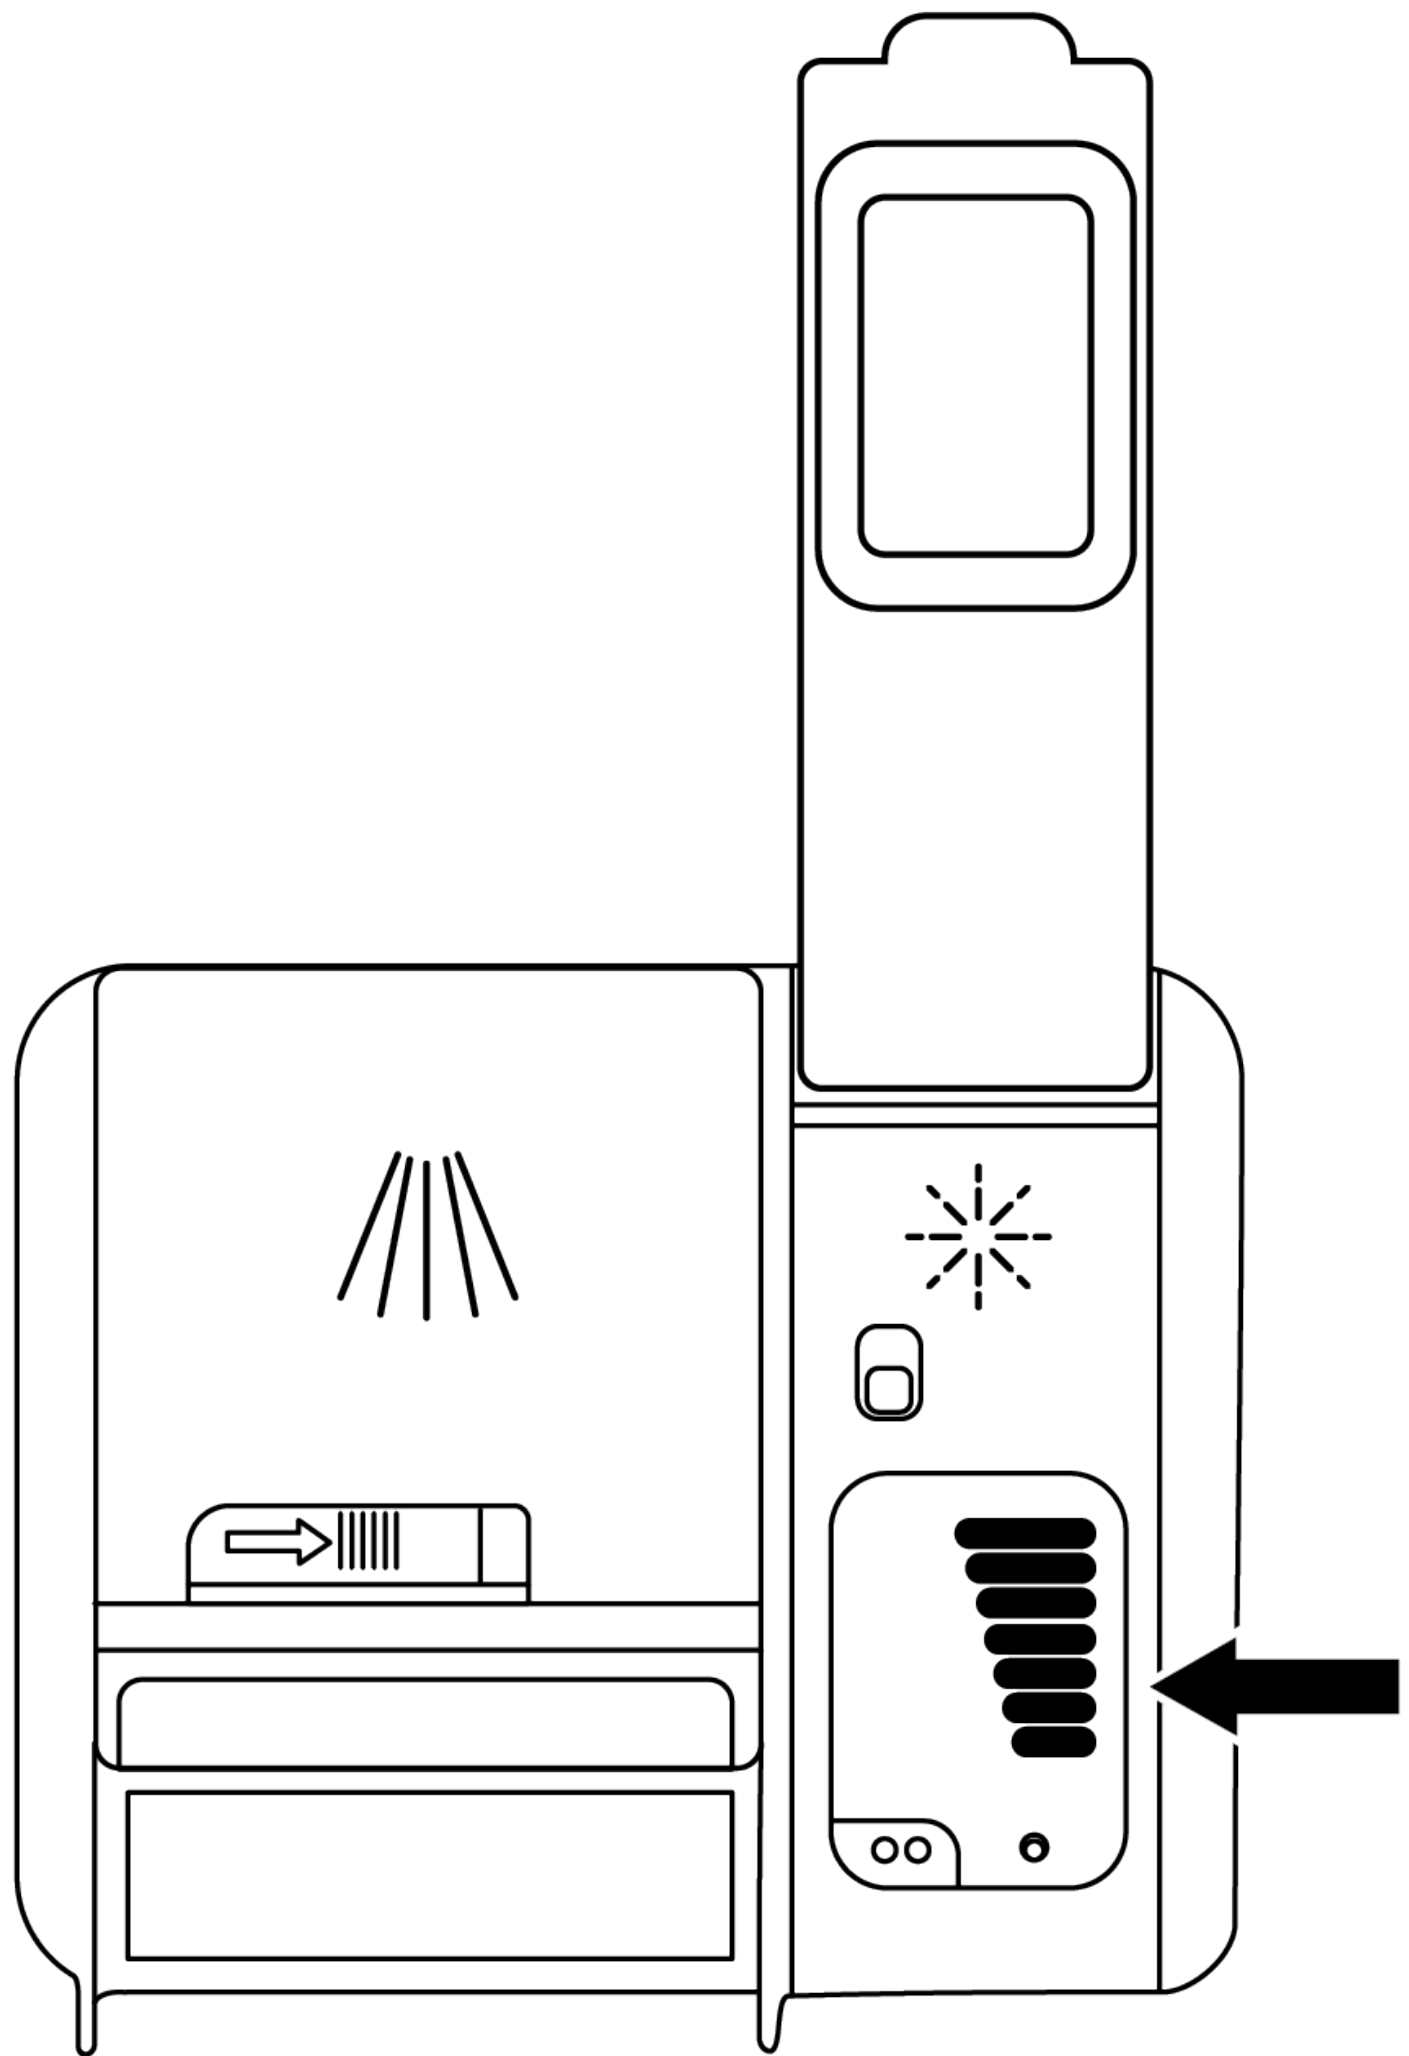

3. Close the compartment cover by pressing lightly on point (B).

3

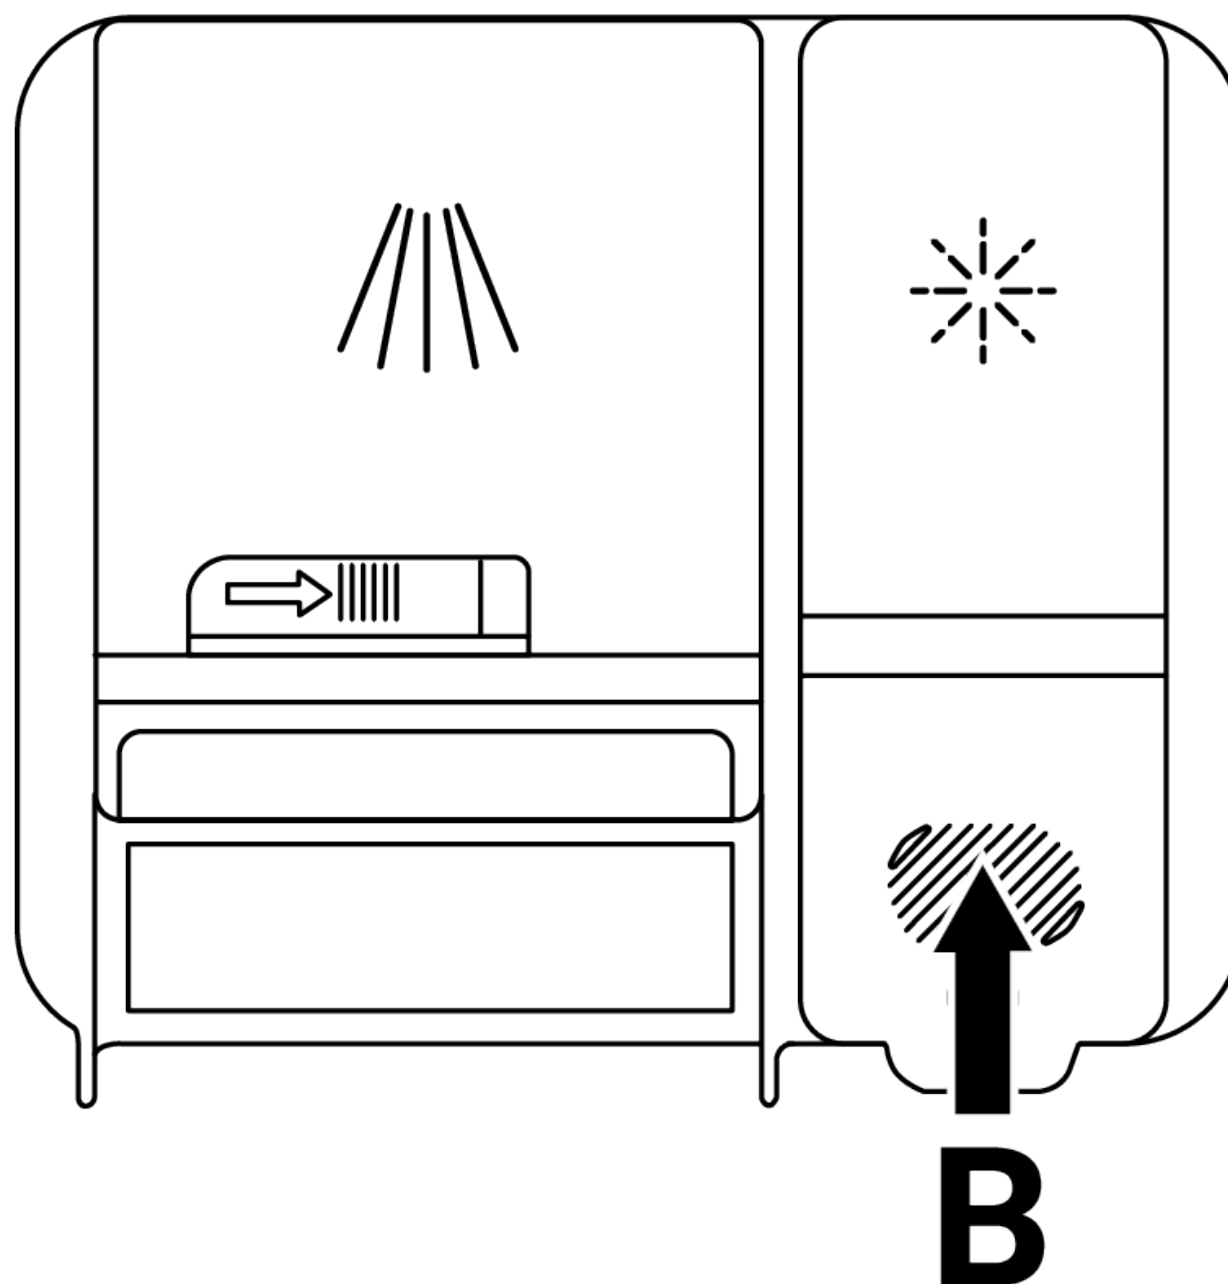

4. If water marks appear on the dinnerware after washing, it is necessary to increase the level of the adjuster, and if a blue trace remains when wiped by hand, it is necessary to decrease it. This setting is set to position 3 at the factory.

ANNOUNCEMENT



Rinse aid adjustment is explained under the heading "Adjusting the amount of rinse aid" in the operating section of the machine.

ANNOUNCEMENT



Wipe up any spilled rinse aid outside the compartment. Accidentally spilled rinse aid will cause foaming and will reduce washing performance.

Parts that are not suitable for washing in the dishwasher

- Cigarette ash, candle residue, polish, paint, chemicals, etc. Never wash dirty dishes in the machine.
- Do not wash wooden or bone-handled forks, spoons and knives, glued parts, non-heat-resistant plastic parts, copper and tin pots in the machine.

ANNOUNCEMENT



Just like hand washing in the dishwasher, decorative prints of porcelain, aluminum and silver may fade and darken. Some delicate types of glass and crystals may lose transparency over time. We recommend that you pay particular attention to the fact that the new tableware you purchase is suitable for washing in the dishwasher.

Adjusting the upper basket height

(Depending on model)


The upper basket height adjustment mechanism is designed to allow you to create larger spaces in the lower or upper area of the machine according to your needs by adjusting the height of your basket up or down when it is empty or full.

With this mechanism, you can use your basket in three different positions: bottom, middle and top.

To lower the basket, while the basket is at the top position;


1. Hold the upper basket wires with both hands and lift the handle on the mechanism upwards as shown in the figure (A).
2. Lower the basket from its current position to the lower position.
3. Release the basket when your basket reaches the lower level.

If the height is not sufficient, repeat the same process.

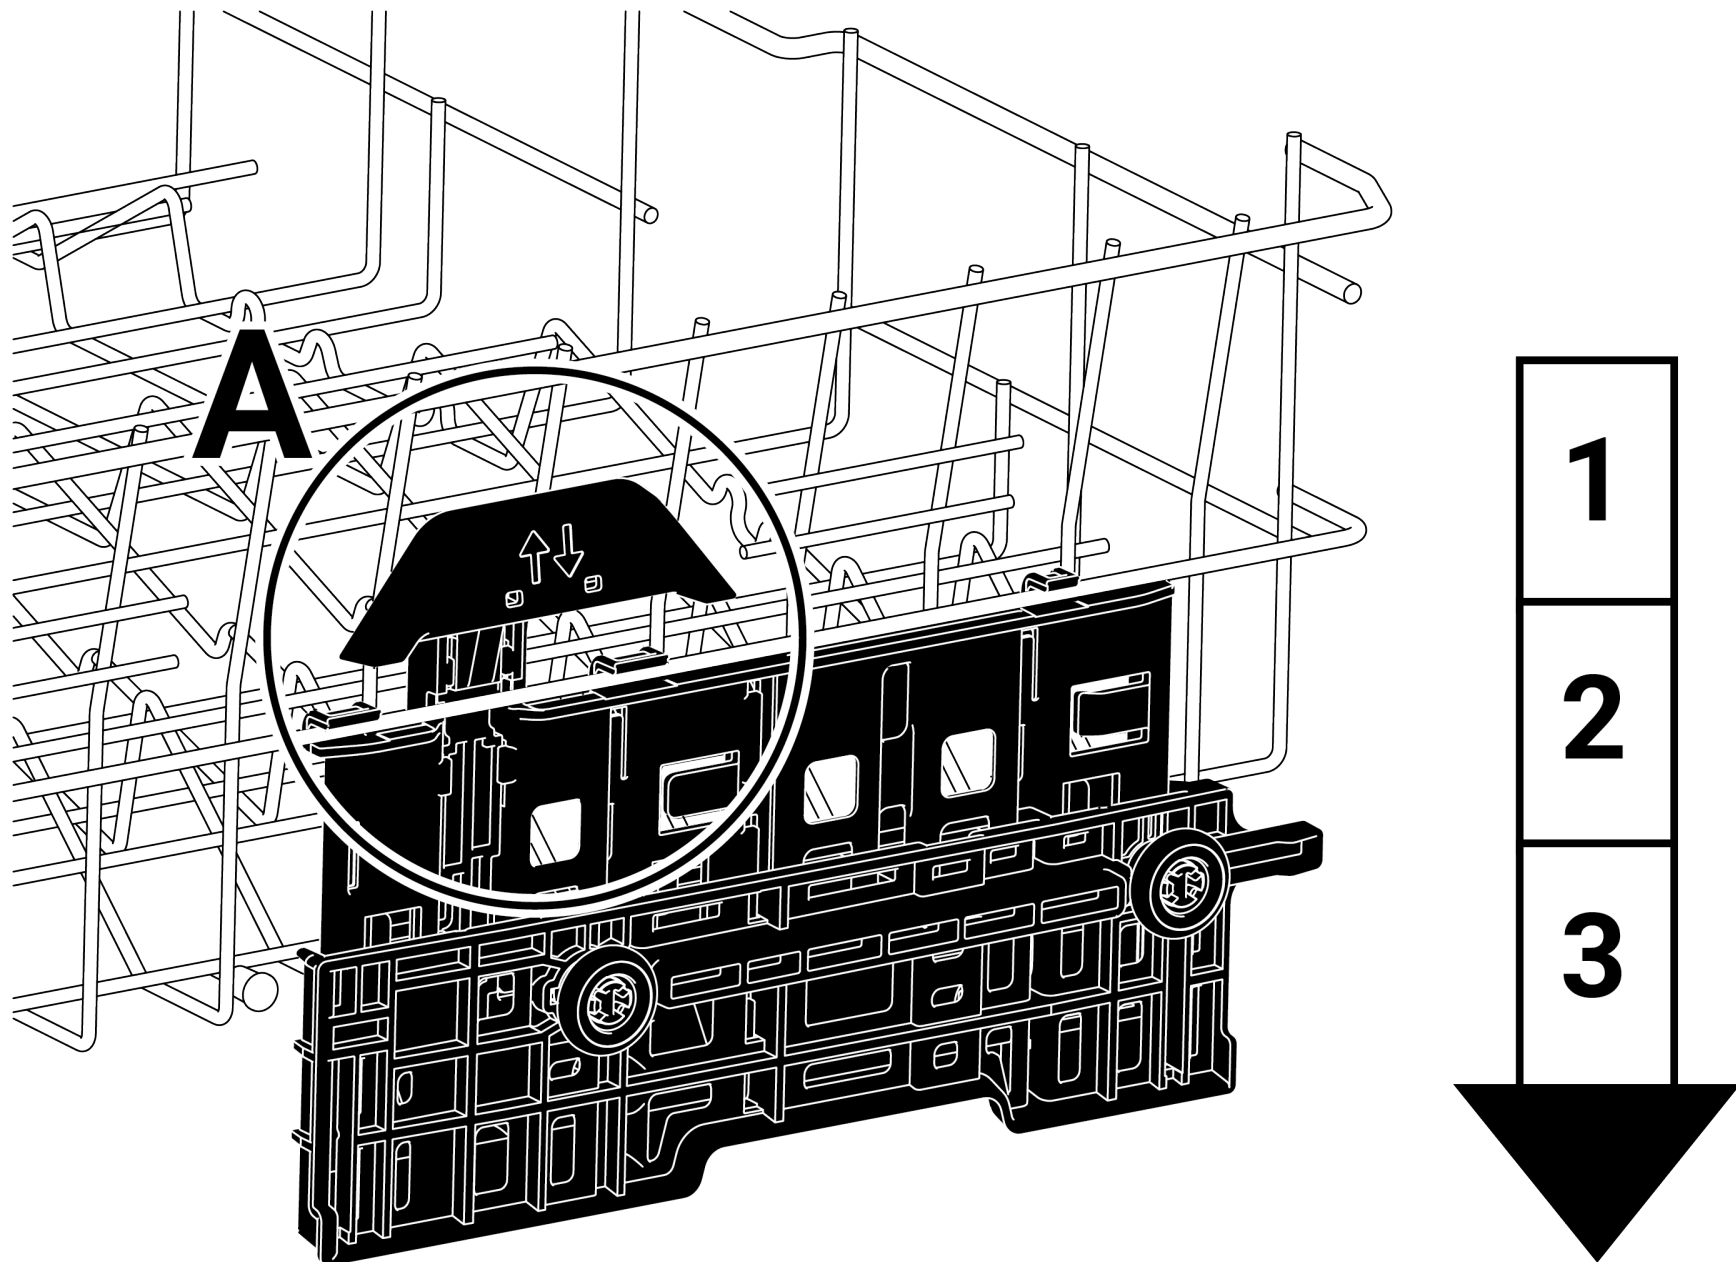

1. To raise your basket, while the basket is in the lowest position, hold the upper basket wires with both hands and pull them upwards (B).
2. Release the basket when the basket catches the upper stage with the "Click" sound coming from the right and left mechanisms.

If the height is not sufficient, repeat the same process.

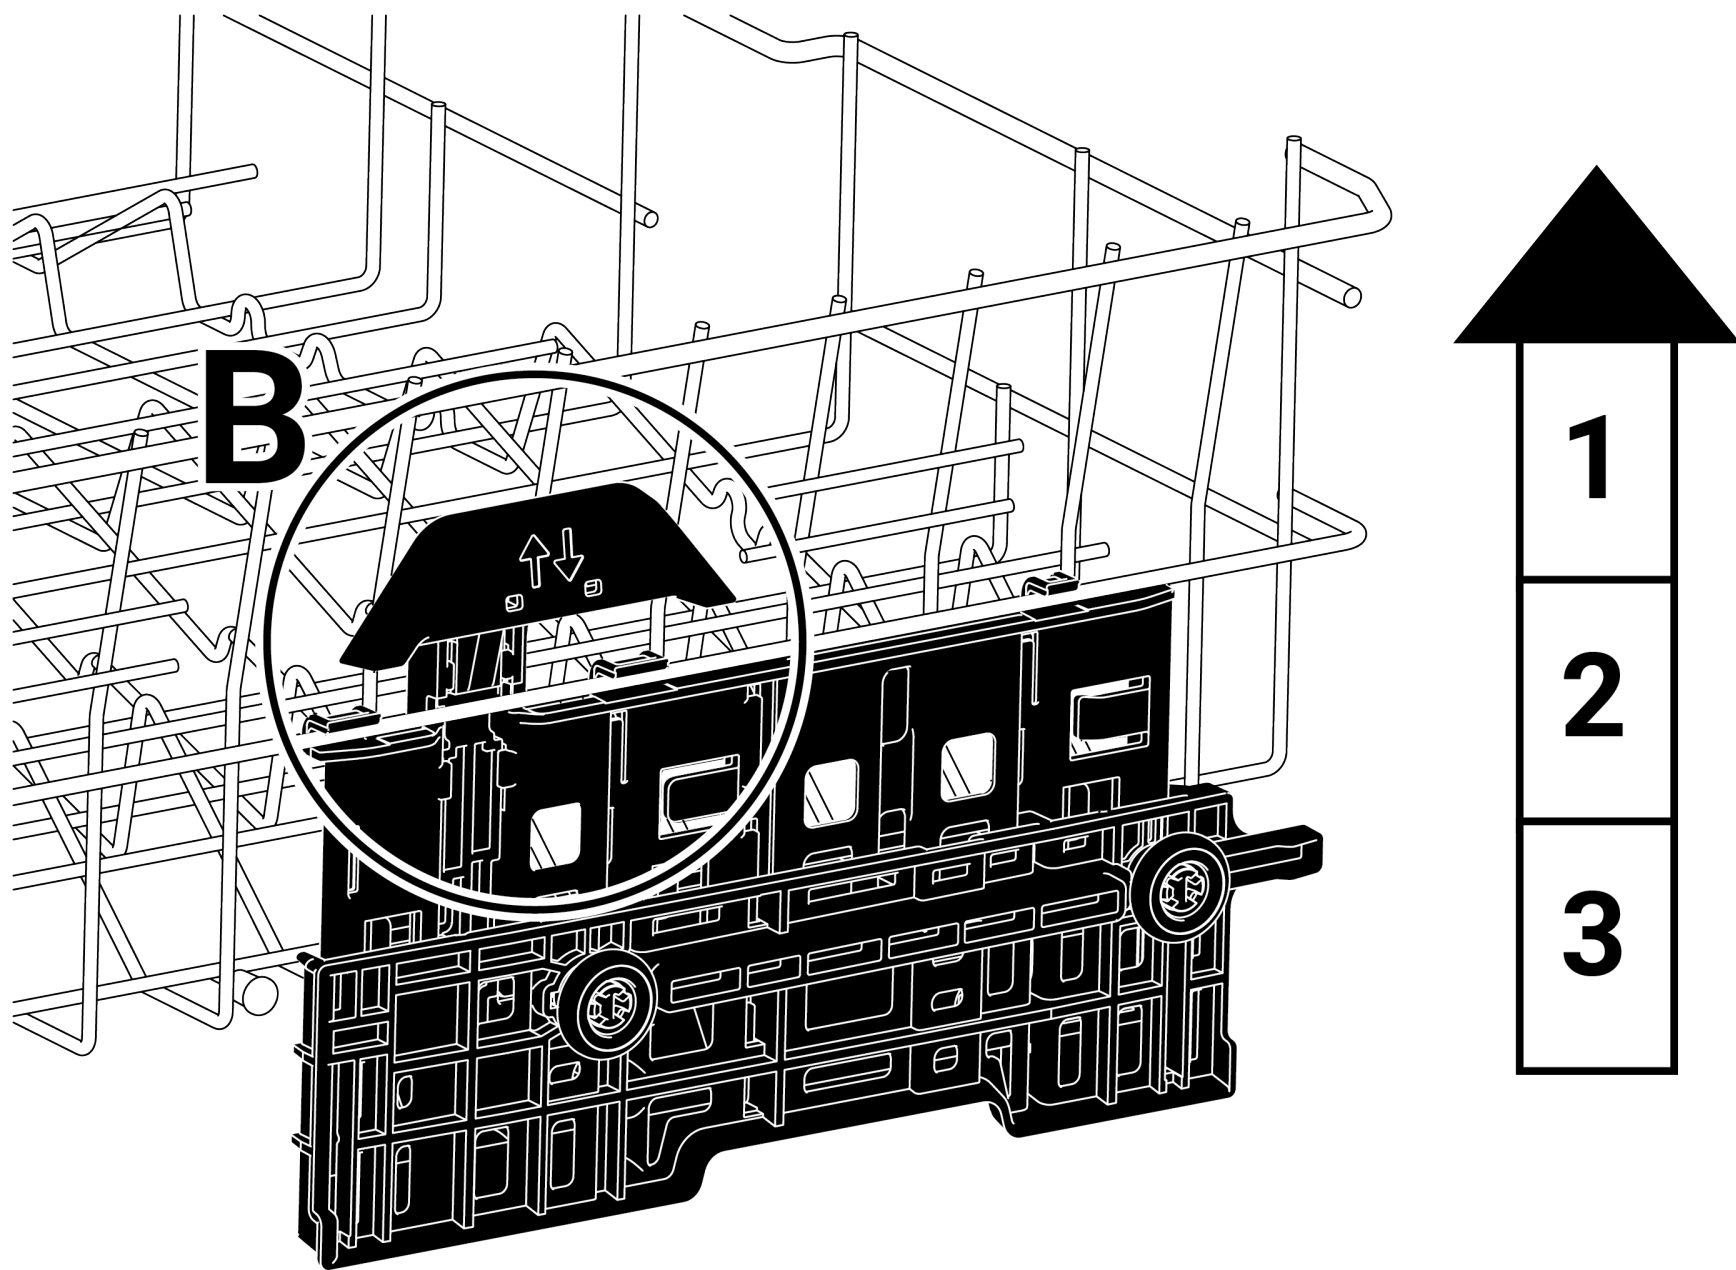

ANNOUNCEMENT



In conditions where the upper basket is overloaded or the weight distribution is unbalanced, the movement mechanism may not work properly. In more severe conditions, there is a risk of falling to the lower level.

ANNOUNCEMENT




Make sure that the adjustment mechanism is in the same position on the right and left of the upper basket.

Foldable upper basket wires

(Depending on model)

You can use foldable racks when you need ample space for your large dishes in the upper basket of the machine.

To put the foldable wires into a lying position, hold the wires in the middle and push them in the direction of the arrow in the picture. Place your large dishes in the area to be created. Lift the wires up to return them to an upright position.

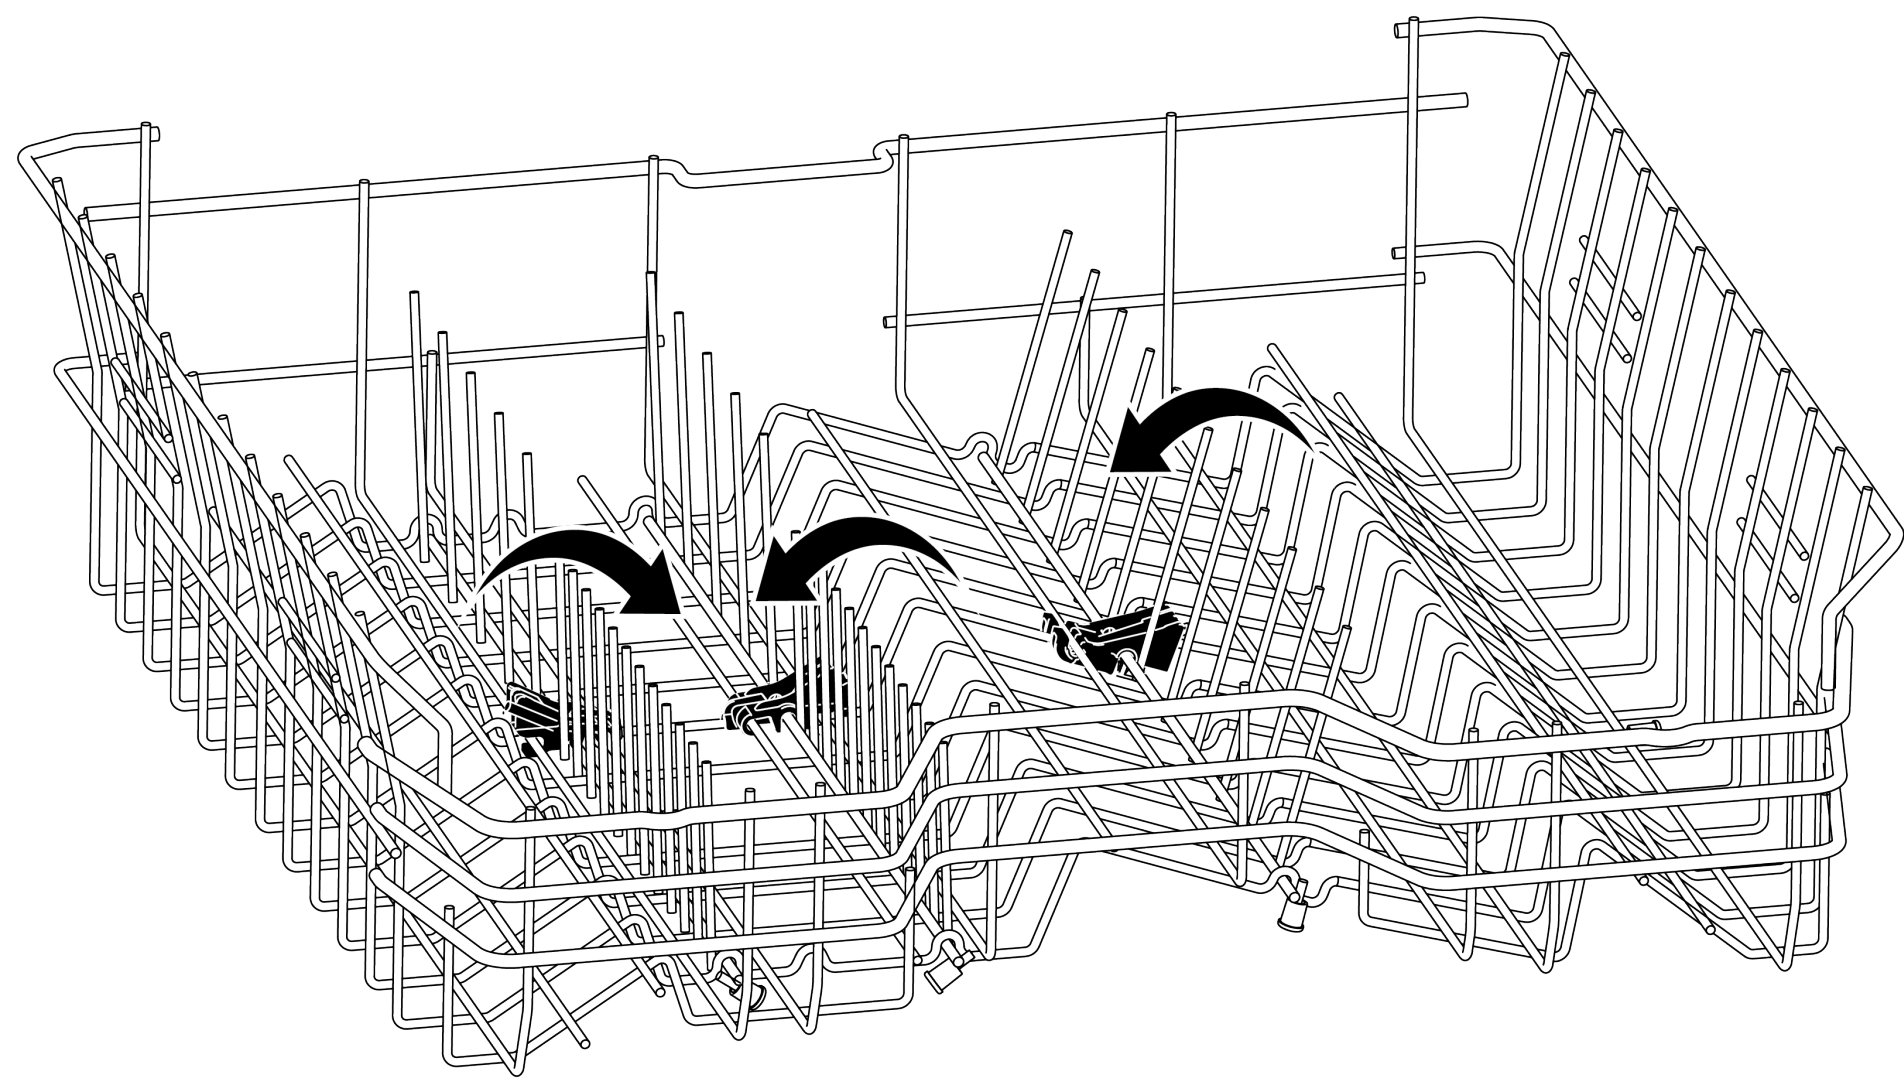

ANNOUNCEMENT




Holding the ends of the wires and placing them in a lying position may cause them to bend. For this reason, hold the middle wires at their bases and push them in the direction of the arrow, placing them in a lying or upright position.

Height Adjustable Top Basket Rack

(depending on model)


Height adjustable shelves in the upper basket of the machine; bottom and top sides, glasses, cups, etc. You can use it as you wish by positioning it up or down depending on the height of the dishes (A, B, C).

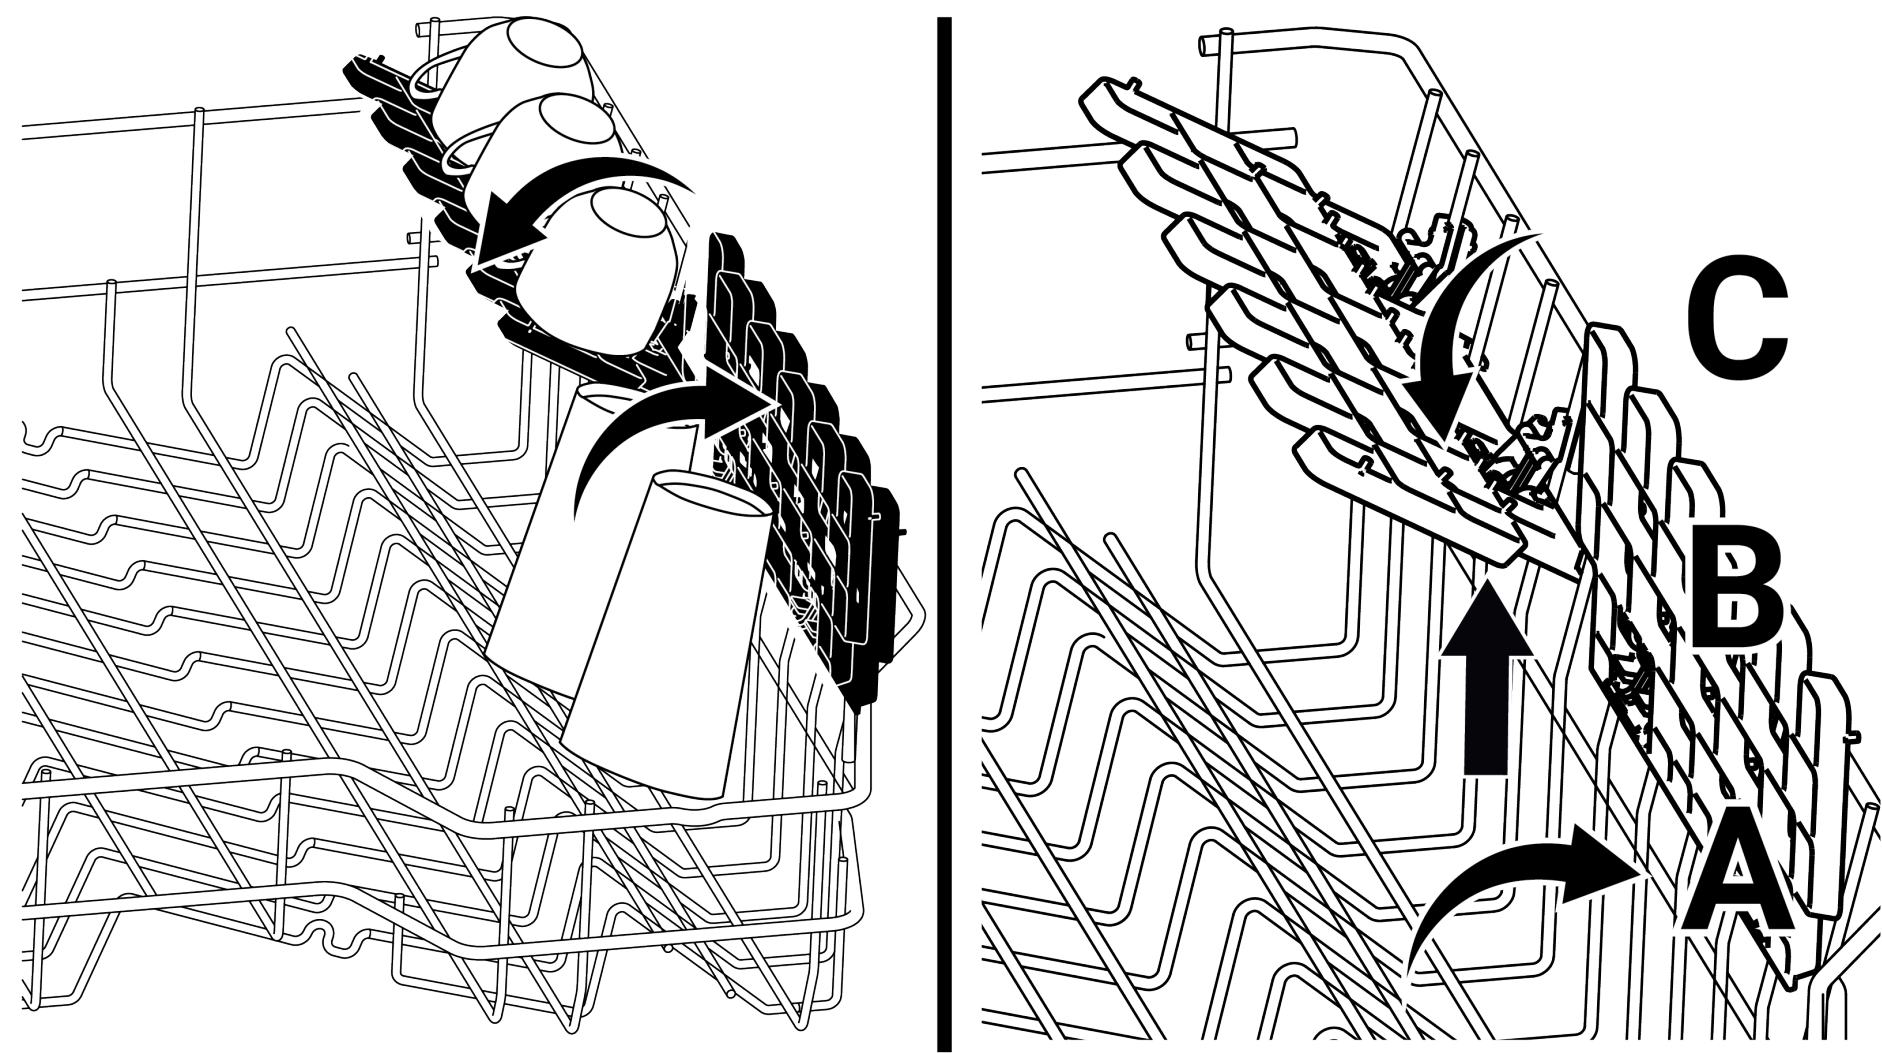


Foldable lower basket wires

(Depending on model)

The folding wires (A), which are located in the lower basket of the machine and consist of six parts, can be used for pots, bowls, etc. It is designed so that you can place large items more easily. If you wish, you can create larger areas by folding each piece individually or all at once.

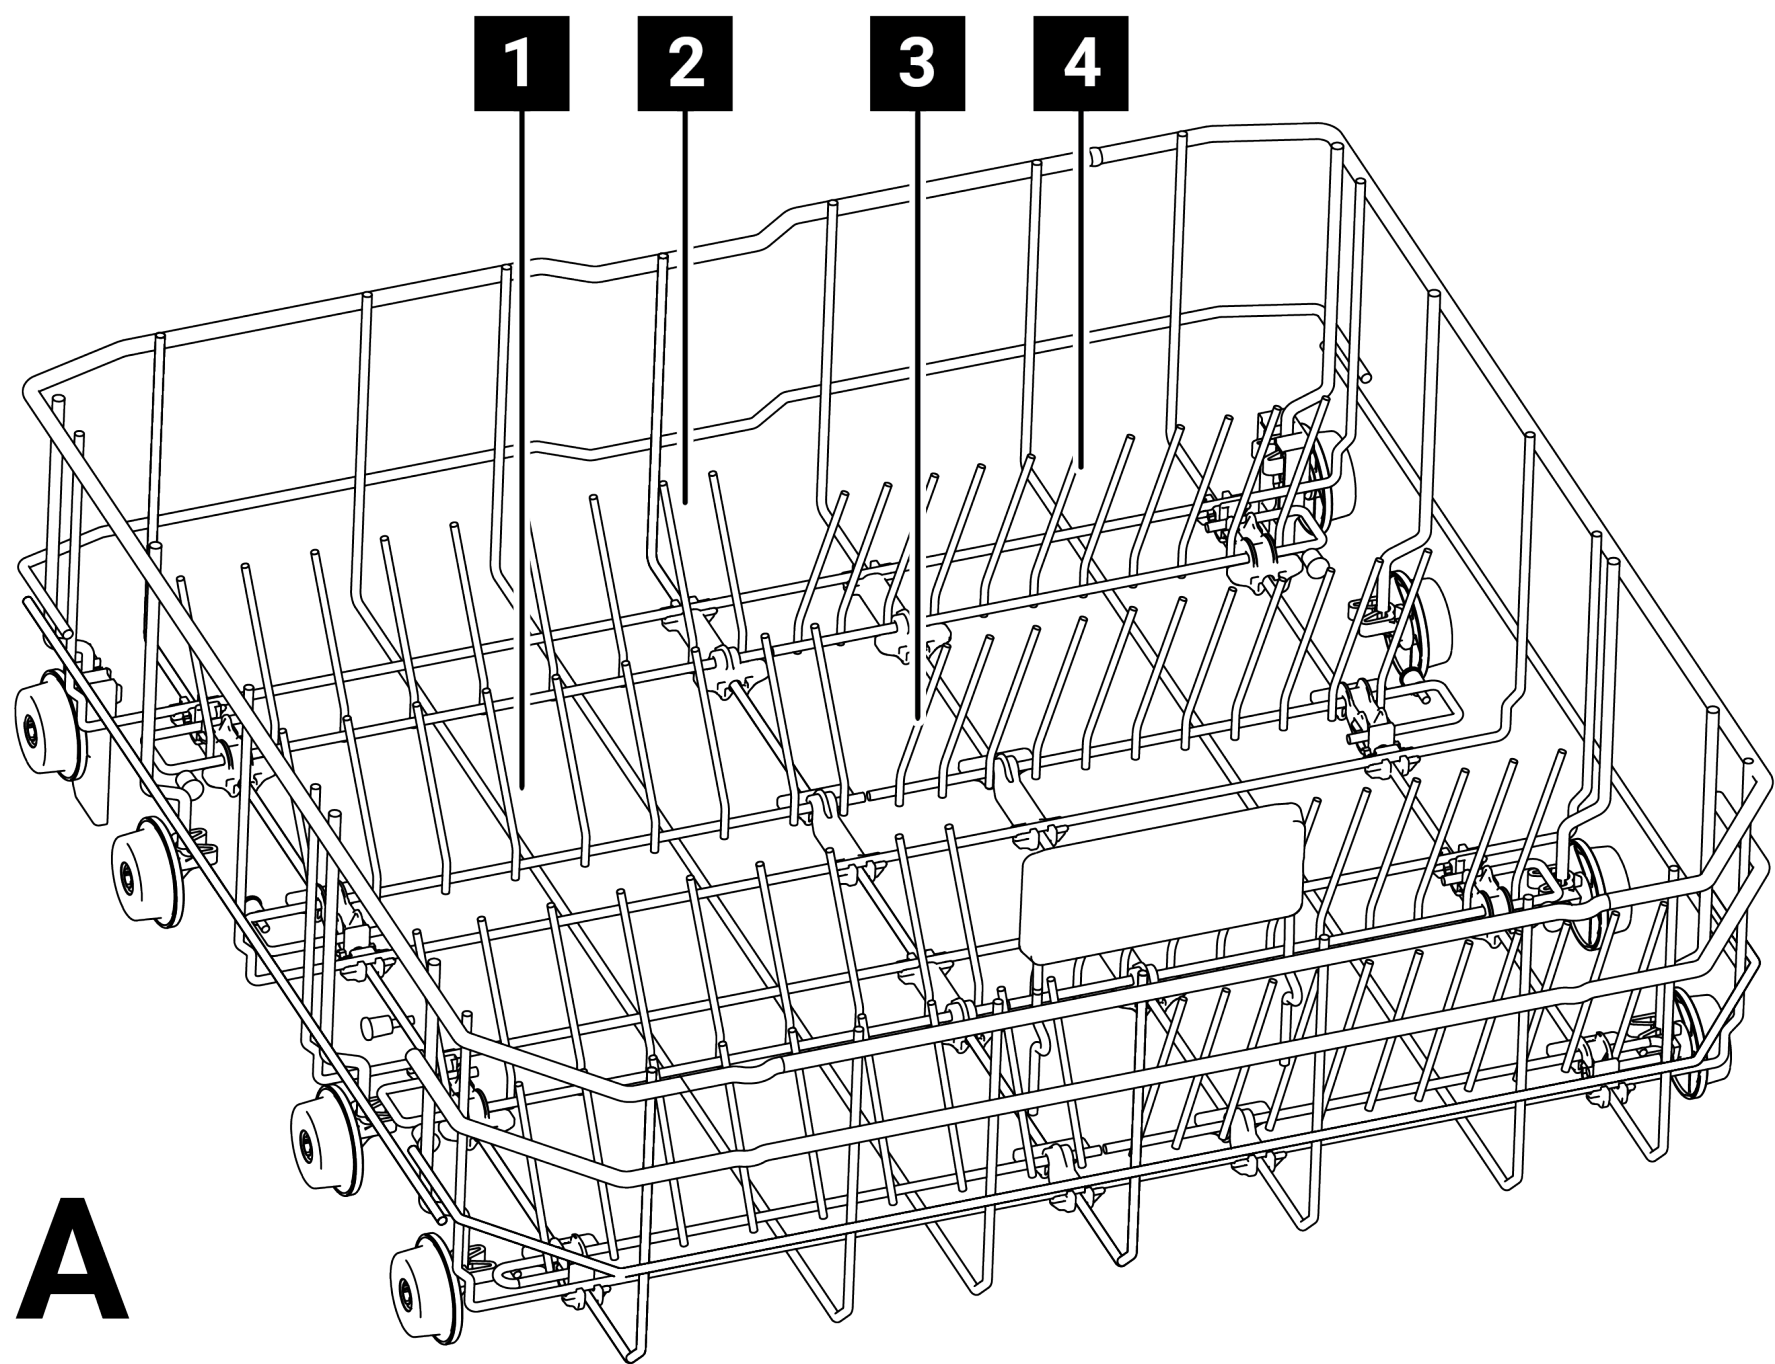

To put the foldable wires in a lying position, hold the wires in the middle and push them in the arrow directions (B). Lift the wires up to return them to an upright position. The foldable wires will snap back into the latch (C).

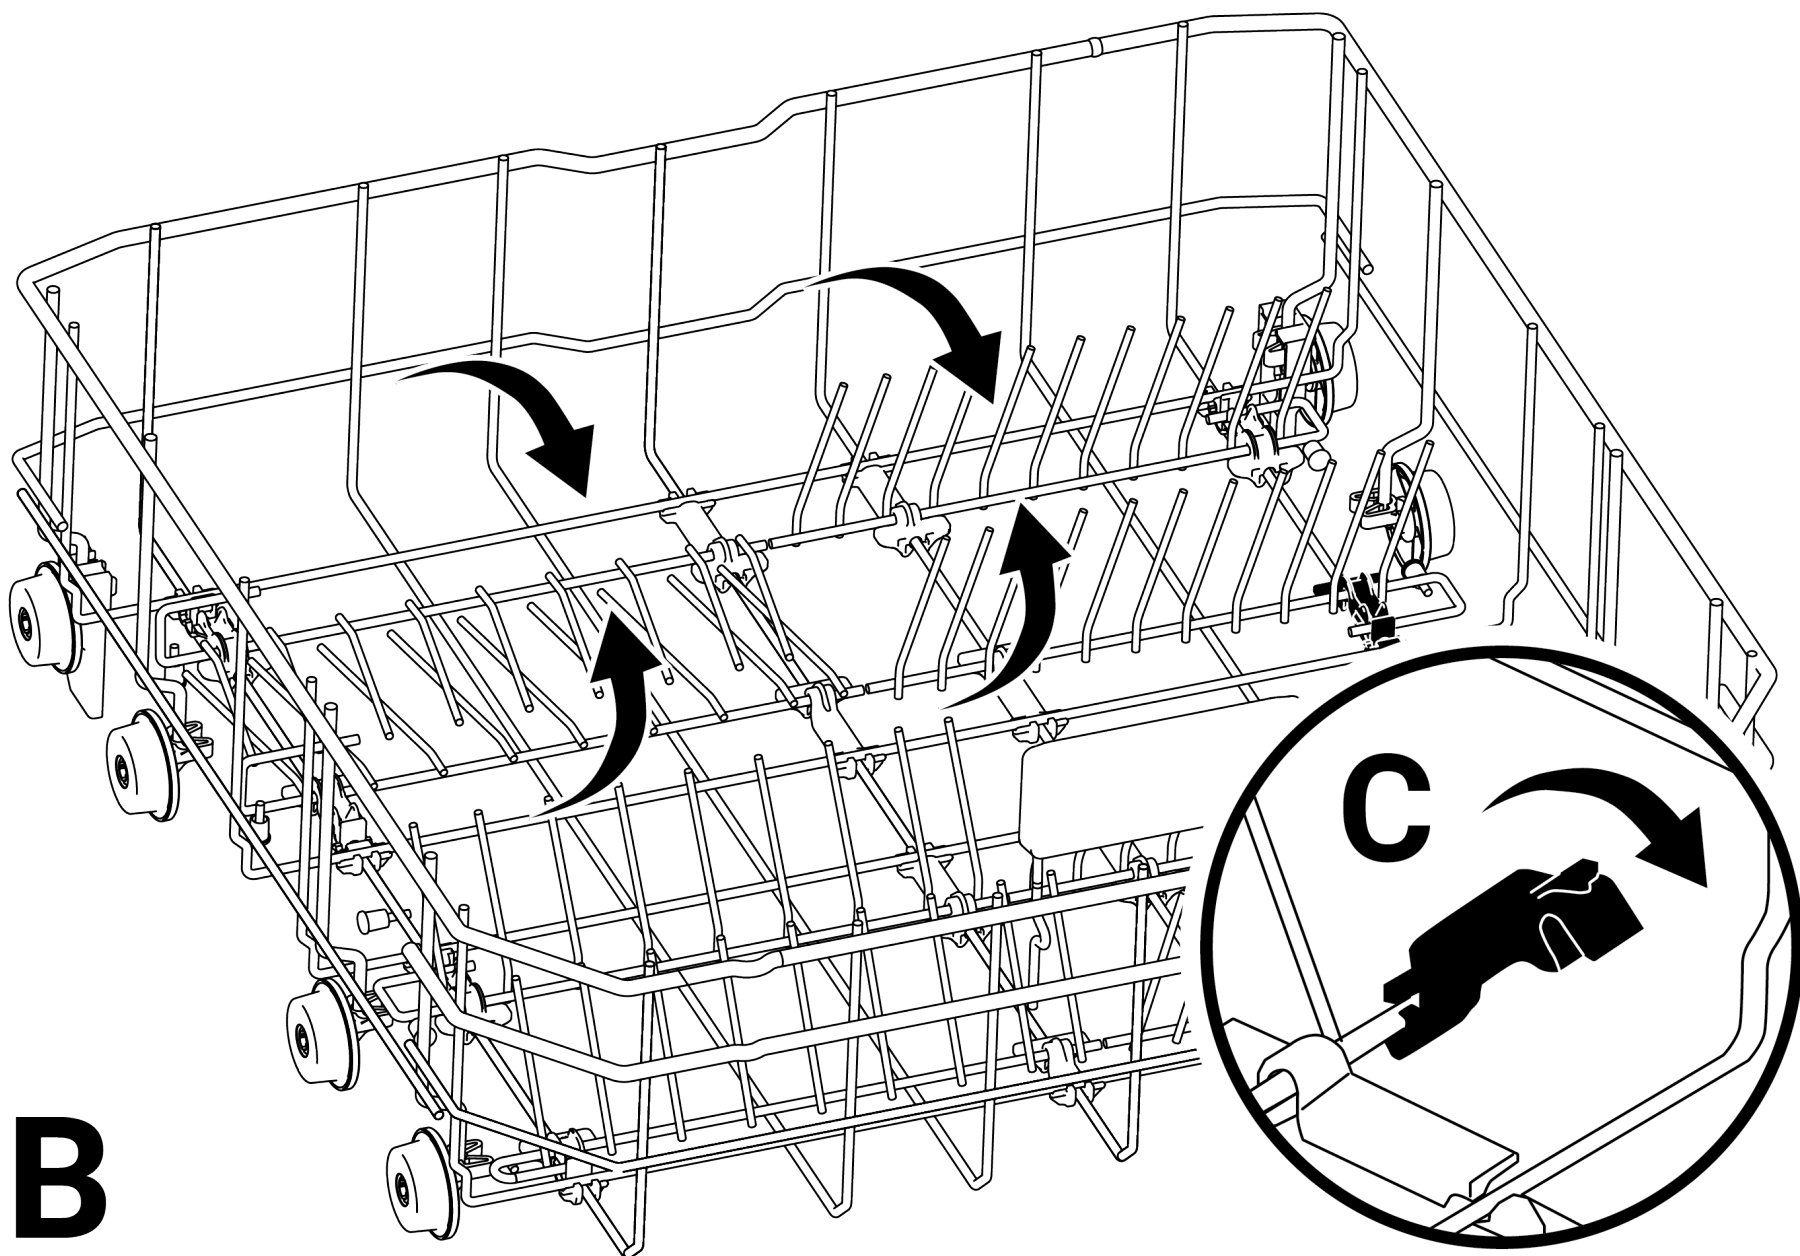

ANNOUNCEMENT




Holding the ends of the wires and placing them in a lying position may cause them to bend. For this reason, hold the middle wires at their bases and push them in the direction of the arrow, placing them in a lying or upright position.


Top basket multi-purpose serving rack

(Depending on model)


Thanks to the multi-purpose service rack on the top basket of your machine, long serving and kitchen utensils can be easily loaded and washed. In addition, the goblet foot fixing sections on the front of this accessory help to place glasses of appropriate size into the upper basket more easily.

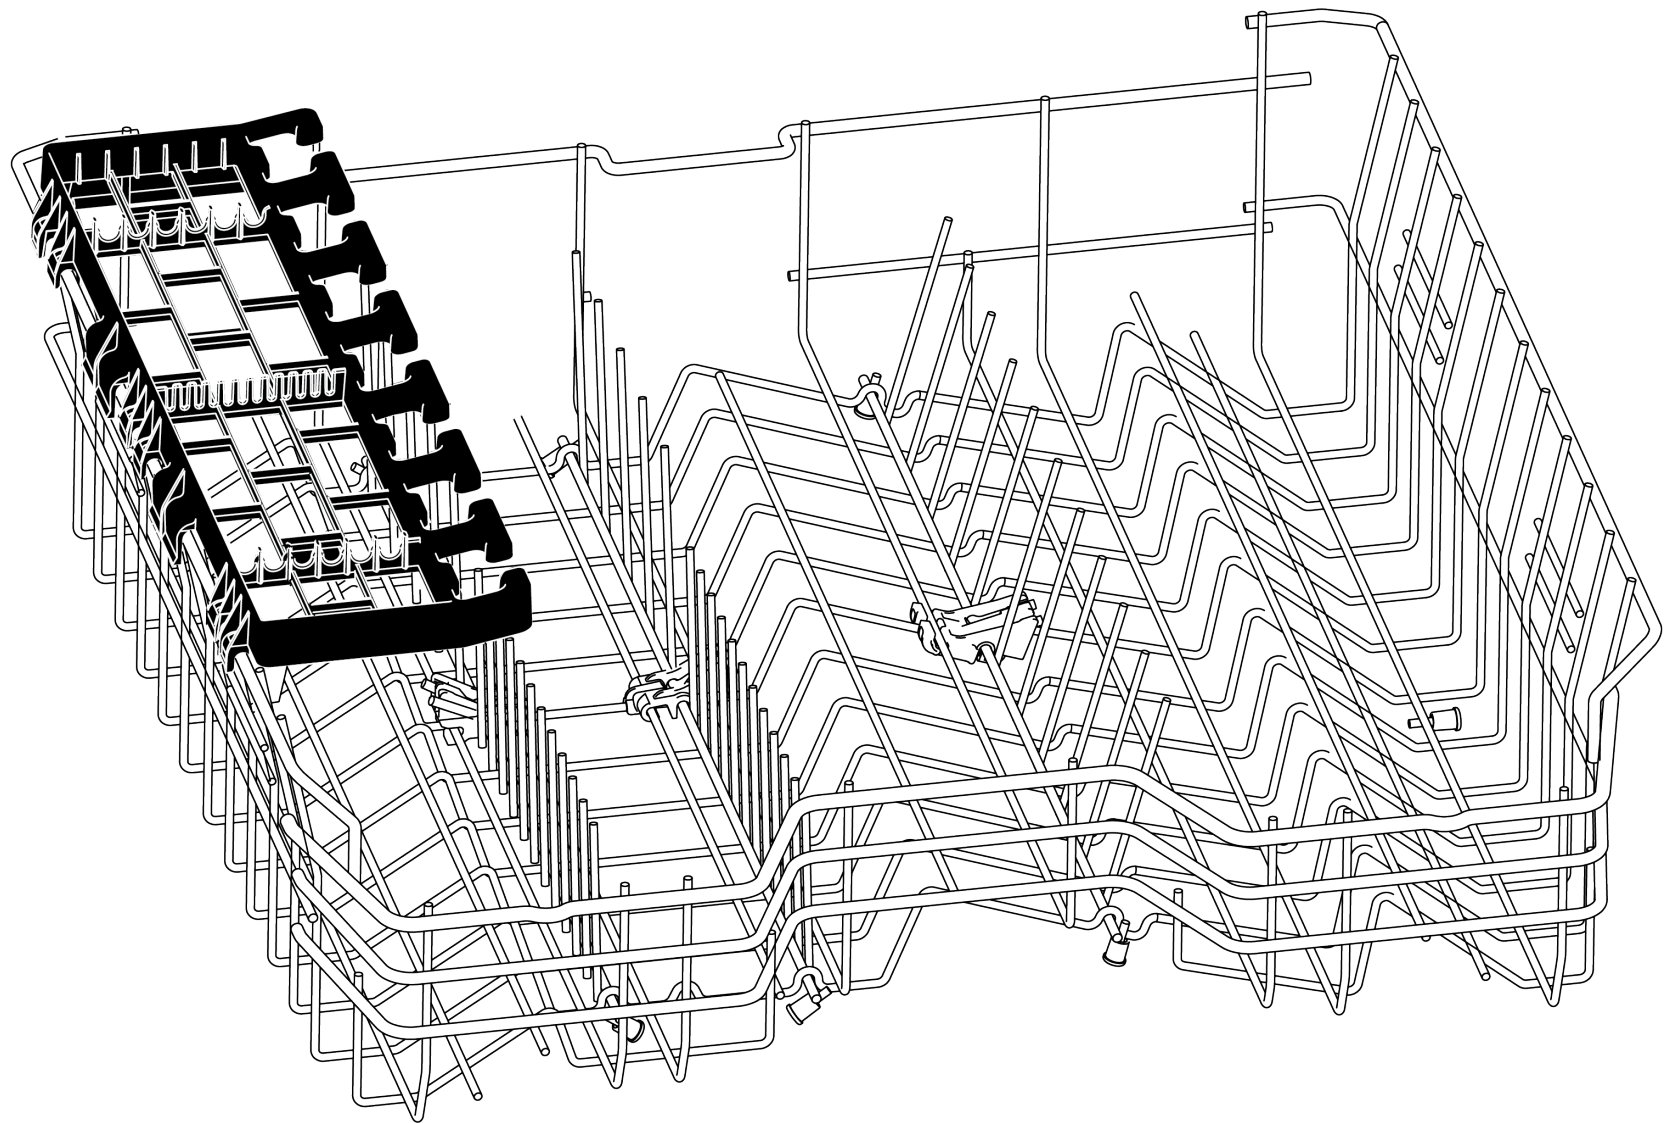

When you do not want to use it, you can remove the upper basket by lifting up the multi-purpose service shelf.

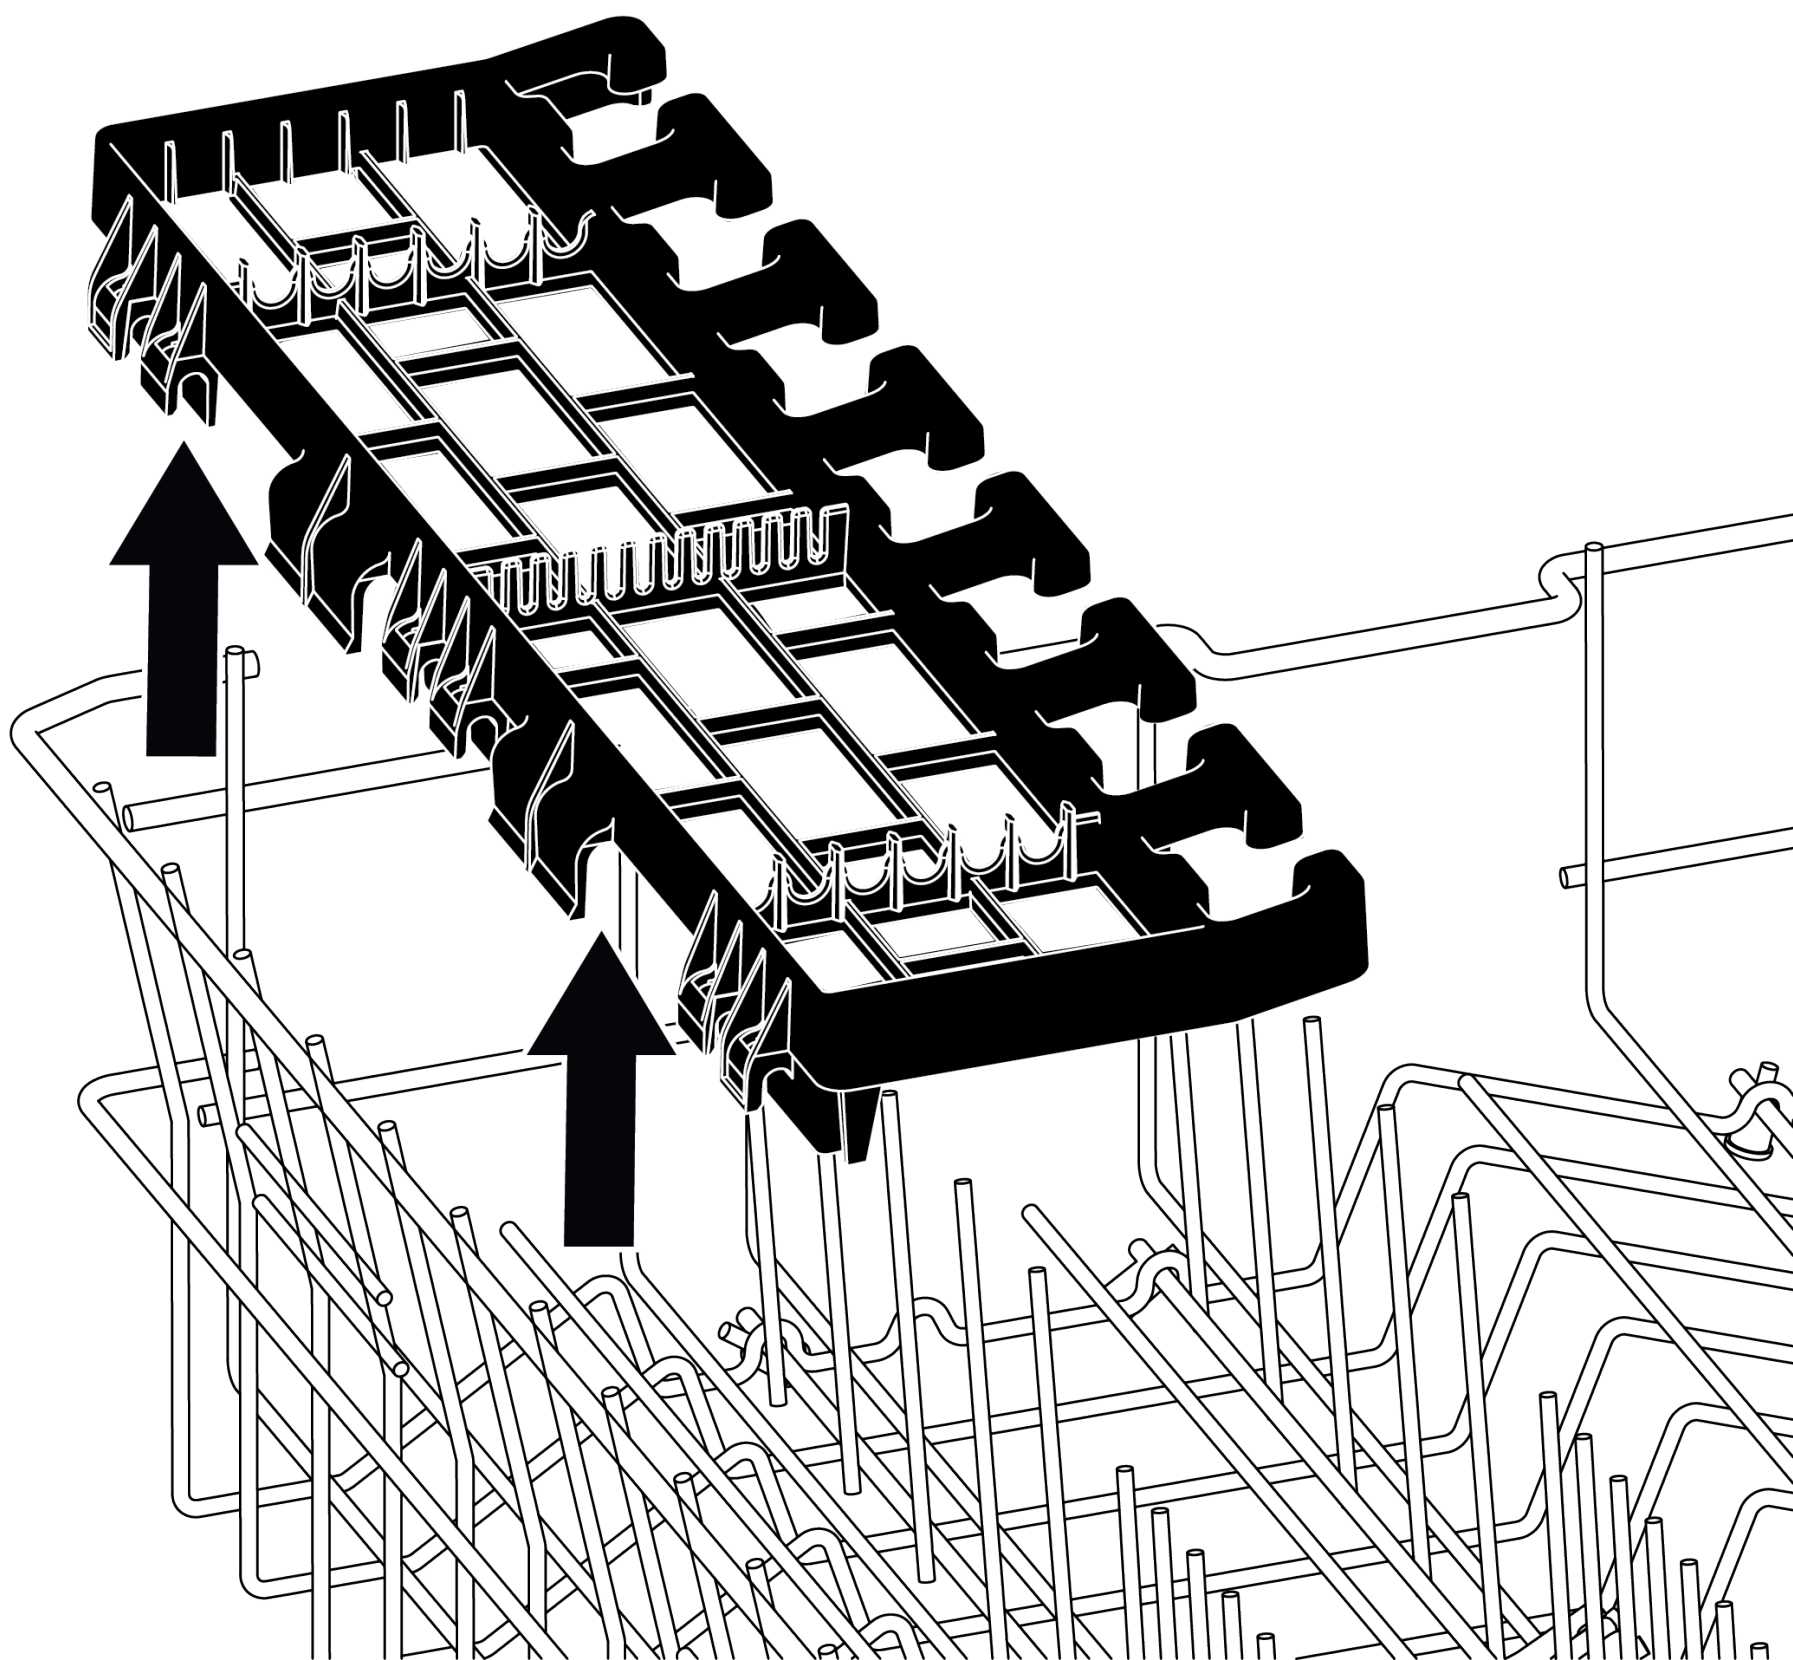

You can easily attach the top basket multi-purpose serving rack to the edge of your top basket for reuse.


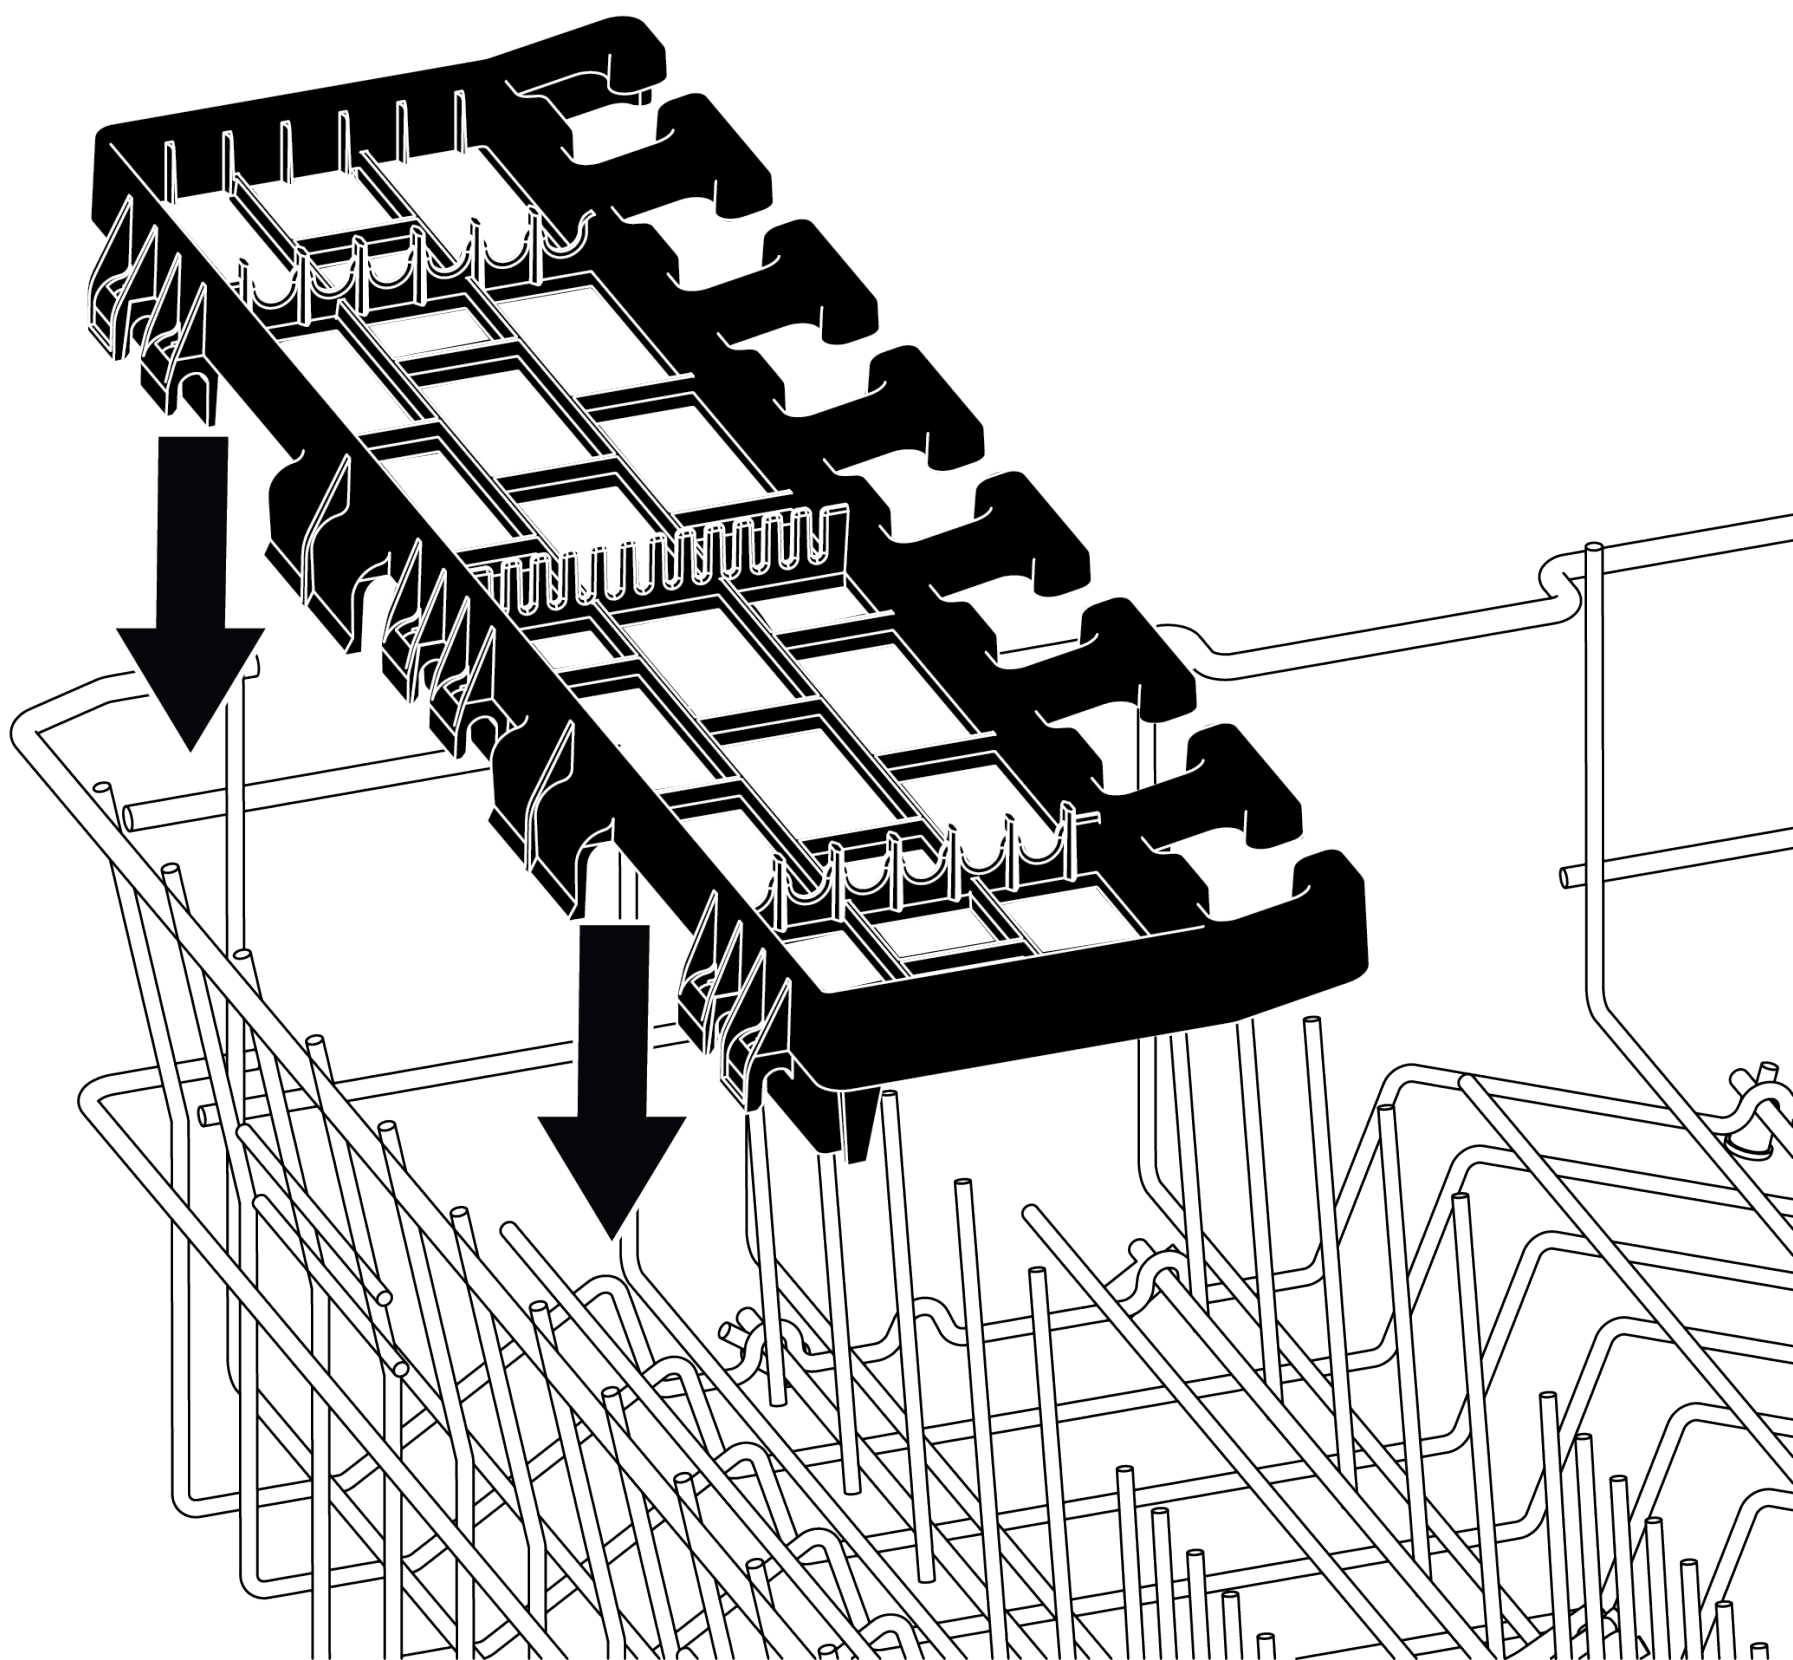


fork spoon basket


(Depending on model)

Cutlery basket, knife, fork, spoon, etc. It is specially designed to wash your dishes more cleanly.

Thanks to the moving (A, B) feature of the cutlery basket, you can create larger spaces and make room for dishes of different sizes when placing your dishes in the lower basket. If you want to put more cutlery, you can fold the separators to the side. (C)

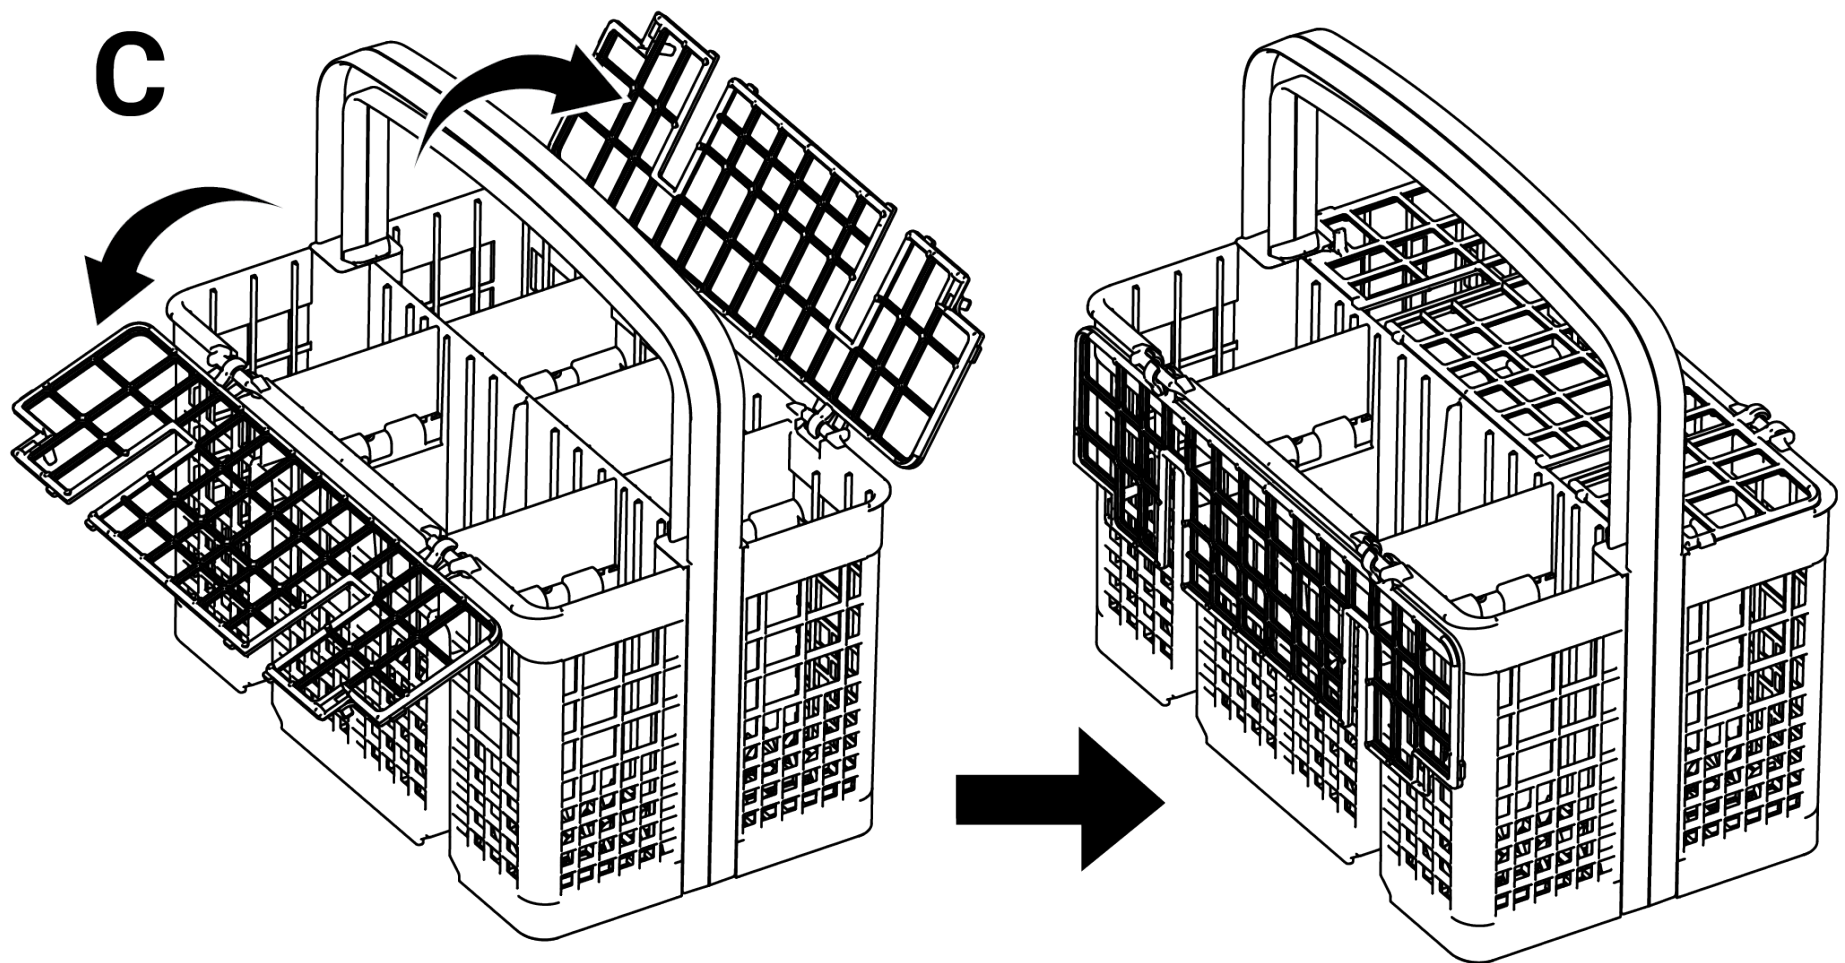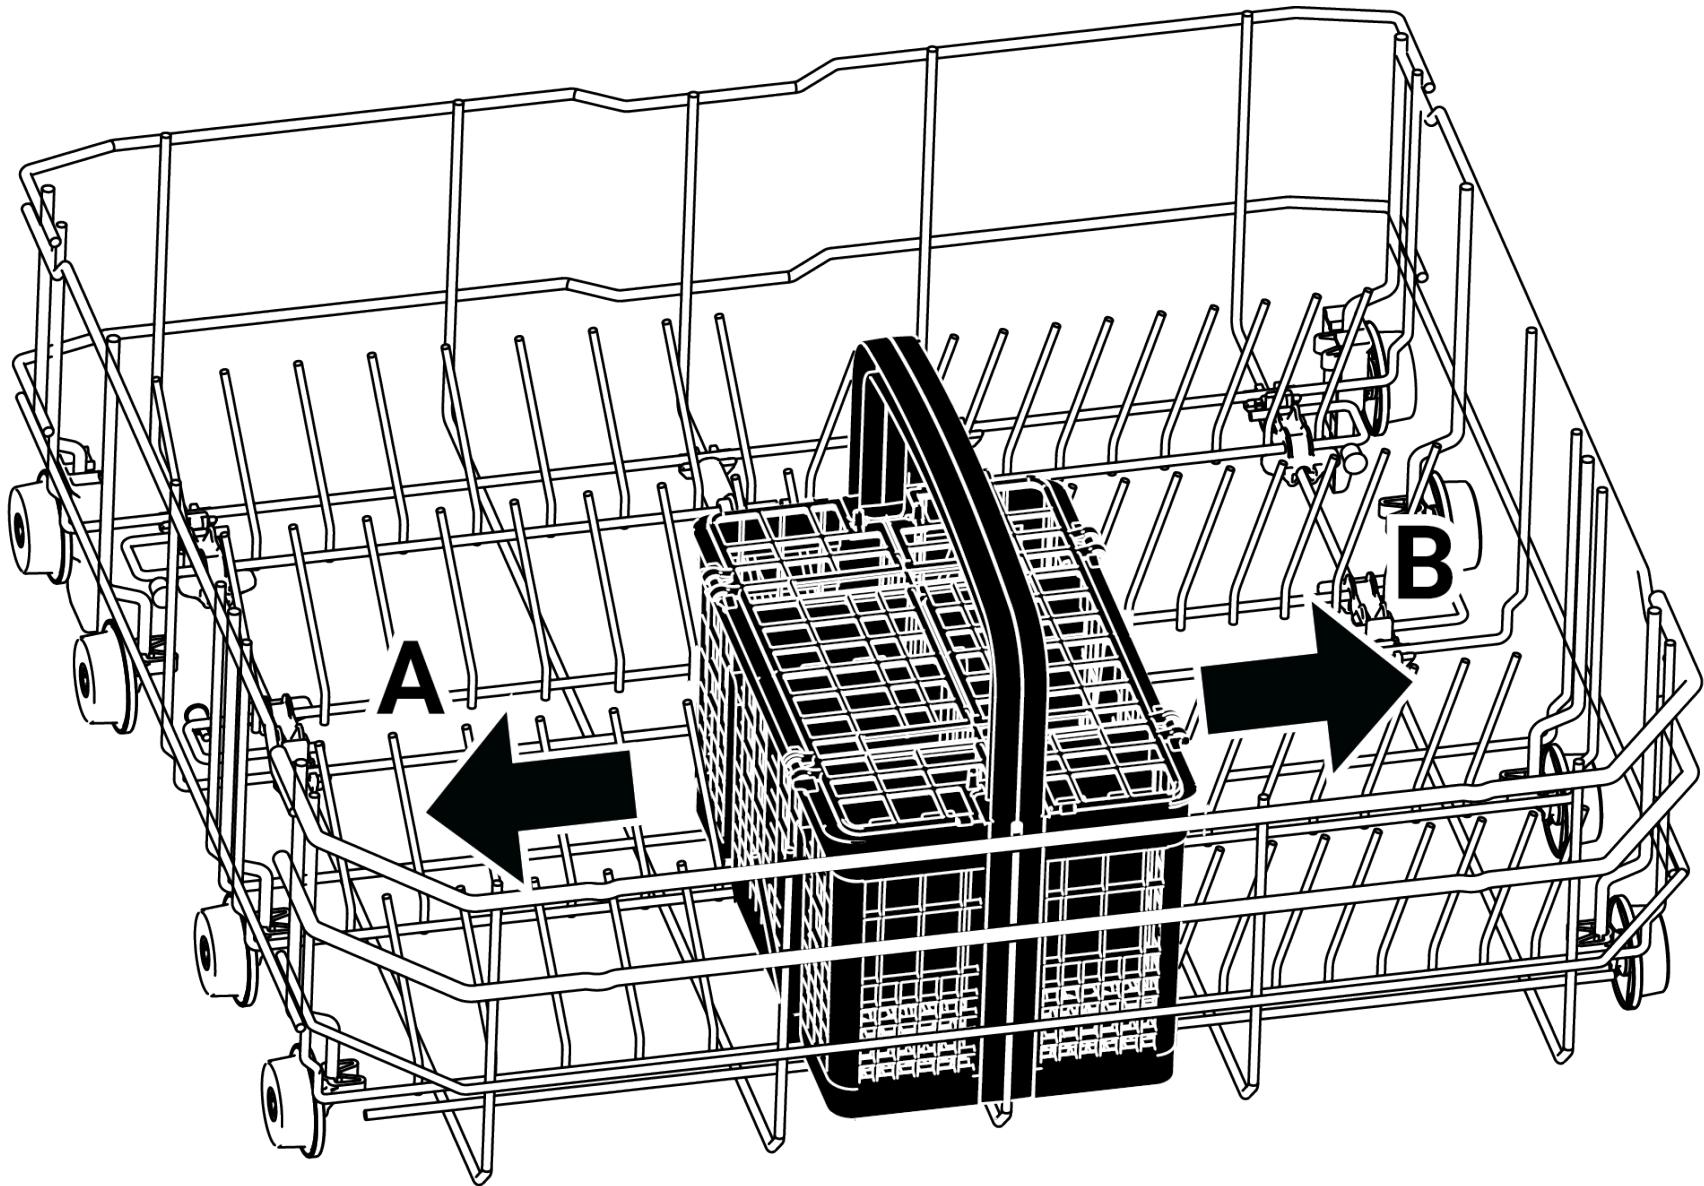

Operating the Product

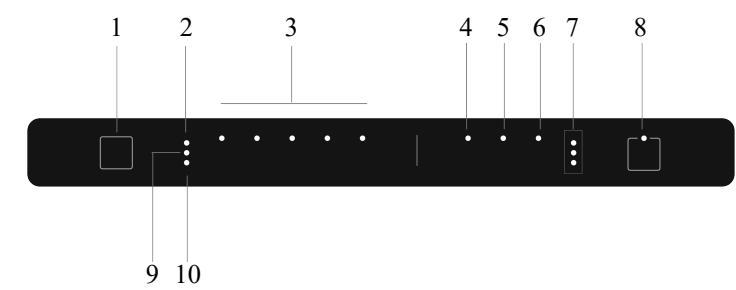

one	On/Off Button	2	Rinse Aid Lack Warning Indicator
3	Program Indicators / Overflow Warning (P1 flashes)	4	HygieneMax Function
5	Half Load Function	6	Snooze Button
7	Snooze Countdown Indicator	8	Start/Pause/Cancel Button
9	Salt Deficiency Warning Indicator	10	Water Cut Warning Indicator

DANGER



Read the "Safety Warnings" section first!

On/Off Button

When you press the On / Off button, your machine turns on with the Eco program in the On position.

Program Selection / Program Cancel Button

To select the program, press the desired program button to select it. To cancel the running program, press the Start Pause Cancel Button for 3 seconds.

Function Keys

When the Function Keys are pressed during program selection or delay selection, if the program you selected supports the function you selected, the indicator of the selected function will turn on. To cancel the function selection, press the function key again.

Preparing the machine

- 1.Open the dishwasher door.
2. Place your dishes according to the information given in the user manual.
- 3.Make sure the lower and upper impeller rotate freely.
- 4.Put sufficient amount of detergent into the detergent compartment
5. Check whether the Salt and Rinse Aid Lack Warning indicators are on and add salt and/or rinse aid if necessary.

Program selection

1. Turn on your machine by pressing the On / Off button.
2. Determine the appropriate washing program for your dishes by looking at the program information and average consumption values table.
- 3.When you close the door of your machine, the selected program starts.

Additional Information

- [↻ Program Information and Average Consumption Values Table](#)
 - [↻ Additional functions](#)
 - [↻ Changing the Alert Sound](#)
 - [↻ Program tracking](#)
 - [↻ Starting the Program](#)
 - [↻ Canceling the Program](#)
 - [↻ Salt Deficiency Warning Indicator](#)
 - [↻ Rinse Aid Lack Warning Indicator](#)
 - [↻ Adjusting the Amount of Rinse Aid](#)
 - [↻ End of Program](#)
-

Program Information and Average Consumption Values Table

Program Bilgileri ve Ortalama Tüketim Değerleri Tablosu						
Program No	1	2	3	4	5	6
Program Adı	Otomatik	Yoğun	Eko *	Hassas	Hızlı 58 dk. (#)	Mini 30 dk (#)
Yıkama Sıcaklığı	45-65 °C	70 °C	50 °C	40 °C	60 °C	35 °C
Kirlilik Düzeyi	Bulaşıkların kirlilik seviyesine karar vererek yıkama sıcaklığını, su miktarını ve yıkama süresini otomatik olarak ayarlar. Tüm bulaşık tipleri için uygundur.	Ağır kirli tencere ve tavalar için uygundur.	Normal kirli bulaşıkları temizlemek için uygundur. Kombine enerji ve su tüketimi açısından en verimli programdır. AB eco-tasarım mevzuatına uyumu değerlendirmek için kullanılır.	Narin cam eşyaların hassas şekilde yıkanması için özel program.	Normal kirli bulaşıkların en hızlı şekilde yıkanması için günlük yıkama programıdır.	Ön temizleme işleminden geçmiş hafif kirli bulaşıkların hızlı bir şekilde yıkanması için uygundur.
	Orta - Çok	Çok	Orta	Az	Orta	Az
	+	+	+	+	-	-
	+	+	+	+	+	+
	+	+	+	+	+	-
Ön Yıkama						
Yıkama						
Kurutma						
Program Süresi (dakika)	100-170	125	205	115	58	30
Su Tüketimi (litre)	12,2-15,8	17.6	12.9	15.4	11.8	11.8
Enerji Tüketimi (kW saat)	0,90-1,45	1.65	0.951	0.92	1.2	0.8
Kullanılabilir Fonksiyonlar	T, E, R, H, K	T, E, Y, F, R, U, H, K	T, E, Y, F, S, R, U, H, K	T, E, Y, F, R, K	T, E, R, H	T, E

Kapasite: 14

Tabloda verilen tüketim değerleri standart koşullarda ölçülmüş değerlerdir. Bu nedenle günlük kullanımda farklılıklar olabilir. * Test Enstitüleri için referans program. EN 50242/60436 standardına göre yapılan testler referans programda su yumuşatıcısı tuz bölmesinin ve parlatıcı bölmesinin dolu olması durumunda yapılmalıdır. Eco 50°C dışındaki programlar için verilen değerler yalnızca bilgi amaçlıdır. (#) Ek fonksiyonlar program sürelerinde değişikliğe sebep olabilir.

Additional functions

The washing programs of the machine are designed to achieve the best cleaning, considering the type of dirt, amount of dirt and the characteristics of the dishes to be washed.

Additional functions have been created to enable you to save time, water and energy and provide a more hygienic and comfortable wash, thanks to your special conditions.

ANNOUNCEMENT



Additional functions may cause changes in program duration.

ANNOUNCEMENT



Additional functions are not suitable for all washing programs. The indicator of the function that is not compatible with the program will not be active.

ANNOUNCEMENT



The functions that can be used in washing programs are shown with letters such as "A, B, D, E, G, F, K..." in the "Program information and average consumption values table." You can find instructions on the use of these functions in the "Additional functions" section of the user manual.

ANNOUNCEMENT



Some auxiliary functions cannot be used together. If the function you have selected is not active even though it appears in the "Program information and average consumption values table", you can activate it after turning off other auxiliary functions.

To add additional functions to the program:

1. Select the washing program you want.
2. When you select an additional function, the indicator of the additional function lights up. When you press the function key again, the indicator goes out and the selection is cancelled.

If your machine has submenu functions depending on the model, review the instructions in the additional functions section for their use.

ANNOUNCEMENT



Not all functions shown with letters such as "A,B,D,E,G,F,K..." in the "Program information and average consumption values table" are available on your machine. The functions that can be used on your machine are described in the additional functions section of this manual.

Half Load function (Y)

(Depending on model)

It is used when you want to run your machine without filling it completely.

1. Place your dishes in your machine as you wish.
2. Turn on the machine from the On / Off button.
3. After selecting the program you want, press the Half Load button.
4. Close the machine door and run the program.

Thanks to the Half Load function, you save water and energy while using the upper and lower baskets of your machine at the same time.

function (H)

(Depending on model)

function:

It is designed to be used when more hygiene is needed in dishwashing. With this function, the washing and rinsing temperatures and duration of the selected program increase. Additionally, additional rinsing is performed to ensure that your dishes are washed and rinsed more hygienically.

If the Automatic Door Opening feature is active on the productfunction cannot be selected.

ANNOUNCEMENT



information about the hygiene effectiveness of the functionYou can find the function in the information sheet.

Function (K)

(Depends on Model)

" on your machine.Thanks to the " feature, the drying efficiency of your machine is increased and energy savings are achieved.

When you activate this function, your machine's door opens automatically at the end of the washing program.

The function can extend the duration of the selected program by up to 35 minutes.

ANNOUNCEMENT



The function can extend the duration of the selected program by up to 35 minutes.

ANNOUNCEMENT



Its feature opens the door at the end of the wash thanks to the "door opening shafts". This process takes approximately 2 minutes. If the power is cut off while the shafts are coming out, do not force the door to close. When the power returns, the process will be completed and the shafts will be retracted.

Reflecting light on the ground (Machine washing warning)

(Depending on model)

Your machine reflects light onto the floor during the washing process. The light turns off when the washing process is completed.

ANNOUNCEMENT



When the washing program starts, the light reflection feature is automatically activated and stays on until the program ends.

ANNOUNCEMENT



Reflecting light on the ground is not a feature that can be canceled by the user.

ANNOUNCEMENT



In fully built-in models, the door must be installed at a minimum of 40 mm above the ground in order for the "Machine washing warning" to be seen properly.

Interior Lighting

(Depends on Model)

Suitable models have a lamp that illuminates the inside of your machine when the door is opened. Changing the interior lighting setting

1. After turning on your machine, press the Delay and Start / Pause / Cancel button for 3 seconds.
2. Press the delay button and turn the delay indicator to 9 position.
3. You can turn the interior lighting on and off by pressing the function buttons. Interior lighting is turned off if the 1st program LED is on, and active if the 2nd program LED is on.
4. Exit the settings menu by pressing the On/Off button. Your setting will be saved automatically.

Changing the Warning Sound Volume

1. After turning on your machine, press and hold the Delay and Start, Wait, and Cancel buttons respectively.
2. Using the delay button, turn LEDs 9 and 6 on.
3. Adjust the volume with the function keys.
 1. If the program indicator is on - Sound is off
 2. If the program indicator is on - Volume is medium level
 3. If the program indicator is on - Volume is high.
4. To save, turn off your machine with the On / Off button.

Programming the washing time

Delay

If an economical electricity tariff is applied in your region, you can use the delay function to wash your dishes at the relevant hours. You can delay the start time of the program you choose for up to 9 hours.

ANNOUNCEMENT



Press the time delay button for 1 second longer than the other buttons.

1. After selecting the washing program and other additional functions, press the delay button.
2. When you press the Delay button, the "3 hours" Delay indicator starts flashing on the screen.
3. Set the desired time by pressing the delay button. Each time you press the button, the time increases in 3-hour increments, up to 9 hours.
4. After performing the delay, close the door of your machine. When the delay is over, the program will start automatically.

ANNOUNCEMENT



If the door is closed after the delay function is selected, the delay starts to work.

ANNOUNCEMENT



If the door is opened while the delay function is active, the countdown will be stopped and the start icon will start flashing.

Changing settings when the snooze function is active

While the delay function is active, you cannot make changes to the washing program, additional functions or delay time.

ANNOUNCEMENT



Auxiliary functions cannot be adjusted after the program has started.

To cancel the snooze function

To cancel while the delay function is active, the program must be cancelled.

ANNOUNCEMENT



The delay function cannot be adjusted after the program has started.

Changing the Alert Sound

1. After turning on your machine, press and hold the Delay and Start, Wait, and Cancel buttons respectively.
 2. Using the delay button, turn LEDs 9 and 6 on.
 3. Adjust the volume with the function keys.
 - 1.If the program indicator is on - Sound is off
 - 2.If the program indicator is on - Volume is medium level
 - 3.If the program indicator is on - Volume is high.
 4. To save, turn off your machine with the On / Off button.
-

Program tracking

During the washing process, the program stages can be monitored from the program follow-up lights on the machine. When the washing program you selected is finished, the Finish lamp on the machine will turn on.

Starting the Program

After selecting the program and additional functions, close the door of your machine to start it.

ANNOUNCEMENT



Depending on the hardness of the mains water, water softening is performed in the machine. Washing time may vary while the program is running, depending on the temperature of the room where the machine is located, the mains water temperature and the amount of your dishes.

ANNOUNCEMENT



Be careful not to open the door of the machine while it is operating. When you open the door of the machine, steam may escape, be careful.

ANNOUNCEMENT



After rinsing, it remains silent for a while in standby mode to allow the remaining water on the dishes and inside the machine to drain completely and to clean the water softener, then it continues to work in the drying step.

Canceling the Program

Press the Program Selection / Program Cancel Button for three seconds. Release when the start indicator starts flashing. When you close the door of your machine, the evacuation process is completed within 2 minutes and your machine gives an audible warning when it is finished.

ANNOUNCEMENT



Depending on the remaining step of the program you cancelled, detergent or rinse aid may remain in the machine and/or on the washed parts.

Salt Deficiency Warning Indicator

To understand whether the amount of softening salt in your machine is sufficient, check the salt deficiency warning indicator on your machine's screen. When the salt deficiency warning indicator on your machine's screen starts to light up, you need to refill the salt compartment with salt.

ANNOUNCEMENT



Adjusting the water hardness level is described in the Water Softener System section.

Rinse Aid Lack Warning Indicator

To understand whether the amount of rinse aid in your machine is sufficient, check the rinse aid deficiency warning indicator on your machine's screen. When the rinse aid lack warning indicator on your machine's screen starts to light up, you need to fill the rinse aid compartment again with rinse aid.

Adjusting the Amount of Rinse Aid

1. After turning on your machine, press and hold the Delay and Start, Wait, and Cancel buttons respectively.
 2. Using the Delay button, turn LED 6 on.
 3. You can adjust the rinse aid level with the function keys.
 1. If the program indicator is on - Rinse aid is not used
 2. If the program indicator is on - 1 dose of rinse aid is added.
 3. If the program indicator is on - 2 doses of rinse aid are applied.
 4. If the program indicator is on - 3 doses of rinse aid are applied.
 - 1,2,3,4. If the program indicators light together - 4 doses of rinse aid are applied.
 4. Exit the settings menu by pressing the On/Off button. Your setting will be saved automatically.
-

End of Program

ANNOUNCEMENT



When the washing program you have selected is finished, a signal will warn you to turn off your machine. This signal will warn you at certain intervals and then turn off.

When the washing program ends, the start-pause indicator goes off.

- 1.Open the machine door.
- 2. Turn off your machine by pressing the On / Off button.
- 3.Turn off the tap.
- 4.Remove the plug from the socket.

ANNOUNCEMENT



To save energy, your machine automatically turns off after a certain period of time when the program ends or if the program is not started.

ANNOUNCEMENT



After washing your dishes, let them cool in the machine for about 15 minutes. If you leave the machine door ajar during this period, your dishes will dry in a shorter time. This process will increase the drying efficiency of the machine.

Maintenance and Cleaning

Additional Information

[↻ Maintenance and cleaning](#)

[↻ Cleaning the filters](#)

[↻ Cleaning the hose filter](#)

[↻ Cleaning the propellers](#)

Maintenance and cleaning

ANNOUNCEMENT



Read the “Safety Instructions” section first!

ANNOUNCEMENT



Before cleaning the machine, unplug it and turn off the tap.

ANNOUNCEMENT



Do not use abrasive materials when cleaning.

ANNOUNCEMENT



For efficient operation of the machine, clean the filter and impellers at least once a week.

If it is cleaned at regular intervals, the product's lifespan will be extended and frequently encountered problems will be reduced.

Cleaning the outer surface of the machine

Gently wipe the exterior of your machine and door seals with a sensitive cleaning material and a damp cloth. Wipe the “control panel” only with a slightly damp cloth.

Cleaning the inside of the machine


Clean the machine monthly with detergent or special machine cleaning agents by running it on the program running at the highest possible temperature. This process will help remove debris and limescale from inside the machine.

If there is water left inside the machine, ensure that the water in the machine is drained by following the procedures in the "Cancelling the program" section. If the water cannot be drained, remove the filters as stated in the "Cleaning the filters" section and check whether there are pieces of dirt that have accumulated at the bottom of the machine and blocked the water path, and clean them if necessary.


Cleaning the filters

For the machine to work efficiently, clean the filters at least once a week. Check if there is any food residue on the filters. If there is any food residue, remove the filters and clean them thoroughly under the tap.


1. Remove the micro filter and coarse filter group by turning them counterclockwise and pulling them out.

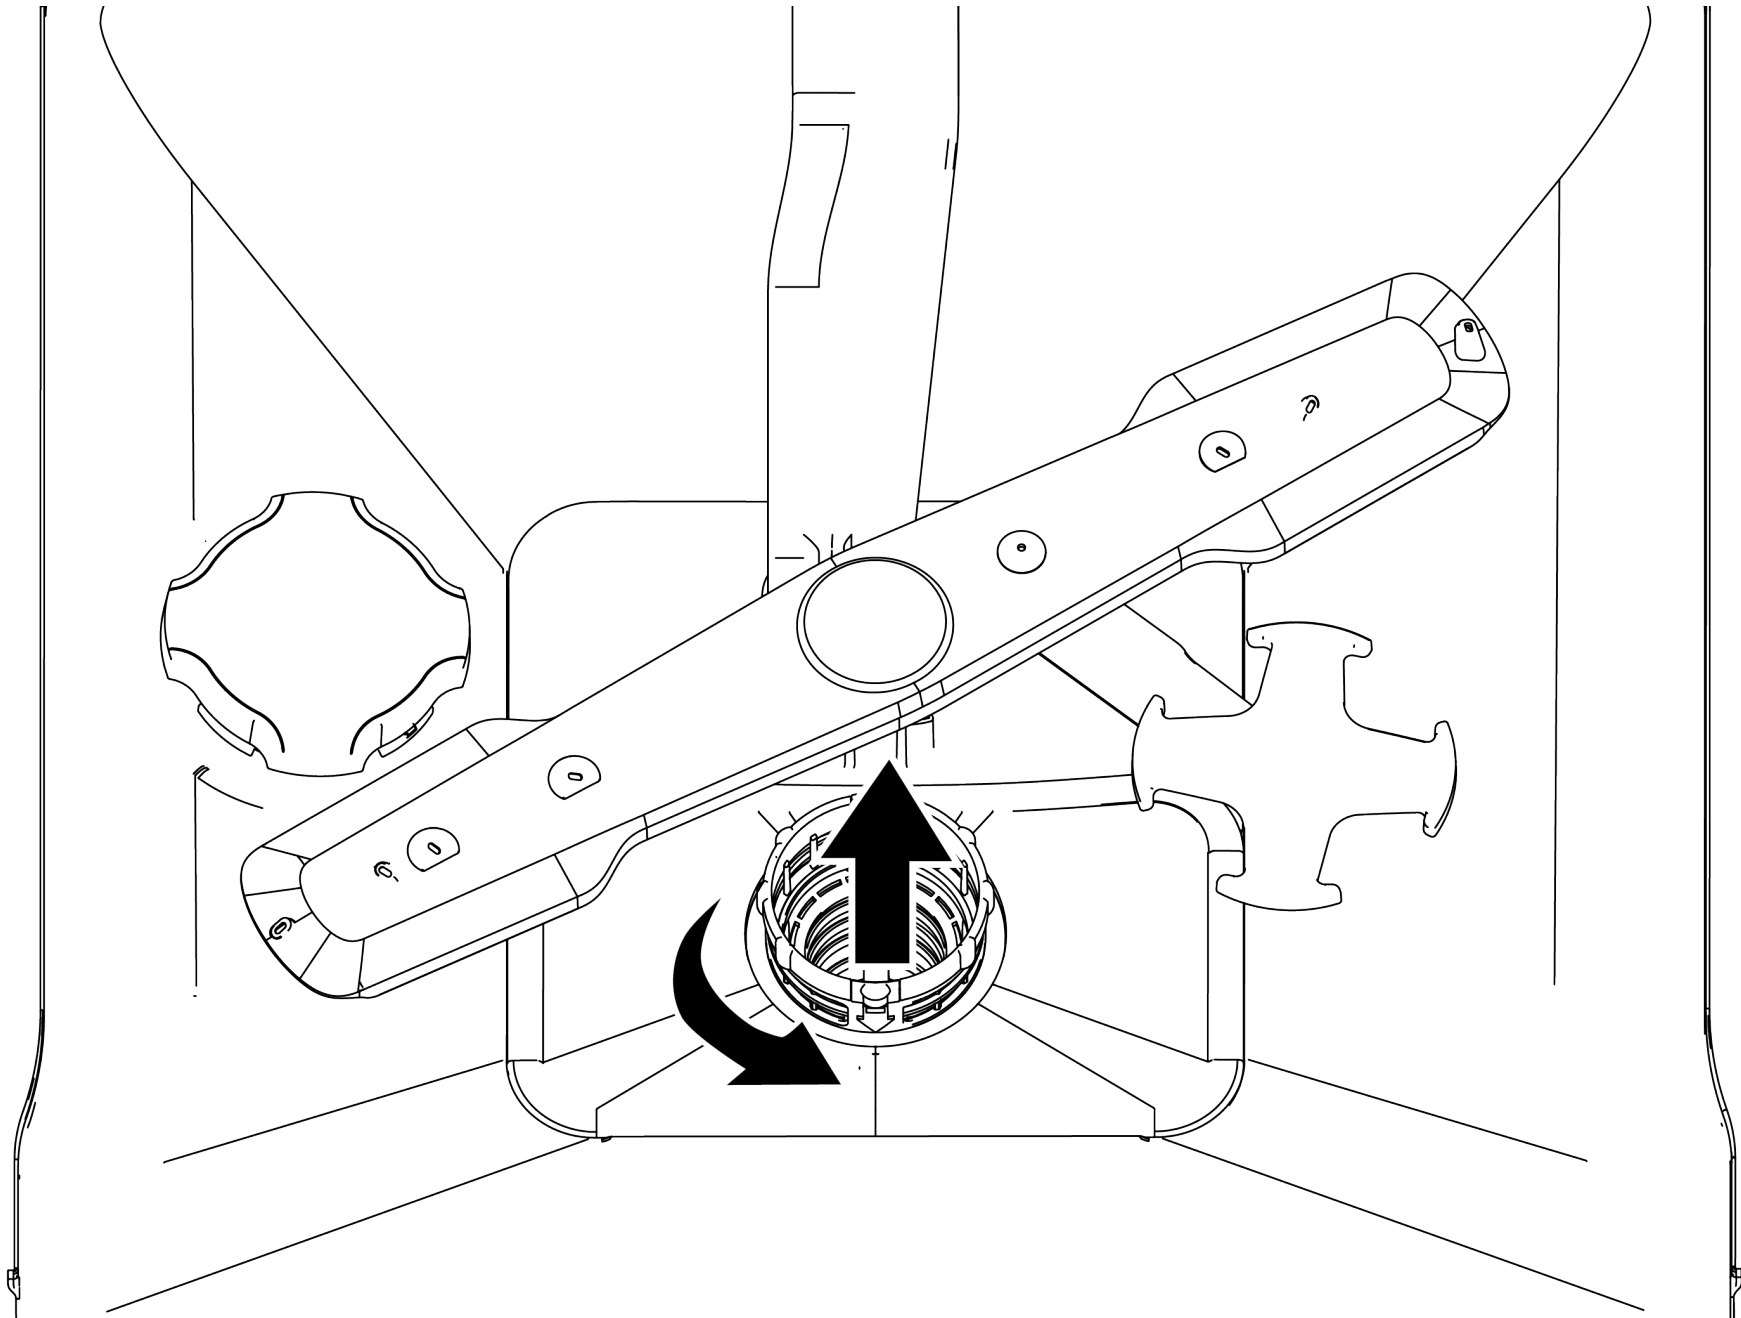

2. Remove the metal/plastic filter (3) by pulling it out.

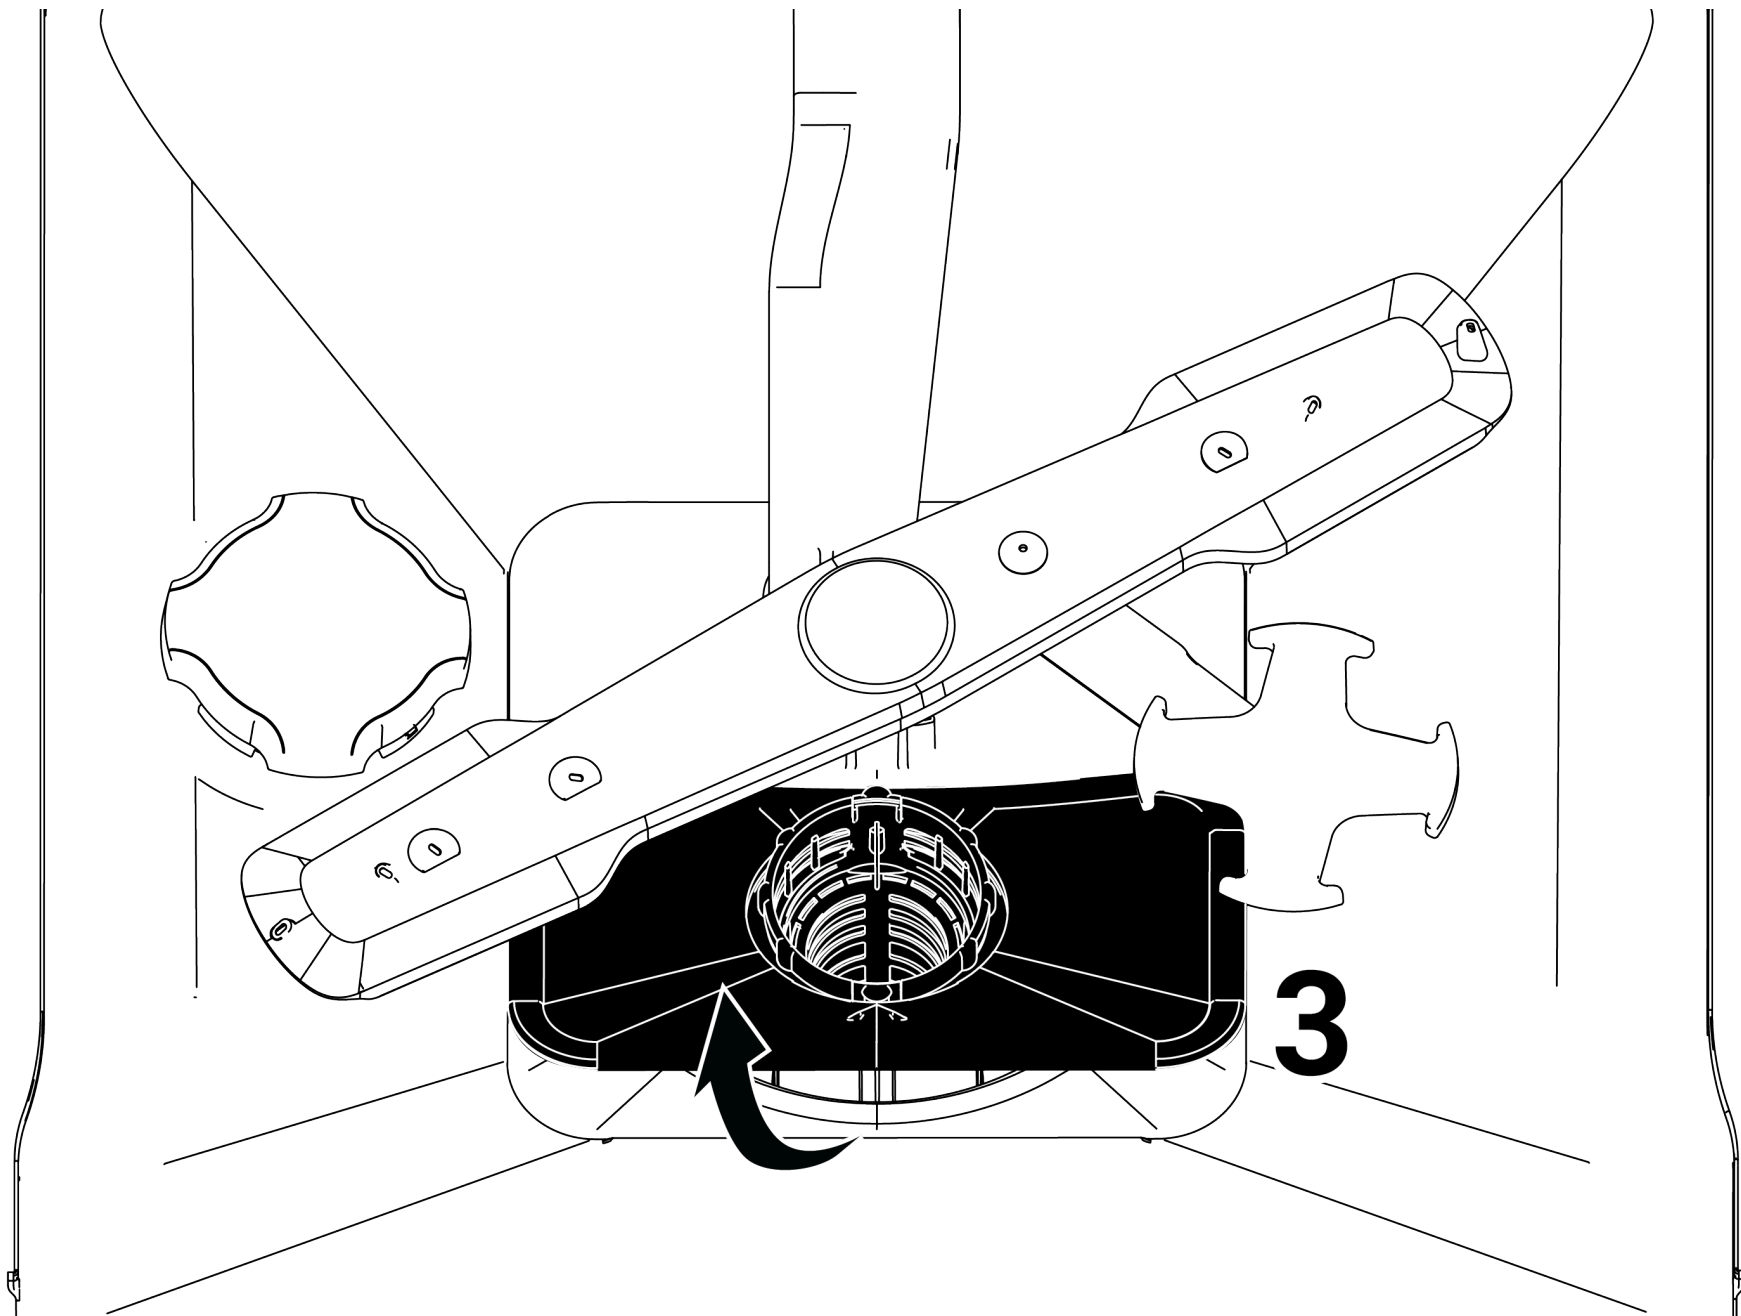

3. Separate the coarse filter from the group by pressing the two tongues on the coarse filter inwards.

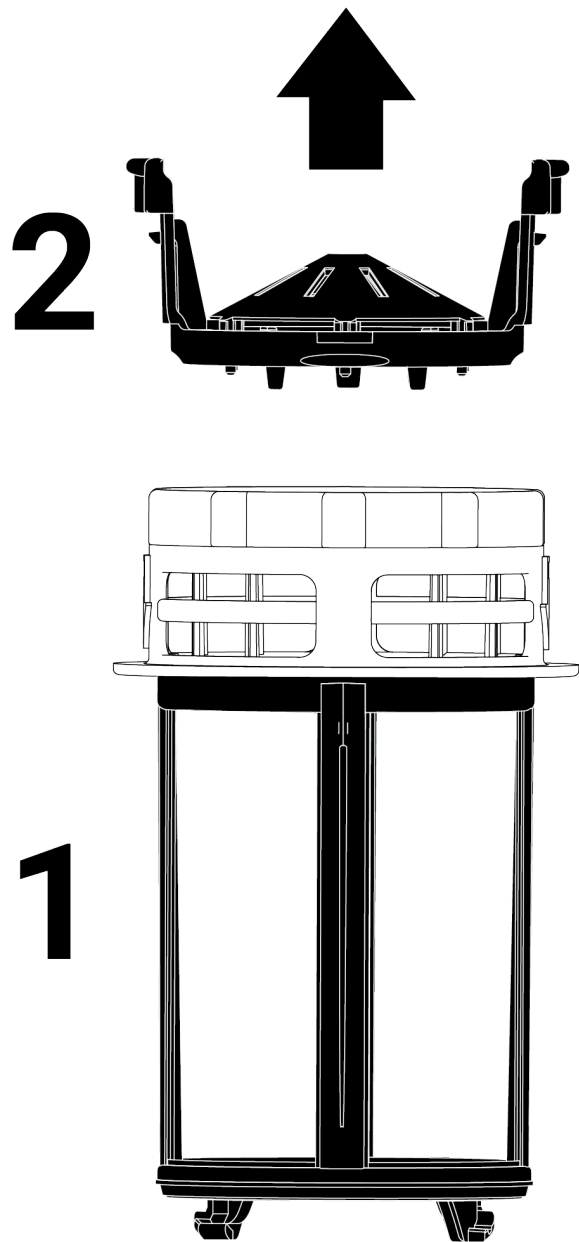

4. Clean all three filters under the tap with a brush.

5. Replace the metal/plastic filter.

6. Insert the coarse filter into the micro filter. Make sure it is positioned correctly. Turn clockwise until you hear a click.

ANNOUNCEMENT



The machine should not be used without a filter.

ANNOUNCEMENT




Failure to install the filters correctly will reduce washing effectiveness.

Cleaning the hose filter

The dirt (sand, clay, rust, etc.) that may come from the city network or your water installation is prevented from damaging the machine with the help of the filter in the water inlet hose. Check the filter and hose from time to time and clean if necessary.

1. Turn off the tap and unscrew the hose.
2. After removing the filter from the hose, clean it under the tap.
3. Place the cleaned filter back into its place in the hose.
4. Attach the hose to the faucet.

(Depending on model)

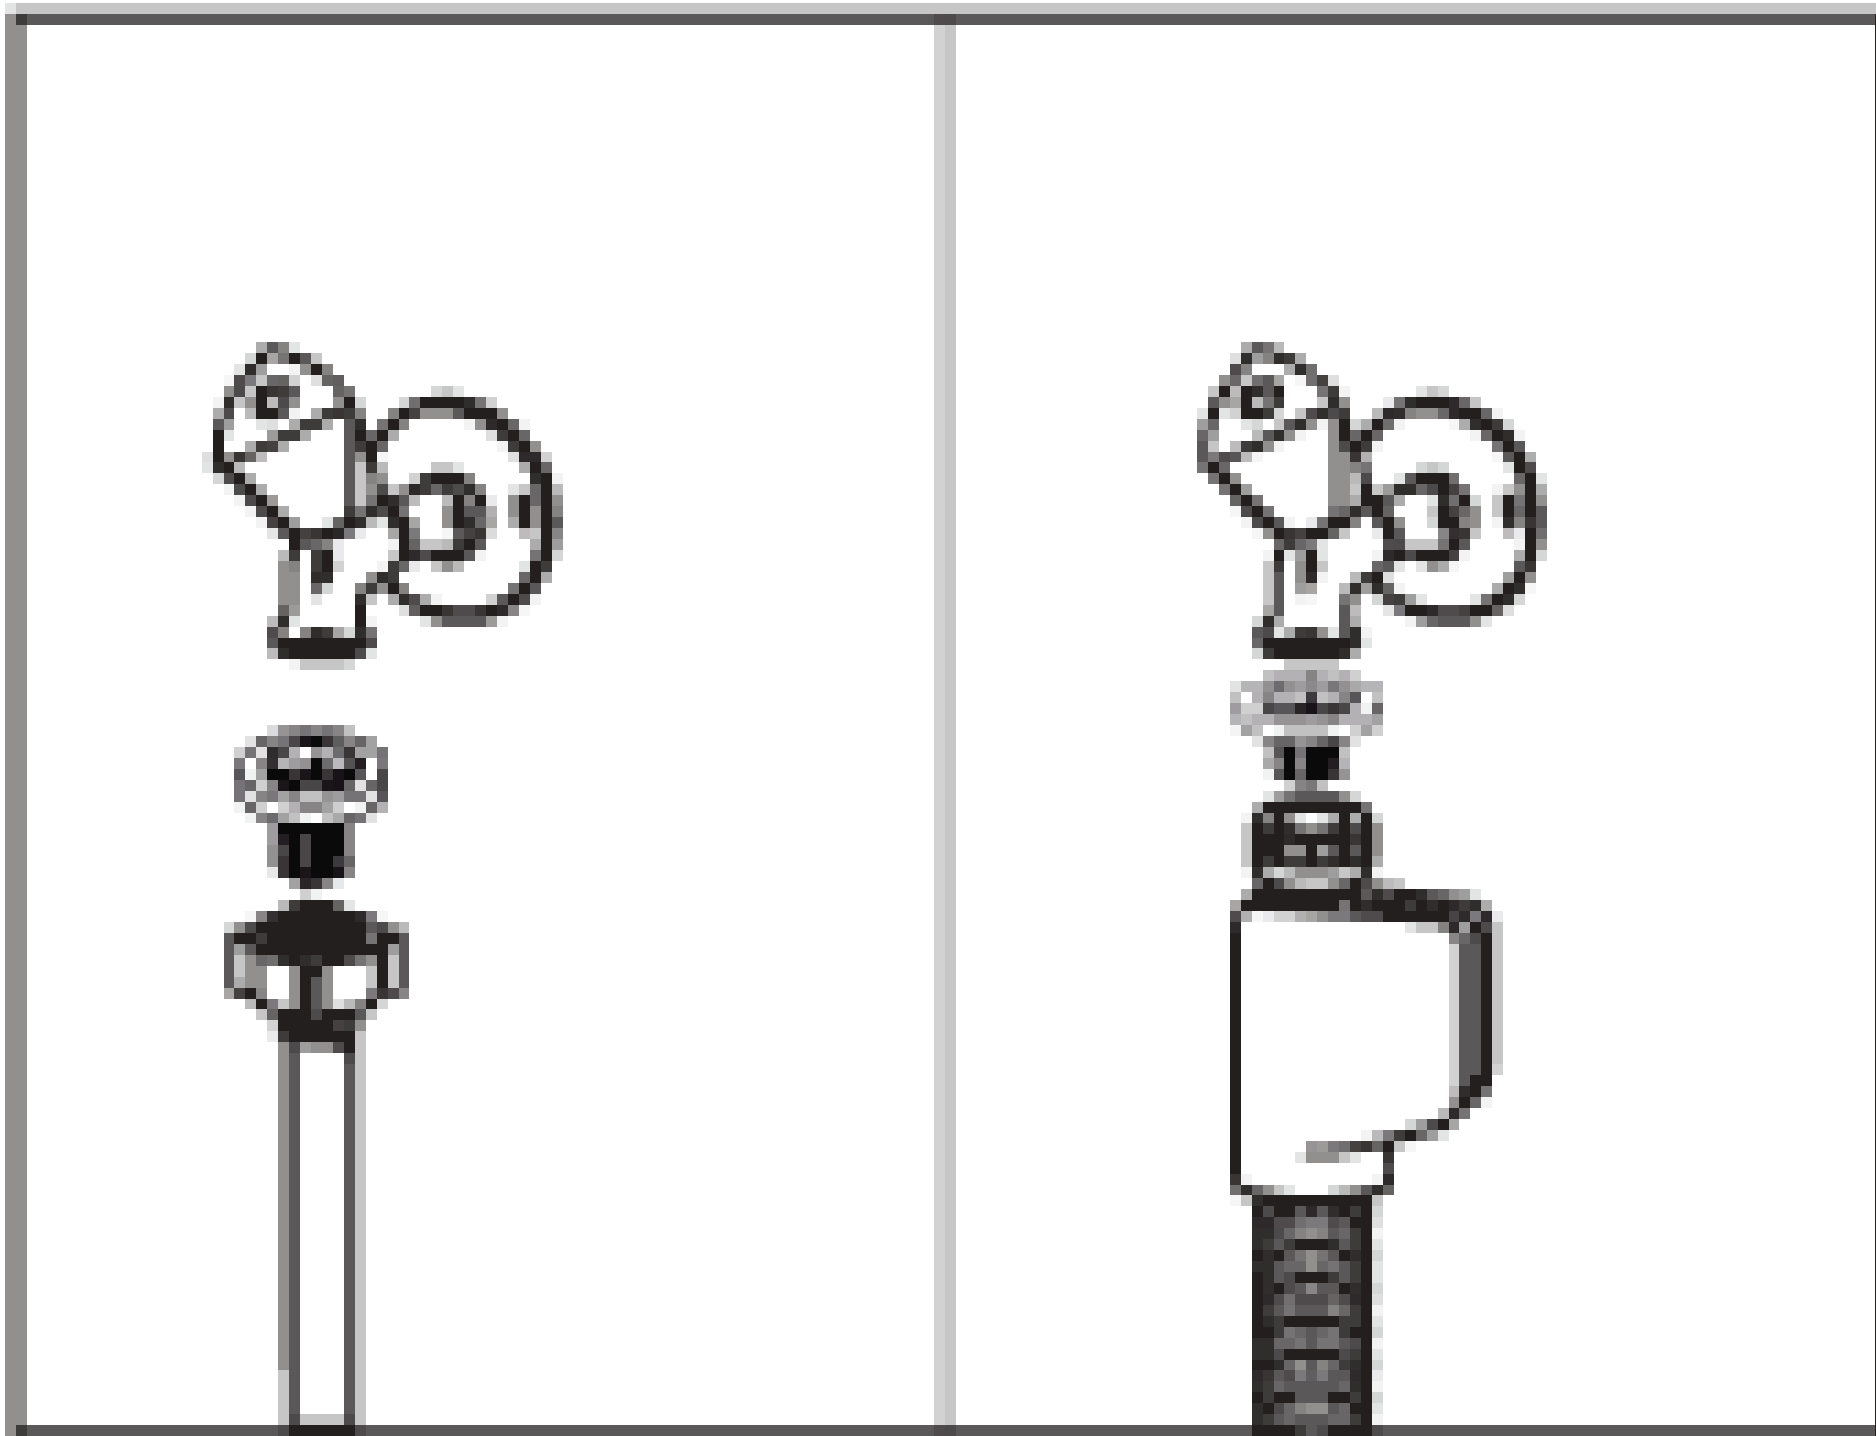


Cleaning the propellers


For efficient machine operation, clean the propellers at least once a week.

lower impeller


Check whether the lower impeller (1) holes are blocked. If there is a blockage, remove the impeller and clean it. You can remove the lower impeller by pulling it upwards (depending on model)

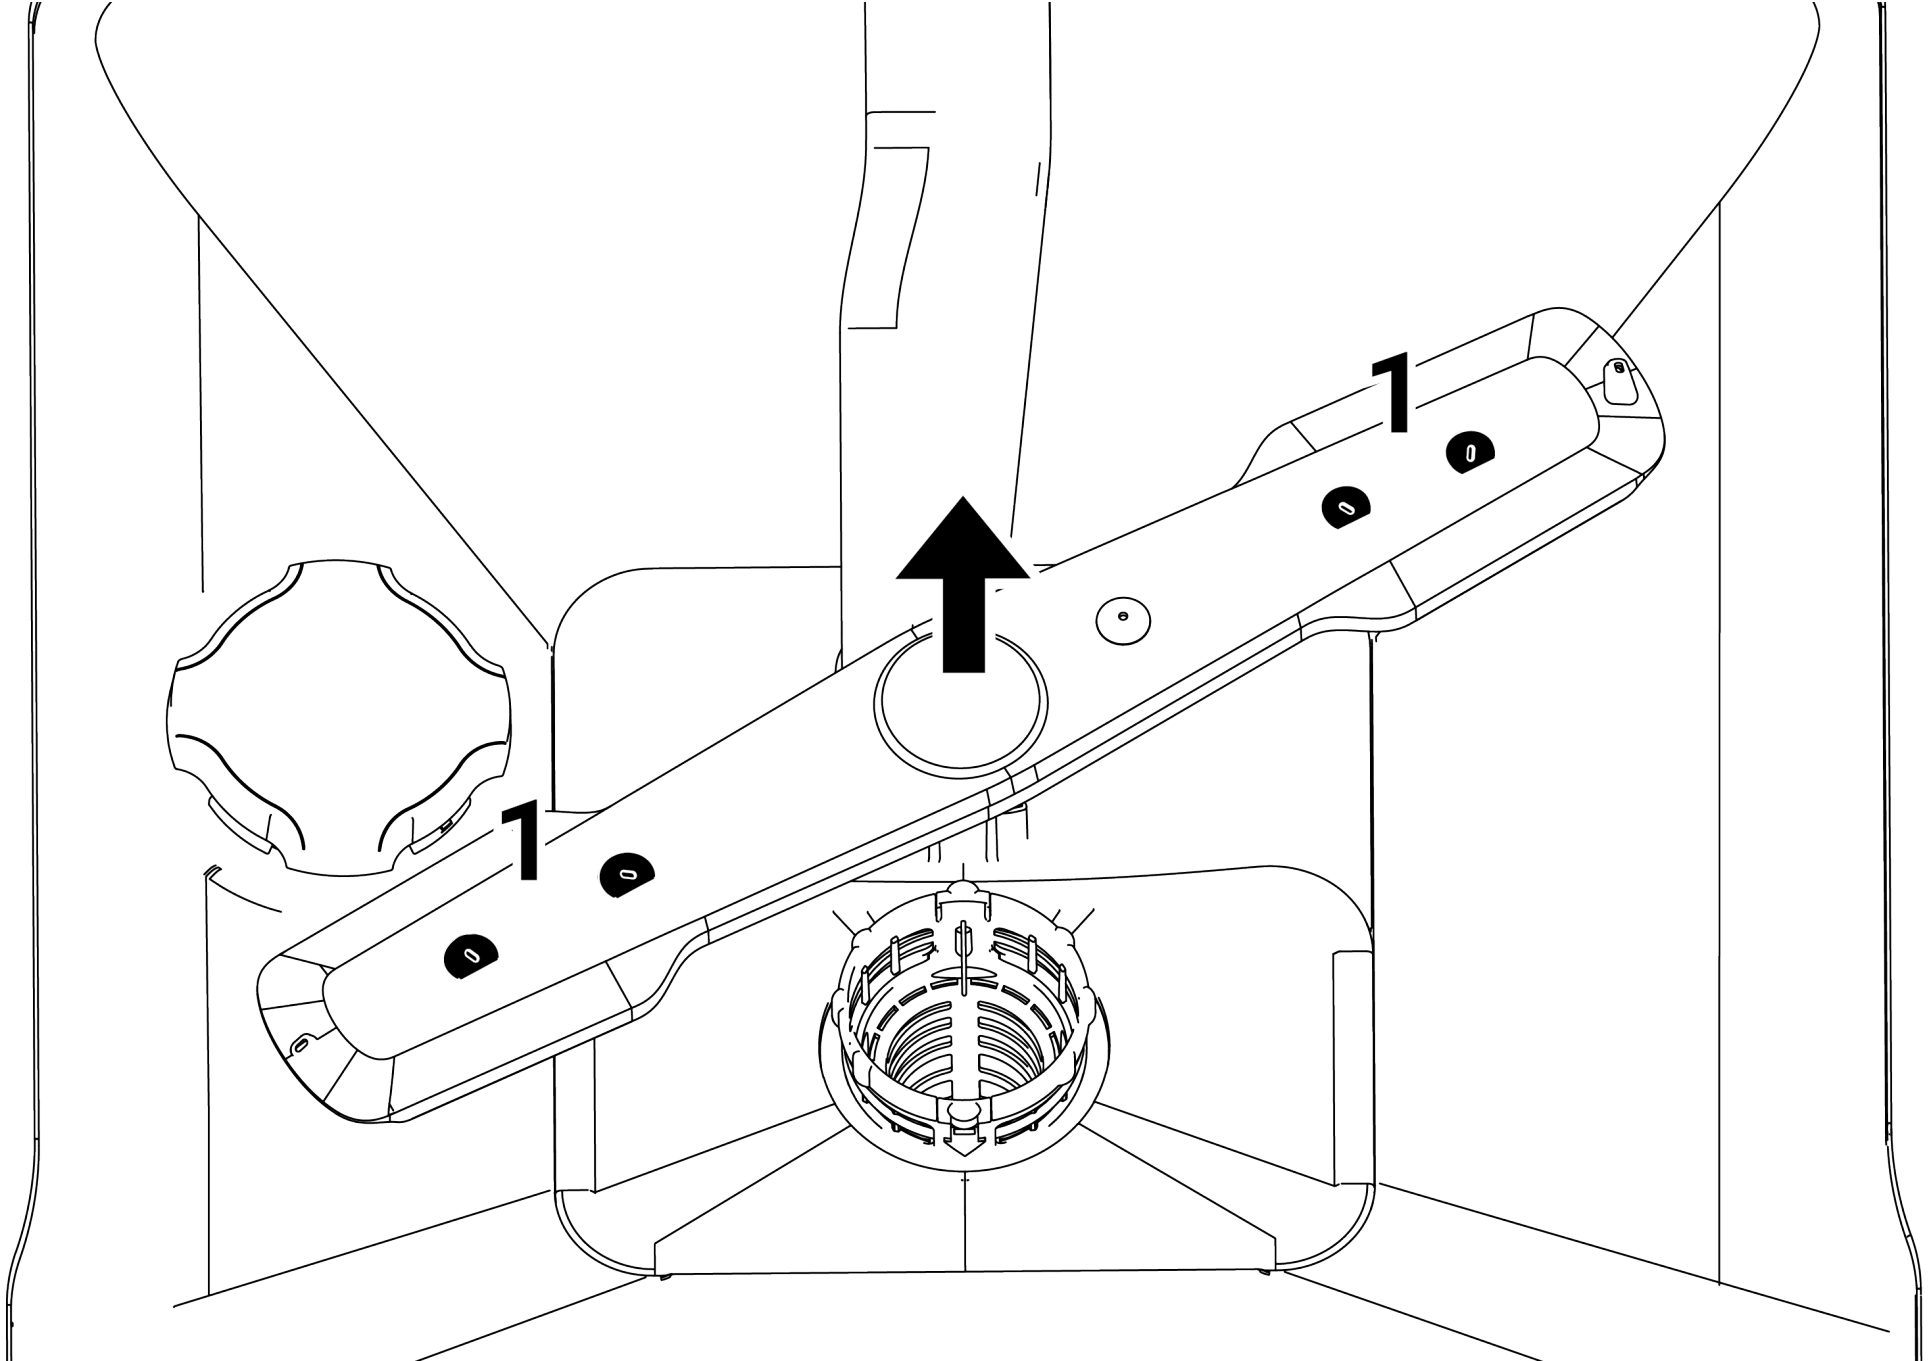

Check whether the holes of the propeller group are blocked. If there is a blockage, remove and clean the impeller assembly. (Depending on model)

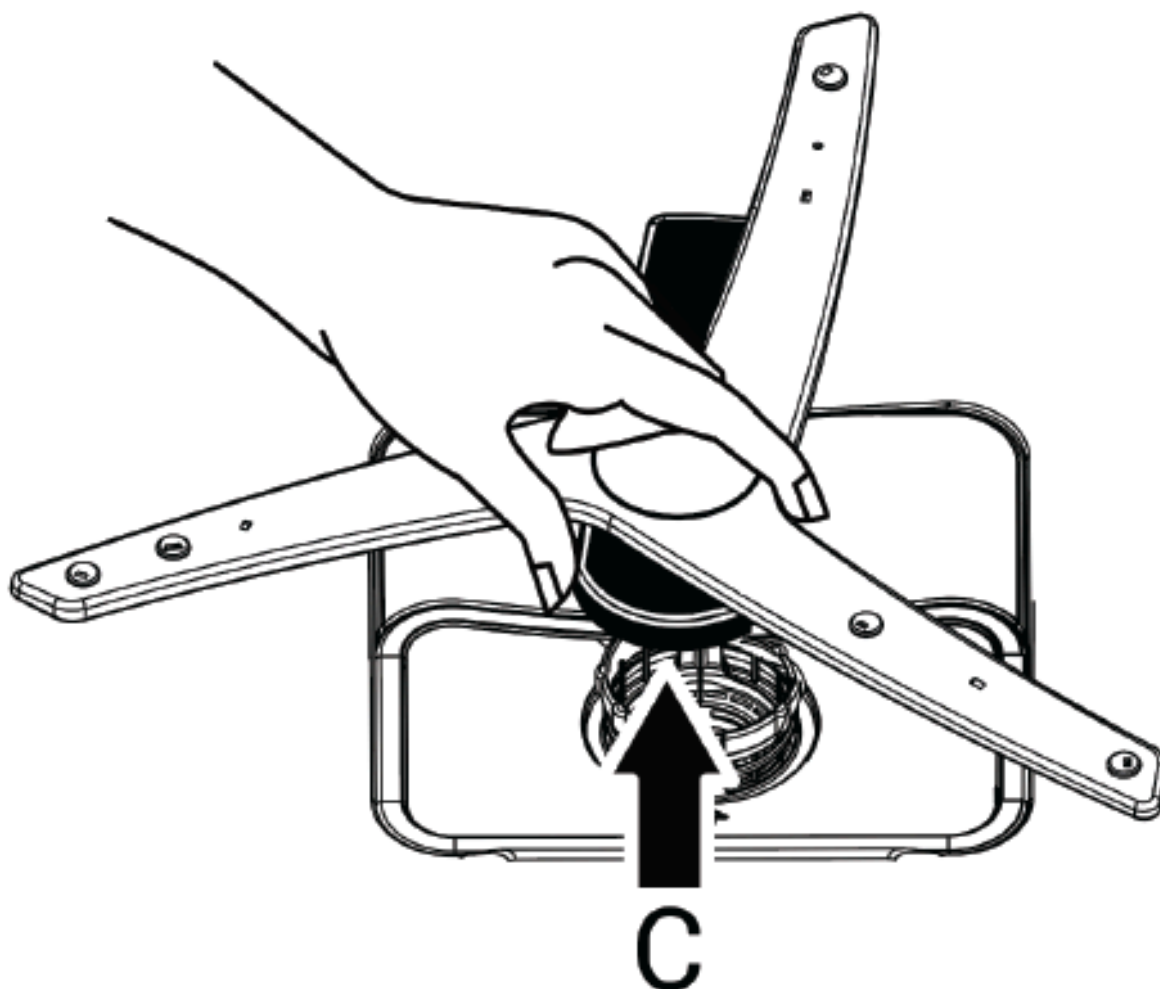

To disassemble and clean the lower impeller group together, remove it by holding it with one hand at the points (C) shown in the figure and pulling it upwards. After the cleaning process, replace the propeller group by performing the same steps in reverse.

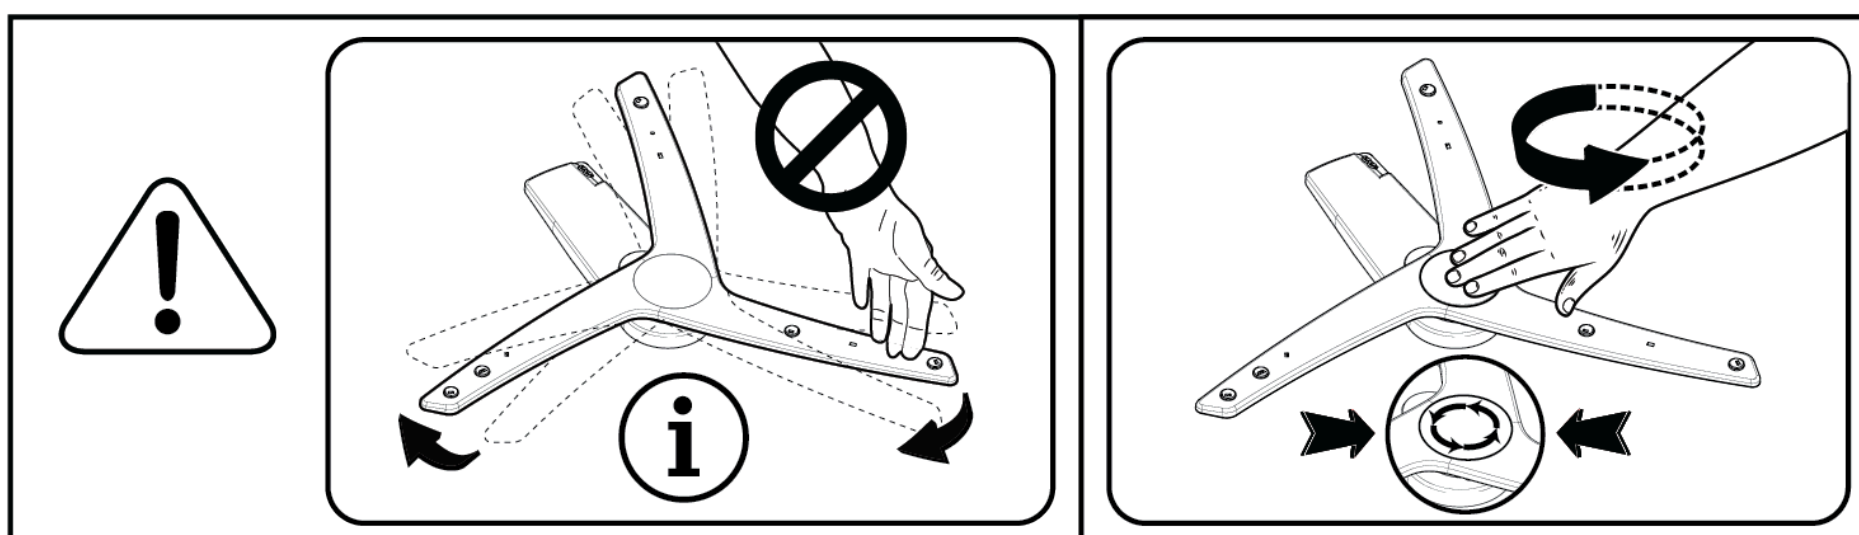

ANNOUNCEMENT



Do not attempt to turn the propeller by holding the ends. Trying to turn it by the ends may cause the gear system inside the propeller to break.

upper impeller

Check whether the upper impeller (1) holes are blocked. If there is a blockage, remove the impeller and clean it. You can remove the upper fan by turning its nut to the left.

Be sure to tighten the nut fully when replacing the upper impeller.

