

Please read this guide first!

Our valued customer,

Please read this manual before using the product.

Thank you for choosing an product. We want your product, which is produced with high quality and technology, to provide youwith the best performance. For this, please read this manual and the other documents provided carefully before using the product.

Please follow all the information and warnings in the user manual. In this way, you will protect yourself and your product against possible dangers.

Keep the user manual. If you give the product to someone else, give the user manual along with it.

The following symbols appear in the user manual and on the product:

ANNOUNCEMENT



Hazard that could result in death or injury.

ANNOUNCEMENT



Risk of electric shock!

WARNING



Important information or useful tips for use.

ATTENTION



Read the user manual.

DANGER



Flammable material, warning of fire hazard.

DANGER



Danger that may result in burns due to contact with hot surfaces.

Safety Instructions

- This section contains safety instructions to help prevent personal injury or property damage.
- Our company cannot be held responsible for any damages that may occur if these instructions are not followed.

ANNOUNCEMENT



Always have the installation and repair operations done

ANNOUNCEMENT



Use only original spare parts and accessories.

ANNOUNCEMENT



Do not repair or replace any part of the product unless expressly stated in the user manual.

ANNOUNCEMENT



Do not make technical changes to the product.

Additional Information

- [Purpose of usage](#)
- [Child, Vulnerable Person and Pet Safety](#)
- [Electrical Safety](#)
- [Transport Security](#)
- [Installation Security](#)
- [Usage Safety](#)
- [Food Storage Safety](#)
- [Maintenance and Cleaning Safety](#)
- [Disposal of Old Product](#)
- [Technical Information for Wifi + Bluetooth](#)

Purpose of usage

- This product is not suitable for commercial use and should not be used for purposes other than its intended use.
- This product is designed for use in indoor areas, homes and similar places.

For example;

In staff kitchens of stores, offices and other work environments,

In farmhouses,

In the environments used by customers of hotels, motels and other accommodation facilities,

In hostel type environments,

In food service and similar non-retail applications.

- The product should not be used in open or closed outdoor areas such as boats, caravans, balconies or terraces. Exposing the product to rain, snow, sun and wind may create a fire risk.

Child, Vulnerable Person and Pet Safety

- This product can be used by children aged 8 and over and by persons whose physical, sensory or mental capabilities are not fully developed or who lack experience and knowledge, as long as they are supervised or trained about the safe use of the product and its risks.
- Children between the ages of 3 and 8 are allowed to load and unload the refrigerator.
- Electrical products are dangerous to children and pets. Children and pets should not play with the product, climb on it or enter it.
- Children and pets should be kept away from the cabin bottom (compressor) area where the electrical parts are located.
- Cleaning and user maintenance operations should not be carried out by children unless they are supervised by someone.
- Keep packaging materials away from children. There is a risk of injury and suffocation.

Electrical Safety

- The product should not be plugged in during installation, maintenance, cleaning, repair and transportation.

If the power cable is damaged, it must be replaced in order to prevent possible hazards.

- Do not squeeze the power cord under or behind the product. Do not place a heavy object on the power cord. The power cord should not be excessively bent, crushed or come into contact with any heat source.
- Do not use an extension cord, multiple socket or adapter to operate the product.
- Portable multiple socket outlets or portable power supplies may overheat and cause a fire. Therefore, do not place multiple socket outlets or portable power supplies behind or near the product.
- Do not plug the product into a loose or damaged socket. Such connections may overheat and cause a fire.
- The plug must be in an easily accessible place. If this is not possible, there must be a device (fuse, key, switch, etc.) on the electrical installation to which the product is connected that complies with electrical regulations and separates all poles from the network.
- Do not touch the plug with wet hands.
- When removing the plug from the socket, pull it by the plug, not by the cable.

Transport Security

- Before moving the product, unplug it from the socket.
- The product is heavy, do not carry it alone. If the product falls on you, it may cause injuries. Do not hit or drop the product while carrying it.
- When carrying the product, always close its doors and do not hold it by the doors.
- Be careful not to damage the cooling system and pipes during transportation of the product.

Installation Security

- To make the product ready for use, make sure that the electrical installation and water installation are suitable by looking at the information in the user manual. If the installation is not suitable, call a licensed electrician and plumber and have the necessary arrangements made. Otherwise, electric shock, fire, problems with the product or injury may occur.
- This product is designed for use at altitudes up to 2000 meters above sea level.
- Check if there is any damage on the product before installation. If the product is damaged, do not install it.!
- Be sure to use personal protective equipment (gloves, etc.) when performing product installation, maintenance and repair. Risk of injury!
- Place the product on a clean, flat and hard surface and balance it with the help of adjustable feet (by turning the front feet to the right or left). Otherwise, the refrigerator may tip over and cause injury.
- The place where the product will be installed must be dry and ventilated. There should be no carpets, rugs or similar covers under the product. There may be a risk of fire due to insufficient ventilation!
- Do not block or cover the ventilation holes. Otherwise, energy consumption will increase and damage to your product may occur.
- When placing the product, make sure that the power cord is not damaged or pinched.
- The product should not be connected to power supply systems such as solar energy power sources. Otherwise, your product may be damaged due to sudden voltage changes!
- The more refrigerant a refrigerator contains, the larger the space it is installed in must be. In very small spaces, a flammable gas-air mixture may form if there is a gas leak in the cooling system. The volume of space required for every 8 grams of refrigerant is at least 1 m³. The amount of refrigerant in your product is stated on the Type Label.
- The location where the product is installed should not be exposed to direct sunlight and should not be near a heat source such as a stove, radiator, etc. If the installation of the product near a heat source cannot be avoided, a suitable insulation board should be used or the minimum distance to the heat source should be as follows:
 - At least 30 cm away from heat sources such as stoves, ovens, heating units and stoves,
 - At least 5 cm away from electric ovens.
- Your product is a protection class I device.
- Connect the product to a grounded socket that complies with the Voltage, Current and Frequency values specified on the product type label. The socket must have a fuse of 10A – 16A. Our company will not be responsible for any damage that may occur if the product is used without grounding and electrical connection in accordance with local and national regulations.
- The product must not be plugged into a power outlet during installation. Otherwise, there is a risk of electric shock and injury!
- Do not plug the product into sockets that are loose, disconnected, broken, dirty, oily or at risk of contact with water. Such connections may cause overheating and fire.
- Place the product power cable and hoses (if any) in a way that does not pose a tripping hazard.
- Moisture or liquid penetration into live parts or the power cord may cause a short circuit. Therefore, do not use the appliance in damp or water-splashed areas (e.g. garage, laundry room).
- Never connect your refrigerator to electricity saving devices. Such systems are harmful to the product.
- There is a risk of contact with electrical parts when the electronic card cover or the compressor rear cover (if present on the product) is removed. Do not remove the product's card cover or the compressor rear cover (if present on the product). There is a risk of electric shock!

Usage Safety

- Never use chemical solvents on the product. These substances carry the risk of explosion.
 - In case of a fault in the product, unplug the product and do not operate it until it is repaired . There is a risk of electric shock!
 - Do not place flame sources (e.g. candles, cigarettes) on or near the product.
 - Do not climb onto the product. Risk of falling and injury!
 - Do not damage the cooling system pipes using cutting or piercing tools. If the gas pipes, pipe extensions or surface coatings are punctured, the refrigerant that will spray out will cause skin irritation and eye injuries.
 - Do not place or use electrical appliances inside the refrigerator/freezer unless recommended by the manufacturer.
 - Be careful not to get your hands or any part of your body caught in the moving parts inside the product. Be careful not to get your fingers caught between the door and the cabinet. Be careful when opening and closing the door if there are children around.
 - Never put ice cream, ice cubes or frozen foods in your mouth right after taking them out of the freezer. There is a risk of freezer burn!
 - Do not touch the inside walls of the freezer, metal parts or products stored in the freezer with wet hands. There is a risk of freezer burn!
 - Do not place cans and bottles containing carbonated drinks or liquids that can freeze in the freezer compartment. The cans or bottles may explode. There is a risk of injury and material damage!
 - Do not use or place temperature-sensitive substances such as flammable sprays, flammable objects, dry ice or other chemicals near the refrigerator. There is a risk of burning and explosion!
 - Do not store explosive materials, such as aerosol cans containing flammable materials, inside your product.
 - Do not place containers containing liquid on the product with the top open. Splashing water on an electrical part may cause electric shock or fire hazard.
 - This product is not suitable for the storage and cooling of medicines, blood plasma, laboratory preparations or similar substances and products subject to the Medical Product Directive.
 - If the product is used for purposes other than its intended purpose, it may cause damage or deterioration of the products stored inside.
 - If your refrigerator has Blue light, do not look at this light with optical instruments. Do not look directly at the UV LED lamp for a long time. Ultraviolet rays may cause eye fatigue.
 - Do not fill the product beyond its capacity. Injuries or damage may occur as a result of the contents of the refrigerator falling out when the door is opened. Similar problems may also occur when any object is placed on the product.
 - Be sure to clear away any ice or water that may have fallen onto the floor to avoid injury.
 - Only move the shelves/bottle shelves on your refrigerator door when the shelves are empty. There is a risk of injury!
 - Do not place anything that might fall/overturn on the product. When opening and closing the door, items may fall and cause injury and/or property damage.
 - Do not hit or apply excessive force to glass surfaces. Glass breakage may result in personal injury and/or property damage.
 - The cooling system in your product contains R600a gas. The type of gas used in the product is specified on the type label. This gas is flammable. Therefore, be careful not to damage the cooling system and pipes during use. In case of damage to the pipes;
1. Do not touch the product or the power cord.
 2. Keep away from potential fire sources that could cause the product to ignite.
 3. Ventilate the environment where the product is located. Do not use a fan.

If the product is damaged and you observe gas escaping, please stay away from the gas. If the gas comes into contact with your skin, it may cause frostbite.

Before throwing away old and unusable products:

1. Pull out the power plug and remove it from the socket.
2. Cut the power cord and remove it from the device along with the plug.
3. To make it difficult for children to get inside the appliance, do not remove the shelves and drawers.
4. Remove the doors.

5. Store the product so that it does not tip over.

6. Do not allow children to play with the worn product.

- Never dispose of the product by throwing it into fire. There is a risk of explosion.
- If there is a lock on the door of the product, the key should be kept in a place out of reach of children.

Food Storage Safety

To avoid food spoilage, please pay attention to the following warnings:

- Keeping the doors open for a long time may cause the temperature inside the product to rise.
- Clean food contact and accessible drain systems regularly.
- Clean water tanks that have not been used for 48 hours and mains-fed water systems that have not been used for more than 5 days.
- Store raw meat and fish products in appropriate compartments in the product so that they do not drip or come into contact with other foods.
- Two-star freezer compartments are used for storing pre-filled foods, making and storing ice and ice cream.
- One, two and three star compartments are not suitable for freezing fresh food.
- If the refrigerator has been left empty for a long time, turn it off, defrost it, clean and dry the product to protect the body of the product.

Maintenance and Cleaning Safety

- Before cleaning or maintaining the refrigerator, unplug it and cut off the power from the fuse.
- If you are going to move the product for cleaning purposes, do not pull by hanging on the door handle. If the handle is pulled too hard, it may cause injury.
- Do not put your hands, feet or metal objects under or behind the refrigerator. It may cause personal injury due to pinching or any sharp edges.
- Do not clean the product by spraying or pouring water onto or into it. There is a risk of electric shock and fire.
- When cleaning the product, do not use sharp and abrasive tools or household cleaning products, detergents, gas, gasoline, thinner, alcohol, polish, etc. Use only cleaning and maintenance products that are not harmful to foodstuffs inside the product.
- Never use steam or steam-assisted cleaning materials to clean or defrost the product. Steam may come into contact with electrically live areas of your refrigerator, causing a short circuit or electric shock.
- Do not use any mechanical tools or other devices to accelerate the defrosting process other than those recommended by the manufacturer.
- Be careful not to let water get into the product's ventilation holes, electronic circuits or lighting. Otherwise, there is a risk of fire or electric shock.
- Use a clean, dry cloth to wipe off any foreign matter or dust on the plug pins. Do not use a wet or damp cloth when cleaning the plug. Otherwise, there is a risk of fire or electric shock.

Disposal of Old Product

Follow the instructions below when disposing of your old product;

- To prevent children from accidentally locking themselves inside the product, if the product has a door lock; disable the lock.
- Coolant splashes can be harmful to the eyes. Do not damage any parts of the cooling system when disposing of the product.
- Compressor oil can be fatal if swallowed or enters the respiratory tract.
- The cooling system in your product contains R600a gas as stated on the type label. This gas is flammable. Never dispose of the product by throwing it into fire. There is a risk of explosion!

Technical Information for Wifi + Bluetooth

Frequency Band:	2.4GHz (Wi-fi or Bluetooth function)
Max. Transmission Power:	< 100mW (Wi-fi or bluetooth function)
Software Information:	Quartz_WiFi. XXX

Environmental Instructions

Additional Information

[Compliance with WEEE Regulation and Disposal of Waste Product](#)

[Packaging Information](#)

Compliance with WEEE Regulation and Disposal of Waste Product

This product does not contain harmful and prohibited substances specified in the "Waste Electrical and Electronic Equipment Control Regulation" published by the Republic of Turkey Ministry of Environment and Urbanization.

DANGER



This product is manufactured with high quality parts and materials that can be recycled and reused. Therefore, do not dispose of the product with household or other waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic devices. Ask your local authorities about these collection points. Help protect the environment and natural resources by recycling used products.

 
Packaging Information

ANNOUNCEMENT




The packaging of the product is made of recyclable materials in accordance with our National Legislation. Do not dispose of packaging waste with household or other waste, throw it at the packaging collection points specified by the local authority.

Your fridge

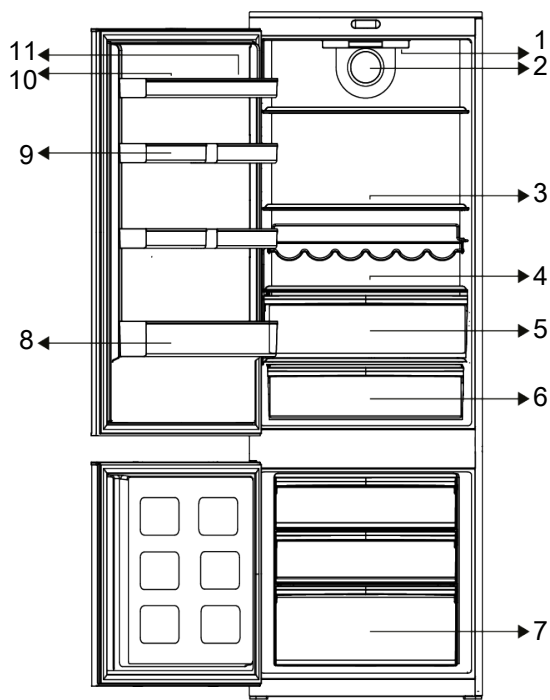

one	Control panel and Display	2	Fan
3	Adjustable Shelves	4	* Bottle rack
5	* Cold Storage Drawer	6	Vegetable Basket
7	Freezer Compartment	8	Bottle Rack
9	Door shelf	10	Ovarian
11th	* Adjustable Door Shelves		

 ***Optional:** The figures in this user manual are schematic and may not be exactly compatible with your product. If the relevant parts are not included in the product you purchased, they are valid for other models.

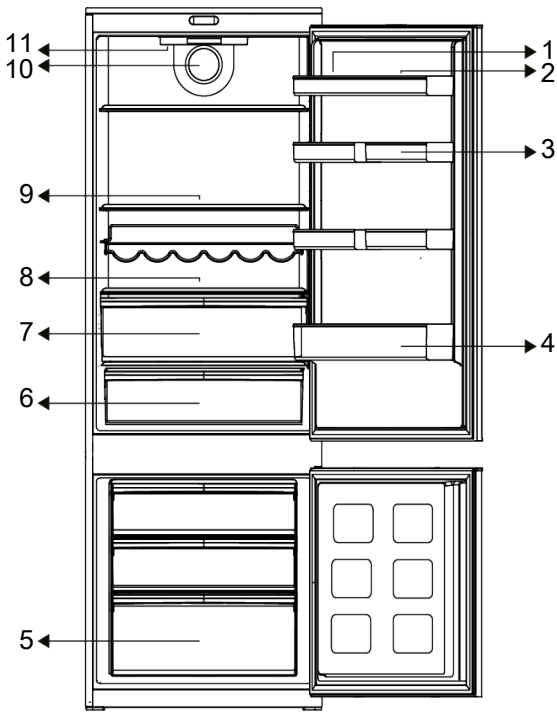

one	* Adjustable Door Shelves	2	Ovarian
3	Door shelf	4	* Bottle Shelf
5	Freezer Compartment	6	Vegetable Basket
7	* Cold Storage Drawer	8	* Bottle rack
9	Adjustable Shelves	10	Fan
11th	Control panel and Display		

***Optional:** The figures in this user manual are schematic and may not be exactly compatible with your product. If the relevant parts are not included in the product you purchased, they are valid for other models.

Setup

WARNING



Read the “Safety Instructions” section first!

Additional Information

[The Right Place for Installation](#)

[Electrical connection](#)

[Hot Surface Warning](#)

The Right Place for Installation

To make the product ready for use, make sure that the electrical installation and water installation are appropriate by looking at the information in the user manual. If not, call a licensed electrician and plumber and have the necessary arrangements made.

WARNING



WARNING:

The manufacturer is not responsible for any damage that may be caused by operations carried out by unauthorized persons.

WARNING



WARNING:

The product must not be plugged into a power outlet during installation. Otherwise, there is a risk of death or serious injury!

WARNING



WARNING:

If the doorway of the room where the product will be placed is too narrow for the product to pass through, remove the door of the room and turn the product sideways to pass through.

- Place the product on a flat surface to avoid shocks.
- Install the product at least 30 cm away from heat sources such as hobs, radiators and stoves, and at least 5 cm away from electric ovens.
- Do not expose the product to direct sunlight and do not keep it in a humid place.
- In order for the product to operate efficiently, there must be adequate air circulation around it. If the product is to be placed in a recessed area in the wall, make sure there is at least a 5 cm gap between it and the ceiling and side walls.
- Check that the rear wall spacer (if supplied) is in place.
- If the part is missing, lost or dropped, position the product so that there is at least 5 cm of space between the rear surface of the product and the room wall. The space behind is important for the efficient operation of the product.

Electrical connection

WARNING



Do not connect using extension cords or multiple sockets.

WARNING



Damaged power cable must be replaced

ANNOUNCEMENT



If two coolers are placed side by side, there should be at least 4 cm of space between them.

- Our company will not be responsible for any damages that may occur if the product is used without grounding and electrical connection in accordance with national regulations.
- The power cord plug must be easily accessible after installation.
- Do not use an extension cord or wireless multiple group socket between your refrigerator and the wall socket.

Hot Surface Warning

The side walls of your product are equipped with refrigerant pipes to improve the cooling system. High temperature fluid may flow through these surfaces and cause hot surfaces on the side walls. This is a normal situation and does not require any service. Be careful when touching these areas.

Preliminary

WARNING



Read the “Safety Instructions” section first!

Additional Information

[What to Do to Save Energy.](#)

[First Use](#)

[Climate Class and Meanings](#)

What to Do to Save Energy

WARNING



Connecting the product to electronic energy saving systems is dangerous as it may damage the product.

- This cooling appliance is not designed to be used as a built-in appliance.
- Do not keep your refrigerator doors open for long periods of time.
- Do not put hot food or drinks in your refrigerator.
- Do not overfill the refrigerator, cooling capacity will decrease when airflow inside is blocked.
- When the doors of your product are not opened, hot and humid air will not enter directly, so your product optimizes itself in conditions that will be sufficient to protect your food. Under these conditions, the compressor, fan, heater, defrost, lighting, display and other components and functions on the product operate in a way that consumes the least amount of energy according to the needs.
- In case of multiple options, glass shelves should be positioned so that they do not block the air outlets on the rear wall, preferably with the air outlets under the glass shelf. This combination can help improve air distribution and energy efficiency.
- It is highly recommended to use the bottom drawer when loading.
- Depending on the features of your product, thawing frozen food in the refrigerator compartment will both save energy and preserve the quality of the food.
- To load the most food into the freezer compartment of your refrigerator, the upper drawers should be removed and loaded onto wire/glass shelves.
- To save energy and preserve food in a better environment, food should be stored using drawers in the refrigerator compartment.
- Direct contact of food packages with the temperature sensor in the freezer compartment should be prevented.

First Use

Before you start using your refrigerator, make sure that the preparations have been made in accordance with the instructions in the “Safety and Environmental Instructions” and “Installation” sections.

- Run the product empty without adding any food for 6 hours and do not open the door unless absolutely necessary.
- It is normal for condensation to occur on the door/body shelves and on the glassware placed inside the product as a result of thermal changes caused by the opening and closing of the product door during use.

ANNOUNCEMENT



You will hear a sound when the compressor starts working. It is normal for the product to make noise even if the compressor is not working because liquid and gas may be trapped in the cooling system.

ANNOUNCEMENT



It is normal for the front edges of the refrigerator to be warm. These areas are designed to get warm to prevent condensation.

ANNOUNCEMENT



In some models, the display panel automatically turns off 1 minute after the door is closed. It will be reactivated when the door is opened or any button is pressed.

Climate Class and Meanings

Please refer to the Climate Class on the rating plate of your device. Depending on the Climate Class, one of the following information applies to your device.

- **SN:** Long-Term Temperate Climate: This cooling device is designed for use in ambient temperatures between 10°C and 32°C.
- **N:** Temperate Climate: This refrigerator is designed for use in ambient temperatures between 16°C and 32°C.
- **ST:** Subtropical Climate: This cooling device is designed for use in ambient temperatures between 16°C and 38°C.
- **T:** Tropical Climate: This cooling device is designed for use in ambient temperatures between 16°C and 43°C.

Operating the Product

ANNOUNCEMENT



Read the “Safety Instructions” section first!

- Do not use any mechanical tools or other devices to accelerate the defrosting process other than those recommended by the manufacturer.
- Never use parts such as doors and drawers on your refrigerator as support or steps. This may cause the product to tip over or damage its parts.
- The product should only be used for food storage.
- If you will be away from home for a long time (e.g. on vacation) and will not use the Icematic or water dispenser, turn off the water valve. Otherwise, water leakage may occur.

Closing the product

 
- If you are not going to use the product for a long time, unplug it from the socket.
- Remove foods to prevent odor,
- Wait for the ice to melt, clean the interior and let it dry, leave the doors open to prevent damage to the interior body plastics.

Using Your Product

Additional Information

- [Product Control Panel](#)
- [Food Storage in the Refrigerator Compartment](#)
- [Vegetable Basket](#)
- [Vegetable Technologies](#)
- [Door Open Warning](#)
- [Change of Door Opening Direction](#)
- [Lighting Lamp Replacement](#)
- [Recommendations for the Fresh Food Compartment](#)

Product Control Panel

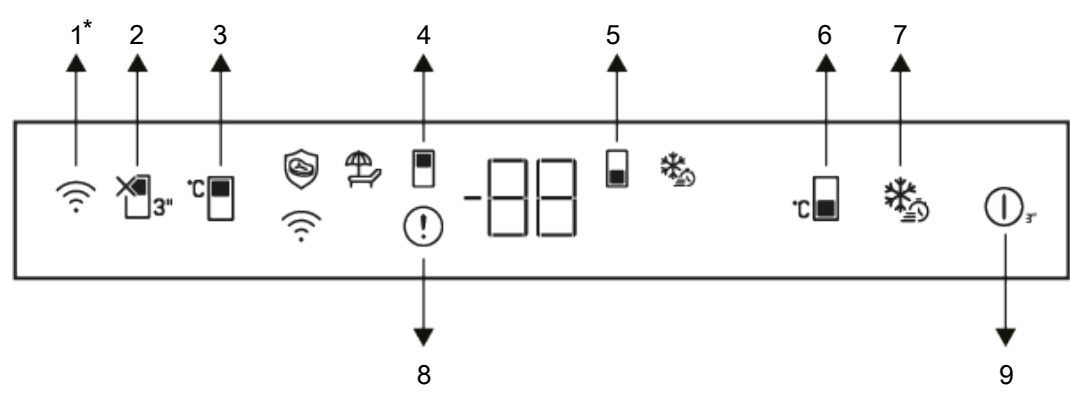

one	* Wireless/Wireless Key	2	Holiday Function Key
3	Cooler Compartment Temperature Setting Button	4	Cooler Compartment Icon
5	Freezer Compartment Icon	6	Freezer Compartment Temperature Setting Key
7	Fast Freeze Button	8	Error Status Indicator
9	Refrigerator On/Off		

ANNOUNCEMENT



Read the “Safety Instructions” section first.

Audio and visual functions on the display panel help you use your refrigerator.

***Optional :** The functions shown are optional, the functions on the display panel of your product may differ in terms of shape and location.

1.Wireless Key *

This button is used to establish a wireless connection to your product via the HomeWhiz mobile application. When the button is pressed for a long time (3 seconds), the wireless connection icon on the screen/indicator flashes slowly (at 0.5 second intervals). The initial introduction of the home network to the product is initiated in this way. After the wireless connection is established with the product, the wireless connection icon lights up continuously. After the initial setup is completed, the connection can be activated/deactivated by pressing this button. The wireless connection icon flashes quickly (at 0.2 second intervals) until the connection is established. When the connection is active, the wireless network icon lights up continuously. If the connection cannot be established for a long time, check your connection settings and refer to the 'Troubleshooting' section in the user manual. HomeWhiz application for wireless connection Installation steps are explained via the application during installation.

You can go to the application by scanning the QR code on the HomeWhiz label on the product.

2.Holiday Function Key

To activate the holiday function, press the button for 3 seconds. The holiday mode is activated and the holiday icon lights up. The refrigerator compartment temperature indicator shows “- -” and the refrigerator compartment does not perform an active cooling process. When this function is activated, it is not appropriate to keep your food in the refrigerator compartment. The other compartments continue to cool according to their set temperatures. To cancel this function, press the button again for 3 seconds.

3. Cooler Compartment Temperature Setting Button

Temperature setting is made for the refrigerator compartment. When the button is pressed, the refrigerator compartment temperature can be set to 8, 7, 6, 5, 4, 3, 2 and 1 °C.

4. Cooler Compartment Icon

When this icon is active, the refrigerator compartment temperature values are shown on the screen.

5. Freezer Compartment Icon

When this icon is active, the freezer compartment temperature values are shown on the screen.

6. Freezer Compartment Temperature Setting Key

Temperature setting is made for the freezer compartment. When the button is pressed, the freezer compartment temperature can be set to -18,-19,-20,-21,-22,- 24 °C.

7. Fast Freeze Button

When the fast freezing button is pressed, the fast freezing icon lights up and the fast freezing function is activated. The freezer compartment temperature is set to -27 °C. When the button is pressed again, the function is cancelled. The fast freezing function automatically cancels itself. If you want to freeze a large amount of fresh food, press the fast freezing button before placing the food in the freezer compartment.

8. Error Status Indicator

This indicator will be active when the refrigerator cannot cool sufficiently or when any sensor error occurs. The letter “E” will appear on the freezer compartment temperature indicator, and numbers such as 1,2,3.. will appear on the refrigerator compartment temperature indicator. These numbers on the indicator inform the service about the error that has occurred. When you load hot foods into the freezer compartment or leave the door open for a long time, the exclamation mark may light up for a while. This is not a failure, this warning will disappear when the foods cool down or when any button is pressed.

9. Refrigerator On/Off

It allows you to turn off the refrigerator when pressed for 3 seconds. The refrigerator can be turned on by pressing the On/Off button again for 3 seconds. When the function is active, all indicators are off.

Food Storage in the Refrigerator Compartment

Food Storage in the Refrigerator Compartment

- If the compartment door is opened and closed frequently and left open for long periods of time, the compartment temperatures will increase significantly, which may reduce the life of the food and cause the food to spoil.
- To avoid any change in odor or taste, foods should be stored in closed containers.
- Do not store too much food in your refrigerator. To achieve better and more uniform cooling, place the food at intervals so that cold air can circulate between them.
- Leave space between the food and the inner wall to allow air flow. If you place the food against the back wall, it may freeze.
- Bring hot cooked food to room temperature before placing it in the refrigerator. Then, you can place the warm food on the lower shelves of your refrigerator. Do not place warm food near easily perishable foods.
- Defrost your frozen food in the fresh food compartment. This way, you can use frozen food to cool the fresh food compartment and save energy.
- Storing unripe tropical fruits (mango, melons, papaya, banana, pineapple) in the refrigerator can speed up the ripening process, which means shorter storage time, so it is not recommended.
- You should store onions, garlic, ginger and other root vegetables in dark, cool room conditions, not in the refrigerator.
- If you notice that food has spoiled in the refrigerator, throw it away and clean the accessories that came into contact with it.
- To quickly cool down foods cooked in large pots, such as soups and stews, you can divide them into shallow containers and place them in the refrigerator.
- Do not place unwrapped foods near eggs.
- Keep fruits and vegetables separate from each other and store each type together (for example, apples with apples, carrots with carrots).
- Remove greens from plastic bags, wrap them in paper towels or tea towels, and place them in the refrigerator. If you wash these foods before storing them in the refrigerator, be sure to dry them.
- You can create a humid environment and allow air flow by storing fruits and vegetables that are prone to drying in perforated or open-mouthed plastic bags.
- Except for extreme environmental conditions, if your product is set to the set values specified in the recommended set value table, food will remain fresh for a longer period of time both in the fresh food compartment and in the freezer compartment.

Store Foods in Different Places According to Their Properties:	
food	Location
Egg	Door shelf
Dairy products (butter, cheese)	Zero degree (breakfast) compartment if available
Fruits, vegetables and greens	Fruit and vegetable compartment, vegetable bin or EverFresh+ compartment (if available)
Fresh meat, poultry, fish, sausage derivatives Cooked foods	Zero degree (breakfast) compartment if available
Ready-to-eat foods, packaged goods, canned goods and pickles	Top shelves or door shelf
Beverages, bottles, condiments and snacks	Door shelf

Storing Food in the Freezer Compartment

- You can cool faster by activating the Fast Freeze function 4-6 hours before freezing.
- Bring hot foods to room temperature before placing them in the freezer compartment.
- Dondurulacak olan gıdalar, her seferinde tüketilecek kadar büyüklükte porsiyonlara bölünerek ayrı paketlerde dondurulmalıdır.
- Yiyecekleri dondurucuya koymadan önce paketleniz önerilir.
- Saklama süresinin geçmesini önlemek için, farklı gıdaların saklama sürelerine göre dondurma tarihini, süreyi ve yiyeceğin adını paketin üstüne yazın.

- Buzunu çözdüğünüz gıdaları hızlıca tüketin. Buzu çözölmüş gıdalar pişirilmediğı sürece tekrar dondurulamaz. Buzu çözüldükten sonra tekrar dondurulmuş taze gıdaları pişirmeden tüketmek güvenli değildir.
- Taze gıda dondururken bu gıdaları halihazırda donmuş gıdalara temas ettirmeyin. Aksi takdirde, donmuş gıdaların buzu çözölür.

Donmuş Halde Satılan Yiyecekleri Saklama

- Yiyeceğı saklamanız gereken süre konusunda her zaman üreticinin talimatlarına uyun. Bu talimatlarda belirtilen süreyi aşmayın!
- Gıdanın kalitesini korumak için, satın alma işlemiyle saklama arasındaki süreyi olabildiğince kısa tutmaya çalışın.
- –18 °C veya daha düşük derecelerde saklanan donmuş gıdaları satın alın.
- Ambalajında buz vb. olan gıdaları almaktan kaçının. Bu, ürünün kısmen çözölüp tekrar donmuş olabileceğı anlamına gelir. Sıcaklık, yiyeceğın kalitesini etkiler.
- Gıda üreticisi tarafından önerilen saklama süresini aşmayın. Buzluktan yalnızca ihtiyacınız kadar gıda çıkarın.
- Ortamda ekstrem koşullar olduğı durumlar haricinde, ürününüz (önerilen set değeri tablosunda) belirtilen set değeri değerlerine ayarlanırsa, hem taze gıda bölmesinde hemde dondurucu bölmede yiyecekler daha uzun süre tazeliğini korur.
- Taze gıda bölmesi daha düşük bir sıcaklığa ayarlanırsa taze meyve ve sebzeler kısmen donabilir.

Derin Dondurucu Bilgileri

IEC 62552 standartlarına göre, her 100 litre dondurucu bölme hacmi için ürünün 25°C oda sıcaklığında 4,5 kg'lık gıda maddesini -18°C veya daha düşük sıcaklıklarda 24 saatte dondurabilmesini gerektirir.

Gıda maddelerinin uzun süre korunması ancak -18°C ve daha düşük sıcaklıkta mümkündür.

Gıda maddelerinin tazeliğini (derin dondurucuda -18°C ve daha düşük sıcaklıklarda) aylarca koruyabilirsiniz.

Dondurulacak gıda maddeleri daha önce dondurulan yiyeceklerin kısmen çözölmelerini önlemek için onlarla temas ettirilmemelidir.

Sebzelerin dondurulmuş halde depolama sürelerini uzatmak için haşlayın ve suyunu süzün. Süzdükten sonra hava geçirmeyen ambalajlara koyun ve dondurucuya yerleştirin. Muz, domates, marul, kereviz, haşlanmış yumurta, patates vb. besinler dondurulmaya uygun değildir. Bu besinlerin dondurulması durumunda sadece besin değeri ve yeme kaliteleri olumsuz etkilenecektir. İnsan sağlığını tehdit eden bir bozulma söz konusu değildir.

Gıdaların Yerleştirilmesi

Dondurucu bölme rafları:Et, balık, dondurma,sebze vb. gibi farklı donmuş gıdalar.

Soğutucu bölme rafları:Tencere, kapalı tabak ve kapalı kaplardaki gıdalar, yumurta (kapalı kapta)

Soğutucu bölme kapı rafları:Küçük ve paketlenmiş gıda ya da içecekler

Sebzelik:Sebzeler ve meyveler

Fresh food section: Delicatessen products (breakfast products, meat products to be consumed in a short time)

Vegetable Basket

The crisper of the refrigerator is designed specifically to keep vegetables fresh without losing their moisture. For this purpose, cold air circulation is intensified throughout the crisper. Store your vegetables and fruits in this compartment. Do not place green leafy vegetables side by side with fruits to store them for a longer period.

Vegetable Technologies

Blue light

Fruits and vegetables stored in vegetable bins illuminated with blue light preserve their vitamin C values by continuing to photosynthesize with the effect of the wavelength of blue light.

VitaminZone

Fruits and vegetables stored in vegetable bins illuminated with VitaminZone technology preserve their vitamin values for longer thanks to blue, green, red lights and dark cycles that simulate the day cycle.

If the refrigerator door is opened during the dark period of VitaminZone technology, your refrigerator will automatically detect this and illuminate your crisper with one of the blue, green or red lights for your easy use. The dark period will continue when you close the refrigerator door, representing the night period in the day cycle.

Door Open Warning

Your refrigerator's door open alarm system may vary depending on the model.

Version 1;

If the product door remains open for a certain period of time (between 60 and 120 seconds), an audible warning will be heard, and depending on the product model, a visual warning (flashing lighting) may also be given. The warning sound will stop when you close the product door or press any button on the product screen, if any.

Version 2;

If the product door remains open for a certain period of time (between 60 and 120 seconds), the door open warning will be given. The door open warning will be given gradually. First, an audible warning will be given. If the product door is still not closed after 4 minutes, a visual warning (flashing lighting) will be activated. If any button is pressed on the product screen, the door open warning will be postponed for a certain period of time (between 60 and 120 seconds). Then, the process will start again. When the product door is closed, the door open warning will be canceled.

Change of Door Opening Direction

The opening direction of your refrigerator's door can be changed depending on where you use it.

Lighting Lamp Replacement

 
 
When the Bulb/LED used for illumination in your refrigerator needs to be replaced

The lamp(s) used in this appliance cannot be used for lighting purposes at home. The purpose of this lamp is to assist the user in placing food in the refrigerator / freezer safely and comfortably.

Recommendations for the Fresh Food Compartment

If there is more than one option, the glass shelves should be placed in a way that they do not block the air outlets on the rear wall, preferably with the air outlets under the glass shelf.

This combination can help improve air distribution and energy efficiency.

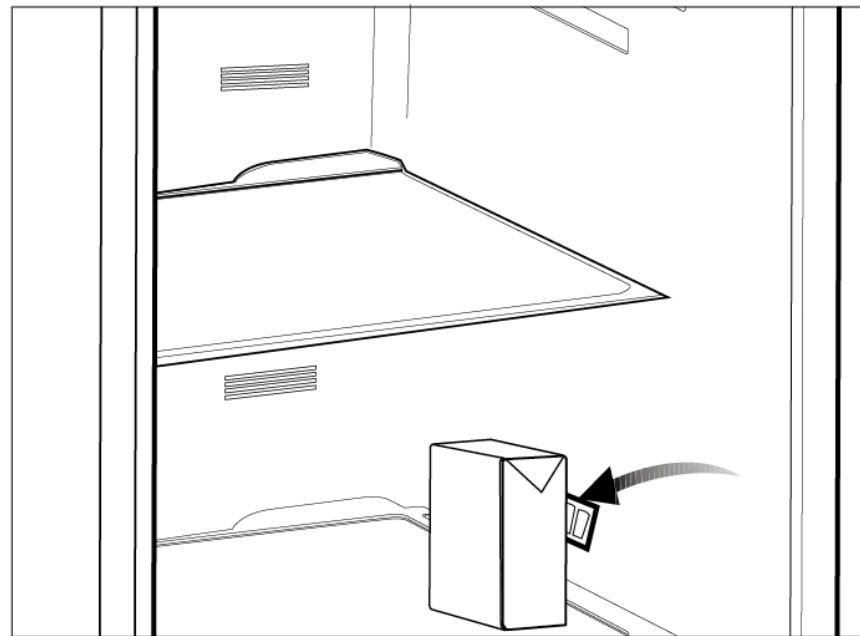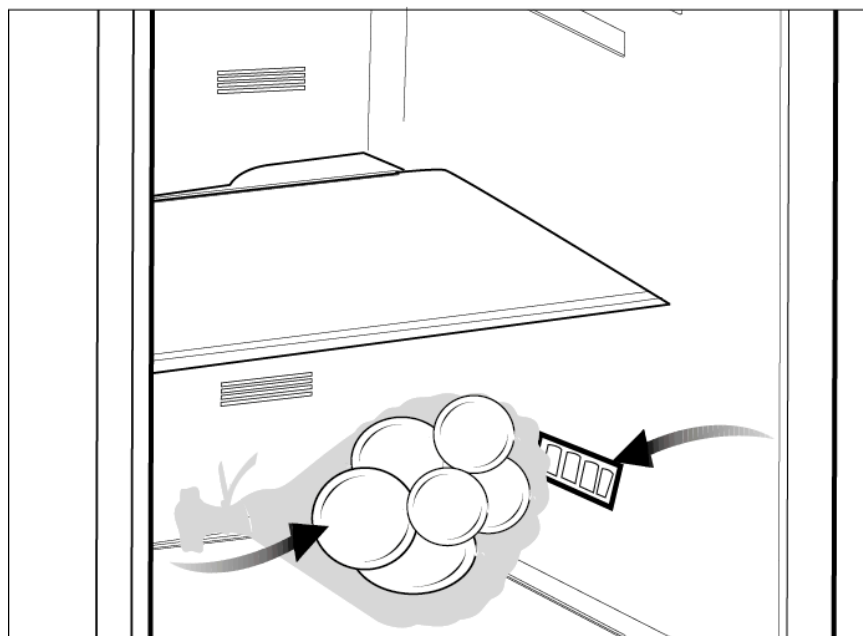

Depending on the length of the bottles placed in the bottle holder section; the bottles may touch the door shelf. In this case, you can change the position of the bottle holder and use it in a way that does not coincide with the door shelf.

Maintenance and Cleaning

ANNOUNCEMENT



WARNING:

Read the “Safety Instructions” section first.

ANNOUNCEMENT



WARNING:

Before cleaning your refrigerator, unplug it or cut off the power from the fuse to which the product is connected.

- Do not use sharp or abrasive tools when cleaning the product. Do not use household cleaning products, soap, detergent, gas, gasoline, thinner, alcohol, polish, etc.
- The ventilation grille on the back of the product should be dusted (without opening the cover) at least once a year. Clean the product with a dry cloth.
- Be careful not to let water enter the lamp housing or other electrical parts.
- Clean the door with a damp cloth. To remove the door and body shelves, remove all the contents. Remove the door shelves by lifting them upwards. After cleaning and drying, replace them by sliding them from top to bottom.
- Never use water or cleaning agents containing chlorine to clean the outer surface of the product and chrome-plated parts. Chlorine causes rust on such metal surfaces.
- To prevent the prints on the plastic part from being removed or deformed, do not use sharp, abrasive tools, soap, household cleaners, detergents, gas, gasoline, polish, etc. Use warm water and a soft cloth for cleaning and dry.
- In Non-No Frost Products; Water droplets and frost up to a finger thickness form on the rear wall of the refrigerator compartment. Do not clean, never apply oil or similar substances.
- Use only a slightly damp microfiber cloth to clean the outer surface of the product. Sponges and other types of cleaning cloths may cause scratches.
- To clean the interior surfaces of the product, wash all removable parts with a mild solution of soap, water and baking soda. Wash and dry completely. Avoid getting water on the lights and control panel.

ANNOUNCEMENT



ATTENTION:

Do not use vinegar, rubbing alcohol or other alcohol-based cleaners on any interior surface.

Stainless Steel Exterior Surfaces

Use a non-abrasive stainless steel cleaner and apply with a soft, lint-free cloth. To polish, gently wipe the surface with a microfiber cloth dampened with water and use a dry polishing chamois. Always follow the grain of the stainless steel.

Preventing Bad Odors

No substances that will cause odor are used in the production of your product. However, odors may occur due to improper food storage and not cleaning the interior surface of the product properly.

- To prevent this problem, clean it with baking soda water every 15 days.
- Store food in closed containers as microorganisms spread from foods stored openly will cause bad odors.
- Never store expired or spoiled foods in your refrigerator.

ANNOUNCEMENT



Tea is one of the best known odorants. Place the tea pulp you brewed in an open container inside the product and remove it after 12 hours at the latest. If you keep the tea pulp in the product for more than 12 hours, it can become the source of the odor as it will collect the organisms that cause the odor.

Protection of Plastic Surfaces

If oil is spilled on plastic surfaces, clean it immediately with warm water as the oil may damage the surface.

Troubleshooting

The refrigerator does not work.

- The plug is not fully seated in the socket. >>> Insert the plug into the socket until it fits fully.
- The fuse of the socket to which the product is connected or the main fuse has blown. >>> Check the fuse.

Condensation on the side wall of the refrigerator compartment (MULTI ZONE, COOL CONTROL and FLEXI ZONE).

- The door was opened and closed too frequently. >>> Be careful not to open and close the door of the product too frequently.
- The environment is very humid. >>> Do not install the product in very humid environments.
- Foods containing liquid may be stored in open containers. >>> Store foods containing liquid in closed containers.
- The product door is left open. >>> Do not keep the product door open for a long time.
- The thermostat is set to a too cold setting. >>> Adjust the thermostat to the appropriate setting.

Compressor is not working.

- In case of sudden power outage or plug-in and plug-out, the compressor protective thermal trips because the gas pressure in the product cooling system has not yet been balanced. The product will start operating after approximately 6 minutes.
- It is in the defrosting cycle. >>> This is normal for a product that performs fully automatic defrosting. The defrosting cycle occurs periodically.
- The product is not plugged into the socket. >>> Make sure the plug is plugged into the socket.
- Temperature settings are not set correctly. >>> Select appropriate temperature setting.
- Power has been cut off. >>> When power returns, the product will continue to operate normally.

The operating noise increases while the refrigerator is operating.

- The operating performance of the product may change depending on the change in ambient temperature. This is normal and not a malfunction.

The refrigerator runs too often or for too long.

- The new product may be larger than the old one. Larger products work longer.
- The room temperature may be high. >>> It is normal for it to work for longer periods in hot environments.
- The product may have been plugged in recently or new food may have been added. >>> When the product is plugged in recently or new food is added, it takes longer for the product to reach the set temperature. This is normal.
- Large amounts of hot food may have been placed in the product recently. >>> Do not place hot food in the product.
- The doors have been opened frequently or have been left open for a long time. >>> The warm air entering the product causes it to operate for a longer period of time. Do not open the doors too frequently.
- The freezer or refrigerator door may be ajar. >>> Check if the doors are completely closed.
- The product is set to a very low temperature. >>> Set the temperature of the product to a higher degree and wait for it to reach this temperature.

- Soğutucu ya da dondurucu kapı contası kirlenmiş, eskimiş, kırılmış ya da tam oturmamış olabilir. >>> Contayı temizleyin ya da değiştirin. Hasarlı / kopuk kapı contası ürünün mevcut sıcaklığı korumak için daha uzun süre çalışmasına neden olur.

Dondurucu sıcaklığı çok düşük ama soğutucu sıcaklığı yeterli.

- Dondurucu bölme sıcaklığı çok düşük bir değere ayarlanmıştır. >>> Dondurucu bölme sıcaklığını daha yüksek bir dereceye ayarlayıp kontrol edin.

Soğutucu sıcaklığı çok düşük ama dondurucu sıcaklığı yeterli.

- Soğutucu bölme sıcaklığı çok düşük bir değere ayarlanmıştır. >>> Soğutucu bölme sıcaklığını daha yüksek bir dereceye ayarlayıp kontrol edin.

Soğutucu bölme çekmecelerinde saklanan yiyecekler donuyor.

- Soğutucu bölme sıcaklığı çok düşük bir değere ayarlanmıştır. >>> Soğutucu bölme sıcaklığını daha yüksek bir değere ayarlayıp kontrol edin.

Soğutucu ya da dondurucudaki sıcaklık çok yüksek.

- Soğutucu bölme sıcaklığı çok yüksek bir değere ayarlanmış olabilir. >>> Soğutucu bölme sıcaklık ayarının dondurucu bölme sıcaklığı üzerinde etkisi vardır. Soğutucu ya da dondurucu bölme sıcaklığını değiştirerek ilgili bölmelerin sıcaklığı yeterli seviyeye gelene kadar bekleyin.
- Kapılar sık açılmış ya da uzun süre açık kalmıştır. >>> Kapıları çok sık açmayın.
- Kapı aralık olabilir. >>> Kapıyı tamamen kapatın.
- Ürünün fişi daha yeni takılmış ya da yeni yiyecek konulmuş olabilir. >>> Bu normaldir. Fiş yeni takıldığında ya da yeni yiyecek konulduğunda ürünün ayarlanan sıcaklığa ulaşması normalden daha uzun zaman alır.
- Ürüne yakın zamanda fazla miktarlarda sıcak yemek konmuş olabilir. >>> Ürüne sıcak yemek koymayın.

Sarsılma ya da gürültü.

- Zemin düz veya dayanıklı değildir. >>> Ürün yavaşça hareket ettirildiğinde sallanıyorsa ayaklarını ayarlayarak ürünü dengeleyin. Ayrıca zeminin ürünü taşıyabilecek kadar dayanıklı olmasına dikkat edin.
- Ürünün üzerine konan eşyalar gürültü yapıyor olabilir. >>> Ürünün üzerinde bulunan eşyaları kaldırın.
- Üründen sıvı akması, püskürmesi vb. sesler geliyor.
- Ürünün çalışma prensipleri gereği sıvı ve gaz akışları gerçekleşmektedir. >>> Bu normaldir ve bir arıza değildir.

Üründen rüzgar sesi geliyor.

- Ürünün soğutma işlemini gerçekleştirebilmesi için fan kullanılmaktadır. Bu normaldir ve bir arıza değildir.

Ürünün iç duvarlarında terleme oluyor.

- Havanın sıcak ve nemli olması buzlanmayı ve yoğunlaşmayı artırır. Bu normaldir ve bir arıza değildir.
- Kapılar sık açılmış ya da uzun süre açık kalmıştır. >>> Kapıları çok sık açmayın, açıksa kapatın.
- Kapı aralık olabilir. >>> Kapıyı tamamen kapatın.

Ürünün dışında ya da kapıların arasında terleme oluşuyor.

- Hava nemli olabilir, nemli havalarda bu gayet normaldir. >>> Nem azaldığında yoğunlaşma kaybolur.

Ürünün içi kötü kokuyor.

- Düzenli temizlik yapılmamıştır. >>> Ürünün içini sünger, ılık su veya karbonatlı suyla düzenli olarak temizleyin.
- Some containers or packaging materials may cause odor. >>> Use containers or packaging materials that do not cause odor.
- Foods are placed in open containers. >>> Store food in closed containers. Microorganisms spread from foods stored with their lids open may cause bad odors.
- Remove expired and spoiled foods from the product.

The door won't close.

- Food packages may be blocking the door from closing. >>> Move the packages that are blocking the doors.
- The product may not be standing completely upright on the floor. >>> Balance the product by adjusting its feet.
- The ground is not flat or solid. >>> Make sure the ground is flat and solid enough to support the product.

The vegetable bins are jammed.

- Food may be touching the top of the drawer. >>> Organize food in the drawer.

There is heat on the surface of the product.

- While your product is operating, high temperatures may be observed between the two doors, on the side panels and in the rear grill area. This is normal and does not require any service.

The fan continues to run when the door is opened.

- The fan may continue to run when the freezer door is opened.