



Description / Tanım : Rectangular Flat Shower Tray / Dikdörtgen Flat Duş Teknesi

Size / Ebat (cm)	180x90	170x90	160x90	150x90	140x90	120x90	100x90	90x90
Height / Yükseklik (mm)	40	40	40	40	40	40	40	40
Depth / Derinlik (mm)	18	18	18	18	18	18	18	18
Weigth / Ağırlık (kg)	26	25,4	23,2	21,7	20,2	17,3	14,3	12,8
Front Panel Weight / Ön Panel Ağırlığı (kg)	-	-	-	-	-	-	-	-
Side Panel Weight / Yan Panel Ağırlığı (kg)	-	-	-	-	-	-	-	-

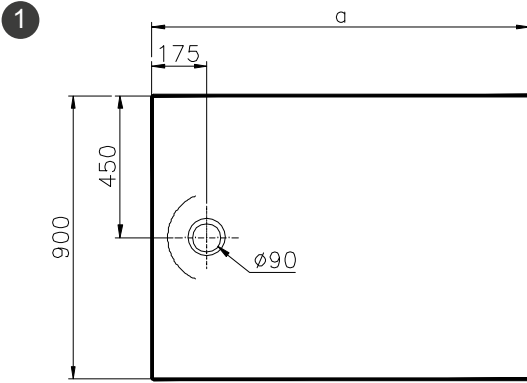


Plan


	180x90	170x90	160x90	150x90	140x90	120x90	100x90	90x90
a	1800	1700	1600	1500	1400	1200	1000	900

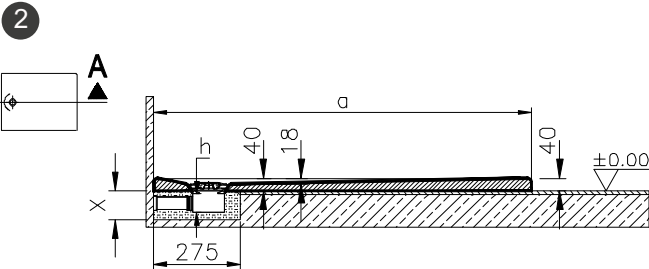


Flat
Flat

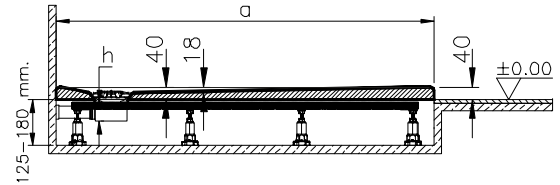

Flat-With Feet
Flat-Ayıklı

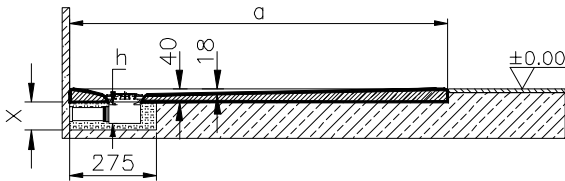

Built-in
Sıfır Zemin - Gömme

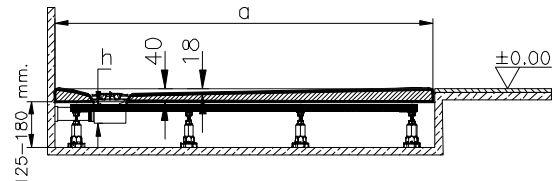

Built-in-With Feet
Sıfır Zemin - Gömme Ayıklı

Section
Kesit

Points to notice:

- The floor tiles should be even and the walls should be straight.
- Flat shower trays can be used with legs or as built-in.
- For built-in installations, a low floor application of 15 cm is required for the installation for the siphon and the depth of the shower tray.
- Because of this products' technical features give attention to the installation of finished floors.
- User Manual are delivered with the product.
- "X" The height needed for installation without leg set depends on the Syphon used.
- "X" is minimum 90 mm if Vitra Showertray Syphon is used.

Dikkat Edilecek Noktalar:

- Yer karolarının terazili ve düz, yan duvarların ise gönyeli olması gerekmektedir.
- Flat Duş Tekneleri ayaklı veya gömme olarak kullanılabilir.
- Gömme montaj uygulamasında sifon ve duş teknesi derinliği için 15 cm'lik düşük döşemeye ihtiyaç vardır.
- Teknik özelliğinden dolayı bitmiş zemin montaj uygulamalarında montaj adımlarına dikkat edilmesi gerekmektedir.
- Garanti Belgesi, Kullanım Kılavuzu ürün ile birlikte verilen poşet içerisinde.
- Ayaksız montaj uygulamasında gerekli yükseklik "X" kullanılacak sifona göre değişmektedir.
- Vitra duş teknesi sifonu kullanılacak ise "X" minimum 90 mm olmalıdır.



